



Pressure Switches and Transducers

A blurred background image showing various industrial components related to pressure measurement, including a close-up of a pressure switch and some clear plastic tubes.

Mechanical Pressure Switches

Electronic Pressure Switches

Pressure Transmitters

Sensor Technology

Welcome to SUCO

What you'll see on the following pages:

SUCO

- SUCO – A leading specialist in pressure monitoring
- SUCO – A success story
- SUCO – Prepared for the future
- General technical explanations

Page 2
Page 4
Page 6
Page 8

MECHANICAL PRESSURE SWITCHES

- Overview of mechanical pressure switches
- Special technical explanations
- Selection Matrix – Choose your mechanical pressure switch
- Product descriptions and order numbers

from Page 10
Page 12
Page 16
Page 18
from Page 22

ELECTRONIC PRESSURE SWITCHES

- Overview of electronic pressure switches
- Special technical explanations
- Selection Matrix – Choose your electronic pressure switch
- Product descriptions and order numbers

from Page 96
Page 98
Page 100
Page 105
from Page 106

PRESSURE TRANSMITTERS

- Overview of pressure transmitters
- Special technical explanations
- Selection Matrix – Choose your pressure transmitter
- Product descriptions and order numbers

from Page 134
Page 136
Page 138
Page 143
from Page 144

esi SENSOR TECHNOLOGY

- ESI - A sensor specialist
- Brief overview of product lines
- Selection Matrix – Choose your pressure sensor

from Page 168
Page 170
Page 171
Page 174

- SUCO worldwide – Our international sales network
- Order correctly – Explanation of SUCO order numbers
- Questionnaires for the selection of pressure switches and transmitters

Page 178
Page 180
Page 181

SUCO Robert Scheuffele GmbH & Co. KG

A pressure monitoring specialist setting standards on the global stage

SUCO Robert Scheuffele GmbH & Co. KG was founded in 1938 and has established itself across the globe under the trade name SUCO. The two main product groups, pressure monitoring (mechanical pressure switches, vacuum switches, electronic pressure switches and pressure transmitters) and transmission technology (centrifugal clutches and brakes, electromagnetic clutches and brakes), as well as descent devices with centrifugal technology, are developed, designed and manufactured at the Bietigheim-Bissingen site, approximately 20 km north of Stuttgart in Germany.



Peter Stabel, Director



Marcell Kempf, Director

Highest quality in all areas

The development and continual expansion of the company premises are indications of a thriving company.

Work on global presence has been rigorous, and today SUCO is actively represented by distribution companies in France (SUCO VSE France – a 50/50 joint venture with VSE Volumentechnik GmbH) and in the USA (SUCO Technologies Inc.), by associate company ESI Technology Ltd in Wrexham, North Wales, and by more than 50 mostly exclusive sales partners in over 60 countries.

Certified according to DIN EN ISO 9001:2015, SUCO has retained its consistently high quality standards for many years, something substantiated by numerous audits by reputable companies from a broad diversity of industry sectors.

This worldwide acknowledged product quality is guaranteed with CNC-controlled machining centres, automated assembly machines, sophisticated test systems and the latest in measuring equipment. Outstanding products, high level of customer service and excellent price/performance ratio guarantee SUCO good market positioning within the product sectors mentioned.

A sophisticated level of personnel qualification, a high identification of the employees with the company, process-oriented structures and efficient organisation are guarantees for continued company growth into the future.

Observance of ethical principles and comprehensive environmental awareness are standard at SUCO and guarantee business relationships on the highest level for our customers all over the world.

This catalogue does not only give a clear and structured overview of our capabilities all around our comprehensive range of pressure monitoring products but also offers detailed technical explanations supporting you in many challenges occurring in your specific applications.

Please trust in a company with more than 80 years of experience.

SUCO – A success story

From a mechanical workshop to an industrial company operating on the global stage

1938

Robert Scheuffele starts up a mechanics workshop

1945

Start of the partnership between Robert Scheuffele and Georg Fuhrmann



* 16.10.1909 † 20.02.1966 * 15.01.1912 † 04.02.1982

1946

Start of production of centrifugal clutches and brakes

1953

Move into the new premises in Bietigheim-Bissingen, Keplerstrasse (still headquarter today)

1956

Registration of trade name SUCO with worldwide trademark protection

1960

Start of production of mechanical pressure switches for the automotive industry



A view into production

1938



Administration building,
Bietigheim-Bissingen

1970



Aerial shot of premises,
Bietigheim-Bissingen

1997

First DIN ISO 9001 company certification

1998

Start of market penetration in Asia with set-up of a company pool

Broadening of product expertise to electronic pressure monitoring

Start of the „fully automatic pressure switch adjusting“ development project with the Fraunhofer Institute

1999

Founding of subsidiary SUCO VSE France

2001

Certification to DIN ISO 9001:2000

2002

Penetration of the markets in South America and Eastern Europe

2004

Start of development of fully automatic assembly systems for pressure switch modules

2005

New company name:
SUCO Robert Scheuffele GmbH & Co. KG

Development of the SUCO zero clutch

1969	Start of production of electromagnet clutches and brakes Set-up of a pan-European sales network		1979 Further development of SUCO pressure switches especially for hydraulic and pneumatic applications Strategic alignment to the industry	1984 Development of the hex 27 pressure switch series for broad industrial applications
			1980 Development of the hex 24 pressure switch series for broad industrial applications	1987 Broadening of the product range to include custom pre-wired pressure switches
				1988 Start of sales in the US
				1993 Development of pressure dampers for ABS brake systems in the automotive industry
1999 	2007 	2009 	2018 	
SUCO VSE France Le Mans, France	SUCO Technologies Boca Raton, USA	ESI Technology, Wrexham, UK	Aerial shot of premises, Bietigheim-Bissingen	
2006 Development and production start of descenders with centrifugal technology Enhancement of the laboratory test facility for simulating several million test cycles under different test conditions Development of the world's smallest pressure switch with adjustable switching point to 400 bar (patented)	2007 Founding of subsidiary SUCO Technologies Inc., USA	2009 Acquisition of ESI Technology Ltd. (UK)	2011 Development of the SUCO thermal brake	2013 75-year company anniversary celebrations
	2010 Across-the-board use of enhanced automatic pressure switch adjusters Development of a transmitter series based on SoS technology		2014 Development of the PLUS series with additional intelligent functions	2017 Certification to DIN ISO 9001:2015

Tradition and Innovation

The preservation of proven traditions and continuous efforts
in innovation enable visions to become successful reality



Design and development of new products
using the latest CAD tools.



Products are subjected to comprehensive testing and
measurements to simulate realistic ambient conditions
and loads.



Assembly and test of pressure switches
on semi and fully automated installations.



Fully automated switching point adjustment
with computer-aided documentation of readings.



Ultra-modern production facilities with integrated, fully automated component handling for high efficiency.



Encapsulating system for custom ready-wired pressure switches for strictest requirements of IP protection class.



State of the art measuring and test methods for assembly and alignment of our electronic products.



Product final inspection with ultra-modern computer- aided test systems.

General technical explanations

User information

Our pressure monitoring products may only be installed and started up by authorised specialists. The safety regulations of country-specific authorities must be observed, especially when working with mains voltages and oxygen, and in potentially explosive areas.

Product information

The technical information in this catalogue is based upon fundamental testing during product development and empirical values. The information cannot be used for all application scenarios.

Testing of the suitability of our products for a specific application (such as the checking of material compatibilities) remains the responsibility of the user. It may be the case that suitability can only be verified by appropriate field testing.

Mounting position

For mechanical and electronic pressure switches as well as transmitters there is no limitation due to the mounting position with regard to the accuracy of the pressure measurement.

However, other boundary conditions of the application may require a certain mounting position, e.g. horizontal installation to avoid waterlogging on the electrical connection or vertical installation to prevent debris from accumulating in the bore of the pressure connection.

IP protection class

The IP protection class is a defined protection level code (sealing) of electrical equipment housings in line with IEC 60529 (formerly DIN 40050 – Part 2). Protection of a housing against the following is tested here:

- The penetration of solid extraneous particles, such as dust
- Access of hazardous parts
- Penetration of water

IP protection tests are performed as type tests.

The IP protection type code, made up of two digits, specifies the protection of a housing against the penetration of solid extraneous particles and water.

The numeric code therefore provides conclusions to be drawn on the level of personal safety as well as the functional protection / mid to longterm functional reliability of electrical equipment.

Protection types IP00, IP65, IP67 and IP6K9K

IP00:

No protection against penetration of solid particles or water, no protection against contact.

IP6X:

Protection against penetration of dust (dust proof). Full contact protection.

IPX5:

A jet of water from a nozzle, aimed at equipment (such as a pressure switch) from all directions, must not have any harmful effect.

IPX7:

Protection from water, when equipment (such as a pressure switch) is immersed in water under defined pressure and time conditions. Water must not penetrate into the equipment in harmful quantities.

IP6K9K:

Devices satisfying these requirements must be dust-proof and be able to withstand loads during the use of high-pressure cleaners and steam jets. The standard stipulates a water pressure from 80 to 100 bar at a temperature of 80 °C for testing.

IP6KX:

Dust must not penetrate. Letter K: Specific to the electrical equipment of road vehicles.

IPX9K:

Protection against penetration of water at high pressure / for steam jet cleaning. Water aimed at the housing from every direction at greatly increased pressure may not have any damaging effects.

We are able to offer IP67 / IP6K9K for many of our mechanical and electronic pressure switches (pre-wired or with integrated connector) and for our transmitters.

IP67 / IP6K9K is the recommended protection for mobile hydraulics and any equipment exposed to the outdoor environment.

Cylindrical threads

Cylindrical threads are either sealed on the front by underlaying an appropriate sealing ring (such as a copper sealing ring) or by already having integrated O-rings or gaskets.

If the corresponding thread types do not provide specifications regarding the roughness of the counter sealing surface, we recommend the following values:

$$R_{\text{amax}} \leq 1.6 \quad | \quad R_{\text{max}} \leq 6.3 \quad | \quad R_{\text{mr}}(-0.10) > 5 \% C_{\text{ref}} \quad 5 \% \leq C_{\text{ref}} \leq 10 \%$$

Conical threads (cone-shaped threads)

Conical threads guarantee tolerance compensation of the two threaded parts. The sealing function is realised with thread flanks which deform permanently and enter into a metallic frictional fit. Conical threads are not screwed in down to the screw-in depth, but fixed with the tightening torque required for the leak tightness.

Remember not to exceed the permitted tightening torque of the pressure switch or transmitter presented in the following table (to prevent damaging the threaded pin beforehand, causing it to become untight during operation or to snap off when tightened).

Tightening torques of steel threads

The specifications below are to be understood upper material thresholds for the housing of pressure switches or transmitters. Remember during installation that the type and material of the seal, the condition of mating surfaces (e.g. dry or oily) and the material of the counter-piece all have a bearing on the tightening torque.

Threads M10, G 1/8, R 1/8 and NPT 1/8 are limited to overpressure strengths of up to 600 bar.

Values 30% lower than in the following table must be used for brass housings.

Thread	Tightening torque
NPT 1/8; M 10 x 1 conical	max. 18 Nm
M 10 x 1 cyl.; G 1/8	max. 20 Nm
M 12 x 1.5; 7/16 – 20 UNF	max. 30 Nm
G 1/4; 9/16 – 18 UNF	max. 40 Nm
NPT 1/4; M 14 x 1.5	max. 40 Nm

Gaseous applications

In particular using additional sealant to attain the required leak tightness may be necessary for gas applications.

Plasma cleaning for oxygen applications

When pressure switches/transmitters are used with oxygen, the surfaces must be free of oil and grease residues to prevent spontaneous combustion. Special requirements must also be observed for oxygen applications with regard to the material selection of housings and seals as well as the permitted operating pressure (see also page 17). We would be pleased to advise you if necessary.

For these operating conditions, we offer plasma cleaning of the components in order to achieve the required elimination of oil and grease. The components are packed and sealed in plastic bags. The packaging is marked with safety instructions for use in oxygen applications.

Plasma cleaning LABS-free (PWIS-free)


Our products are always manufactured without the use of substances that interfere with the wetting of the paint throughout the entire manufacturing process. For use in LABS-free applications, we offer plasma cleaning of the components. The components are packed and sealed in plastic bags. The packaging is marked with safety instructions for use in LABS applications.

Vacuum

The values given in the technical details for the vacuum range are specified in millibars (mbar) below atmospheric pressure.

Pressure change rate (~rise / ~fall)

The pressure change rate denotes the pressure over time for the rising/falling pressure. It is specified in bar/s.

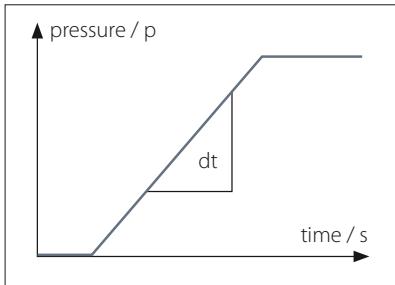

The maximum pressure change rate for mechanical pressure switches is 1,000 bar/s. For SUCO electronic pressure monitoring products the maximum pressure change rate can be up to 5,000 bar/s.

Overpressure protection

The specified overpressure protection in the catalogue is based on a static pressure. The values refer to the hydraulic or pneumatic part of the switch.

It is best practice to use 30 - 50% lower values for dynamic pressure compared to static pressure. These empirical values are based on the knowledge that, in pressure systems, unexpected pressure peaks which are higher than the working pressure are generated as a result of activation of valves, sudden falling or rising load or simply the change of cross-sections in the pipes. With conventional measurement techniques (such as manometers), these pressure peaks are hardly measureable. Faster measurement systems must therefore be used for this data acquisition. Attempts are being made to take this into account by using empirical or corrective factors.

If the pressure conditions are known and the pressure change rates are 100 bar/s, our pressure switches and transmitters can be used up to the permitted overpressure protection as per data sheet / catalogue. Only 50 % of the specified overpressure protection is permitted when operating at the maximum permitted pressure change rate of $\leq 1,000$ bar/s for mechanical pressure switches, and at $\leq 5,000$ bar/s for transmitters.

RoHS-Compliance

= Restriction of Hazardous Substances
(Directives 2011/65/EU and 2020/863/EU)



CE-Mark

= Communauté Européenne



European Parliament and Council directives must be observed when products are launched onto the market. If a directive exists for a product, it must be applied. Only products for which a directive exists may bear the CE mark.

Only products which have been tested according to CE directive or corresponding standards may carry the CE mark.

Mechanical pressure switches with a supply voltage above 50 VAC or 75 VDC are covered by the 2014/35/EU Low Voltage Directive. Variants for potentially explosive areas are covered in addition by the 2014/34/EU ATEX Product Directive.

Our electronic products satisfy EMC (Electromagnetic Compatibility) Directive 2014/30/EC. Mechanical pressure switches do not fall under the EMC Directive.

The Machinery Directive 2006/42/EC is not applicable, because our products are classed as components.

Our product designs are based upon „good engineering practise“ in line with Article 4, Paragraph 3 of the Pressure Equipment Directive (2014/68/EU), meaning neither a declaration of conformity may be issued nor a CE mark affixed.

The current product-specific EU declaration is available in the download area of our homepage:

www.suco.de/en/downloads

Subject to technical changes

M. Mechanical Pressure Switches



M. Overview of mechanical pressure switches



Technical explanations for mechanical pressure switches

from page 14

Selection matrix

Help in selecting a suitable pressure switch

from page 18

M.1 Pressure and vacuum switches with integrated connector NC/NO, hex 24

from page 22

- Max. voltage up to 42 V
- Switching points: 0.1 – 150 bar or vacuum
- IP protection up to IP67 (IP6K9K)
- Available connectors:
Deutsch DT04-2P, AMP Superseal 1.5®, Packard MetriPack 280®,
Deutsch DT04-3P, AMP Junior Timer®, Bayonet DIN 72585 A1–2.1,
M12x1 DIN EN 61076-2-D
- Housing materials: zinc-plated steel (CrVI-free), stainless steel or brass
- Types: 0110, 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0124, 0125

M.2 Pressure switches with integrated connector Changeover contacts, hex 27

from page 32

- Adjustable hysteresis
- Max. voltage up to 250 V
- Switching points: 0.3 – 200 bar
- IP protection up to IP67 (IP6K9K)
- Available connectors:
TE AMP Superseal 1.5®, M12x1 DIN EN 61076-2-101A,
Deutsch DT04-3P, DIN connector EN 175301
- Housing material: zinc-plated steel (CrVI-free), others on request
- Types: 0132, 0133, 0134, 0135, 0136, 0137, 0184, 0185, 0194, 0195

M.3 Pressure switches NC/NO, hex 24

from page 40

- Max. voltage up to 42 V
- Switching points: 0.1 – 200 bar
- IP protection up to IP65 (IP00 terminals)
- Housing materials: zinc-plated steel (CrVI-free), stainless steel or brass
- Types: 0163, 0164, 0166, 0167, 0168, 0169

M.4 Pressure switches Changeover contacts, hex 27




from page 52

- Adjustable hysteresis (apart from 0140 and 0141)
- Max. voltage up to 250 V
- Switching points: 0.3 – 400 bar
- IP protection up to IP65
- Housing materials: zinc-plated steel (CrVI-free) or stainless steel
- Types: 0140, 0141, 0170, 0171, 0180, 0181, 0183, 0186, 0187, 0190, 0191, 0196, 0197

M.5	Ready-wired pressure switches, cabled and encapsulated individually to customer requirements	from page 62
	<ul style="list-style-type: none"> Numerous cable and connector variants IP protection up to IP67 (IP6K9K) Housing materials: zinc-plated steel (CrVI-free), stainless steel or brass Types: 0240, 0241 special feature: switching point adjustable on site even after assembly Technical characteristics for hex 24: see chapter M.3 Technical characteristics for hex 27: see chapter M.4 	
M.6	„PLUS“ – Pressure switches with integrated connector and intelligent supplementary functions, hex 24	from page 66
	<ul style="list-style-type: none"> Max. voltage dependent on custom function up to 42 V Numerous additional safety functions, such as: diagnostic function ('fail-safe') according to NAMUR (resistor) LED for visual check of switching status Oversupply / overload protection (varistor) Types: 0410, 0411, 0412, 0413, 0414, 0415, 0416, 0417, 0418, 0419, 0424, 0425 	
M.7	Pressure switches Changeover contacts, 30 A/F	from page 74
	<ul style="list-style-type: none"> Square or block style Some with adjustable hysteresis Max. voltage up to 250 V Switching point adjustable 0.1 – 400 bar Housing material: aluminium Types: 0159, 0161, 0162, 0175 special feature: 0159 with knurled screw for simple adjustment of the switching point 	
M.8	Pressure switches according to ATEX directive and IECEx scheme	from page 80
	<ul style="list-style-type: none"> Hex 27 for gas protection zones 1 + 2, dust protection zones 21 + 22 and mining M2 30 A/F for gas protection zones 1 + 2 Housing material: zinc-plated steel (CrVI-free) or aluminium Types: 0165, 0340, 0341, 0342, 0343 	
M.9	Vacuum switches NC/NO or Changeover contacts, hex 24 or 30 A/F	from page 86
	<ul style="list-style-type: none"> Max. voltage up to 250 V Oversupply protection up to 35 bar Housing material: brass or aluminium Types: 0150, 0151 	
M.10	Accessoires for mechanical pressure switches	from page 90
	<ul style="list-style-type: none"> Protective caps Socket devices Thread adapters Plugs with ready-to-use cables (for pressure switches with integrated connector) 	



Technical explanations for mechanical pressure switches

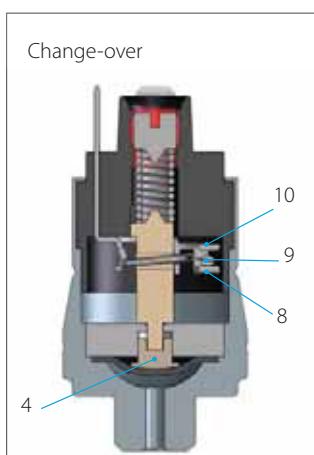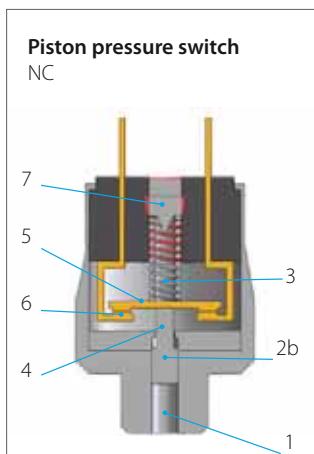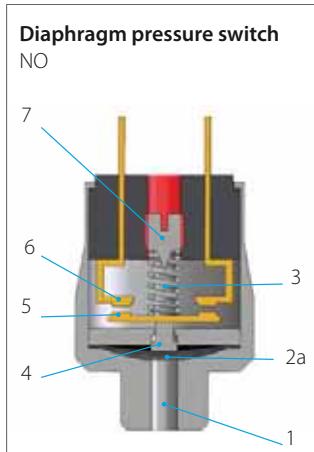

What is a mechanical pressure switch?

Mechanical pressure switches from SUCO monitor the pressure of liquid or gaseous media, and close or open an electrical circuit on reaching a set threshold.

Diaphragm pressure switches

SUCO diaphragm pressure switches are used in pressure ranges from 0.1 bar to 100 bar, meaning overpressure safety of 35, 100, 300 / 400 and 600 / 700 bar, depending on the used diaphragm type.

Piston pressure switches

Pressure ranges from 10 bar to 400 bar can be monitored with SUCO piston pressure switches (dependent on size); overpressure safety of up to 600 / 700 bar can be attained.

Sizes of pressure switches

Mechanical pressure switches from SUCO can be divided into sizes hex 24, hex 27 and 30 A/F. Each particular size has specific hydraulic, pneumatic and electric properties (specified on the relevant catalogue page in the technical details).

How does a pressure switch work?

Function description for **normally open (NO)**: Pressure is applied to the diaphragm (2a) / pistons (2b) through the pressure connector (1).

If the generated pressure force is greater than the force of the pre-tensioned pressure spring (3), the plunger (4) moves towards the counter-contact (6), carrying along the contact disc (5), and closes the circuit.

The switch opens again when the pressure is reduced by the hysteresis value.

Function description for **normally closed (NC)**: Engaging happens in the reverse order.

The adjustment screw (7) enables the switching point to be changed within the adjustment range.

The micro switch of a **change-over contact system** (snap-action) offers both, a NC and a NO contact.

The swivel contact (9) is activated by the plunger (4). The circuit is closed by the NC (8) as long as no pressure is applied.

When the applied pressure exceeds the set switching point, the swivel contact changes over and closes the circuit via the NO (10).

Utilisation category

The utilisation category specifies for example voltages and currents, and the type of load, our pressure switches are designed for (according to DIN EN 60947-5-1).

AC voltage

AC12: Control of ohmic loads and semiconductor loads in input circuits of opto-couplers (such as PLC inputs).

AC14: Control of electromagnetic loads, 72 VA.

DC voltage

DC12: Control of ohmic loads and semiconductor loads in input circuits of opto-couplers (such as PLC inputs).

DC13: Control of electromagnets.

B10d value

According to DIN EN ISO 13849-1, the B10d value specifies the anticipated service life (with a 10% probability of failure). The B10d value is therefore directly dependent on the respective application of the pressure switch. For ohmic loads and currents < 1 A, we specify the B10d value as 1 million cycles of electrical life.

The specification of a MTTF time (mean time to failure) is not possible without knowing the specific conditions in the application. However, the MTTF time can be determined easily from the B10d value:

$$MTTF_d = \frac{B_{10d}}{0,1 n_{op}}$$

n_{op} : number of cycles per year

B_{10d} : number of cycles until 10 % of components have failed.

Minimum current / minimum working voltage

The minimum working current and minimum working voltage depend greatly on operating and ambient conditions. Physically, the build-up of impurity layers on the contact rivets must be countered with mechanical friction and/or electrical erosion.

Classification of electrical switch functions

			Contact form DIN EN- 60947-5-1	Symbol IEC 60617
NO	NO, normally open	SPST single pole, single throw	X	
NC	NC, normally closed	SPST single pole, single throw	Y	
Change-over contacts	CO, change over (snap action)	SPDT single pole, double throw	C	

It has proven useful in many applications to deploy our pressure switches with silver contact rivets ensuring that they are fail safe to 10 mA and 10 V. Variants with gold contacts are available in our catalogue for even lower currents and voltages.

Potential-free – galvanically isolated

Mechanical pressure switches from SUCO are potential-free, i.e. no auxiliary energy is required. Also, there is no electrical contact between the individual, live parts and the housing.

Adjustment range of switching point

The pressure range, within which the switching point of a pressure switch can be set, is called adjustment range. The switching point corresponds to the pressure value at which the electric circuit is opened or closed by the pressure applied.

If no switching point is specified on order, the pressure switches are adjusted by approximately half the adjustment range at factory.

The setting ranges specified for the respective device series apply to increasing pressure. For switching points that are specified for falling pressure and are within the maximum value of the setting range minus the hysteresis, the next higher setting range must be selected (see also section „Hysteresis“).

Switching point tolerances

The switching point tolerances specified by us pertain to room temperature (RT) and condition as new.

The values can change as a result of temperature, ageing and deployment conditions.

It is not possible to specify generally applicable value for switching point tolerances over temperature as the medium has a significant influence on the sealing materials in the pressure switch.

Double the tolerance stated for RT and condition as new can be assumed as a typical magnitude for the tolerance over the entire temperature range.

Based on their design, piston switches may exhibit an increase in switching points due to storage (dry run, stick-slip effect). Following a short start phase, the switching points return to the value set at the factory.

Pressure change rates of > 1bar/s may have an effect on the switching point for diaphragm pressure switches.

The switching point (for rising pressure) and hysteresis increase, whilst the switch-back point (for falling pressure) sinks.

Also, the effect of the maximum (system) pressure on the switchback point (for falling pressure ramp) must be factored in for tolerance-critical applications. The higher the (system) pressure, the lower the resulting switch-back value.




Hysteresis

Rising / falling switching point

The pressure difference between the rising (upper) and falling (lower) switching points (refer to the figure, e.g. NO) is known as hysteresis (switch-back difference).

Hysteresis has no constant value due to the structural layout of a mechanical pressure switch. In absolute values, the hysteresis is also the smallest with the smallest adjustment range. The hysteresis increases with increasing adjustment range.

Hysteresis over rising switching point

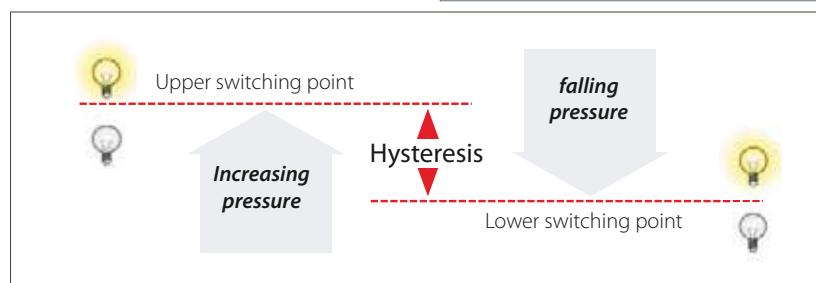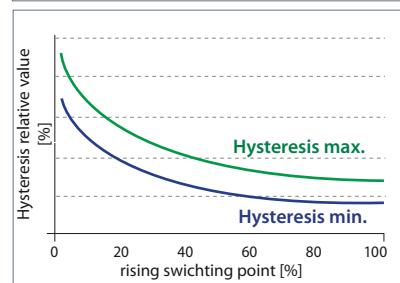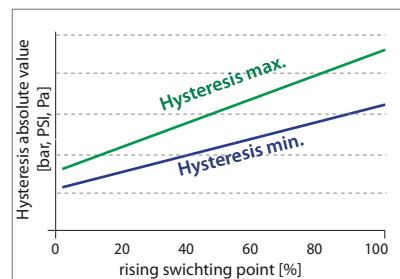

Technical explanations for mechanical pressure switches

Hysteresis can be set at SUCO in range from approx. 10 % (at end of adjustment range) to 30 % or higher (at start of adjustment range), related to the respective switching point for hex 27 and 30 A/F pressure switches with adjustable hysteresis.

Due to their design, pressure switches with an overpressure resistance of 100 bar have smaller hystereses than the series with 300 bar or 400 bar overpressure resistance. Piston pressure switches have a slightly larger hysteresis than diaphragm pressure switches.

The specifications in the catalogue only represent typical average values. Please ask about the possible setting ranges you may require. Our electronic pressure switches are excellently suited to extremely low or high hysteresis. The lowest possible hysteresis is set if nothing is specified in the order.

Switching frequency

The switching frequency provides information on the possible number of cycles in one minute. The value of 200/min specified by us is a guideline value. Higher switching frequencies can be attained depending on switch type and conditions of use.

Sealing materials

The priority in sealing material selection is the chemical resistance. The temperature range only becomes a selection criterion when different sealing materials are suitable for the medium.

NBR (Buna-N)

This is the standard material most commonly used. It is a special SUCO material mix with high level of cold flexibility so that the sealing properties of the pressure switch are also retained at low temperatures.

NBR is denoted by number „1“ in our order number.

EPDM

This material is the solution of choice for applications with brake fluids. It is particularly suitable for applications with (process) water. Approval from the BAM (Federal Institute for Material Testing) is in place for oxygen applications.

The safety regulations from country-specific authorities must be observed for oxygen applications. EPDM may not come into contact with oil because this would entail swelling and softening of the material, and so failure of the pressure switch.

EPDM is denoted by number „2“ in our order number.

EPDM-TW with drinking water approval

This EPDM material is intended for drinking water applications (up to max. 35 bar overpressure safety) according to Elastomer Guideline, WRAS (Water Regulation Advisory Scheme), ACS (Attestation de Conformité Sanitaire) and NSF 61 (National Sanitation Foundation) and for use in medical and pharmaceutical applications.

EPDM-TW may not come into contact with oil because this would entail swelling and softening of the material, and so failure of the pressure switch. Sealing is only available upon request, so please consult us before ordering.

EPDM-TW is denoted by number „5“ in our order number.

FKM / FPM (Viton®)

This is a diaphragm material suitable for high temperature exposure and exhibits special chemical resistance. It has been tested in the hydraulic sector and has been proven to work successfully with critical oils. FKM / FPM is denoted by number „3“ in our order number.

FFKM

This diaphragm material is suitable for temperature exposure up to 120°C and can withstand very aggressive conditions such as chemical species including organic or inorganic acids, diluted alkalis, ketones, esters, alcohols, fuels and hot water. FFKM is denoted by number „6“ in our order number.

TPE (Thermoplastic elastomers)

This sealing material is available only for our electronical products of the Performance Series.

TPE offers similar media compatibility like NBR, e.g. suitable for mineral oil and hydraulic fluids.

Additionally the material can be used with diluted acids and bases and cold water, too.

TPE is denoted by number „7“ in our order number.

ECO (epichlorhydrin)

ECO is only used in our vacuum switches. This material has similar properties to NBR in terms of chemical resistance, and can be used in gas applications as well as oil and fuel applications.

ECO is denoted by number „4“ in our order number.

Silicone

Silicone is suitable for use within a wide temperature range. The SUCO silicone diaphragm is FDA-approved (Food & Drug Administration) for the food sector.

Silicone is a soft material reserved for sensitive applications in the low pressure range (below 10 bar) with maximum overpressure safety to 35 bar. Piston switches are therefore not offered with silicone seals. Silicone is also not suitable for oil applications.

Silicone is denoted by number „8“ in our order number.

H-NBR

This is a special SUCO material mixture optimised for ester-based bio-oils. The multitude of bio-oils on the market means suitability of the material for the respective oil must be determined. This diaphragm material can also be used for a number of mineral and synthetic oils.

H-NBR is denoted by number „9“ in our order number.

Medium compatibility

The specifications on medium compatibility in this catalogue cannot be generalised as they pertain to the sealing materials used in our pressure switches.

Saturated and superheated steam applications

The sealing materials mentioned are not suitable for saturated or superheated steam applications.

Conversion table for pressure units

Unit symbol	Unit name	Pa = N/m ²	bar	Torr	lbf/in ² , PSI
1 Pa = N/m ²	Pascal	1	0.00001	0.0075	0.00014
1 bar	Bar	100 000	1	750.062	14.5
1 Torr = 1 mmHg	Millimetres, mercury column	133.322	0.00133	1	0.01934
1 lbf/in ² = 1 PSI	Pound-force per square inch	6 894	0.06894	51.71	1

Conversion table for temperature units

	K	°C	F
K	1	K - 273.15	9/5 K - 459.67
°C	°C + 273.15	1	9/5 °C + 32
F	5/9 (F + 459.67)	5/9 (F - 32)	1

Water applications

Standard piston switches are not suitable for water applications.

Pressure switches in stainless steel with EPDM seal have a special sealing system and can therefore also be used for water with corrosion protection, water mixtures or emulsions. The use of other fluid mixtures should be clarified with SUCO (e.g. swelling of EPDM sealing could happen by water – oil mixture).

Pressure switches with stainless steel housings with EPDM-TW diaphragm, SUCO type „5“ are designed for the use of drinking water.

Gas applications

Our pressure switches are suitable for liquid and gaseous media. Gaseous media place particular demands on leak-tightness however. The leakage rate is dependent on the respective gaseous medium, the working pressure and the permeability of the seal material used in the pressure switch.

Their lower leakage rates mean diaphragm pressure switches are better suited for gas pressures than piston pressure switches. The latter can also be used however if certain measures are taken (such as venting of the housing).

For gaseous applications below 10 bar (145 PSI) in combination with pressure switches with high IP class, i.e. IP 67 and IP6K9K, in general we recommend to use ventilation. Please consult us; we are able to offer suitable solutions.

Oxygen applications

Our mechanical pressure switches are suitable for use with oxygen. We recommend the use of our EPDM diaphragm. The resistance to internal burnout of the diaphragm has been tested by the BAM (Federal Institute for Material Testing).

Pressure switches with steel housings with zinc-nickel coating are, in conjunction with oxygen, only approved to a maximum working pressure of 10 bar.

Pressure switches with brass housings are, in conjunction with oxygen, only approved to a maximum working pressure of 35 bar.

Pressure switches with stainless steel housings are, in conjunction with oxygen, only approved to a maximum working pressure of 50 bar.

DGUV accident prevention regulations (such as DGUV 500, Section 2.32 and BGI 617) must be observed for first operation.

Please specify when ordering „oil and grease-free, for use with oxygen“.

Underpressure safety of pressure switches

Our pressure switches are underpressure safe down to 300 mbar (relative).

Overpressure safety of vacuum switches

Our vacuum switches are overpressure safe up to 20 or 35 bar depending on type.

cCSAus approval

Almost all of our mechanical pressure switches (sizes hex 24 and hex 27), and vacuum switch 0151, have cCSAus approval. The CSA mark together with „c“ and „us“ combines the control stamps for introduction onto the Canadian and American markets. The cCSAus certificate also includes the test of the relevant UL standard.

Checked by an official institution and verified with regular company visits by CSA inspectors, this approval guarantees the highest levels of quality and operational reliability for our products.

You can download the current cCSAus certificate on the download area of our homepage: <https://www.suco.de/en/downloads>

Product information

The technical information in this catalogue is based upon fundamental testing during product development, as well as upon empirical values. The information cannot be used for all application scenarios.

Testing of the suitability of our products for a specific application (e.g. also the checking of material compatibilities) rests under the responsibility of the user. It may be the case that suitability can only be guaranteed with appropriate field testing.

Please consult us about gas, water and oxygen applications.

Subject to technical changes.

Pressure switches hex 24 with integrated connector

NC or NO, maximum operating voltage up to 42 V




- Large selection of electrical plug-in types for quick attachment and reliable connection
- High protection class (to IP67 or IP6K9K)
- Compact and rugged design in industrial environments like construction and agricultural machinery or commercial vehicles
- Switching point can be set on site with adjusting screw in the connector¹⁾
- High overpressure resistance, compact, small switches, available as normally open or normally closed
- Vacuum switches with integrated connector available on request

¹⁾ Pressure switches can also be supplied preset at factory.
The switching point is embossed onto pressure switches preset at factory.

The all-rounder with the broad selection of options

NC or NO, maximum operating voltage up to 42 V

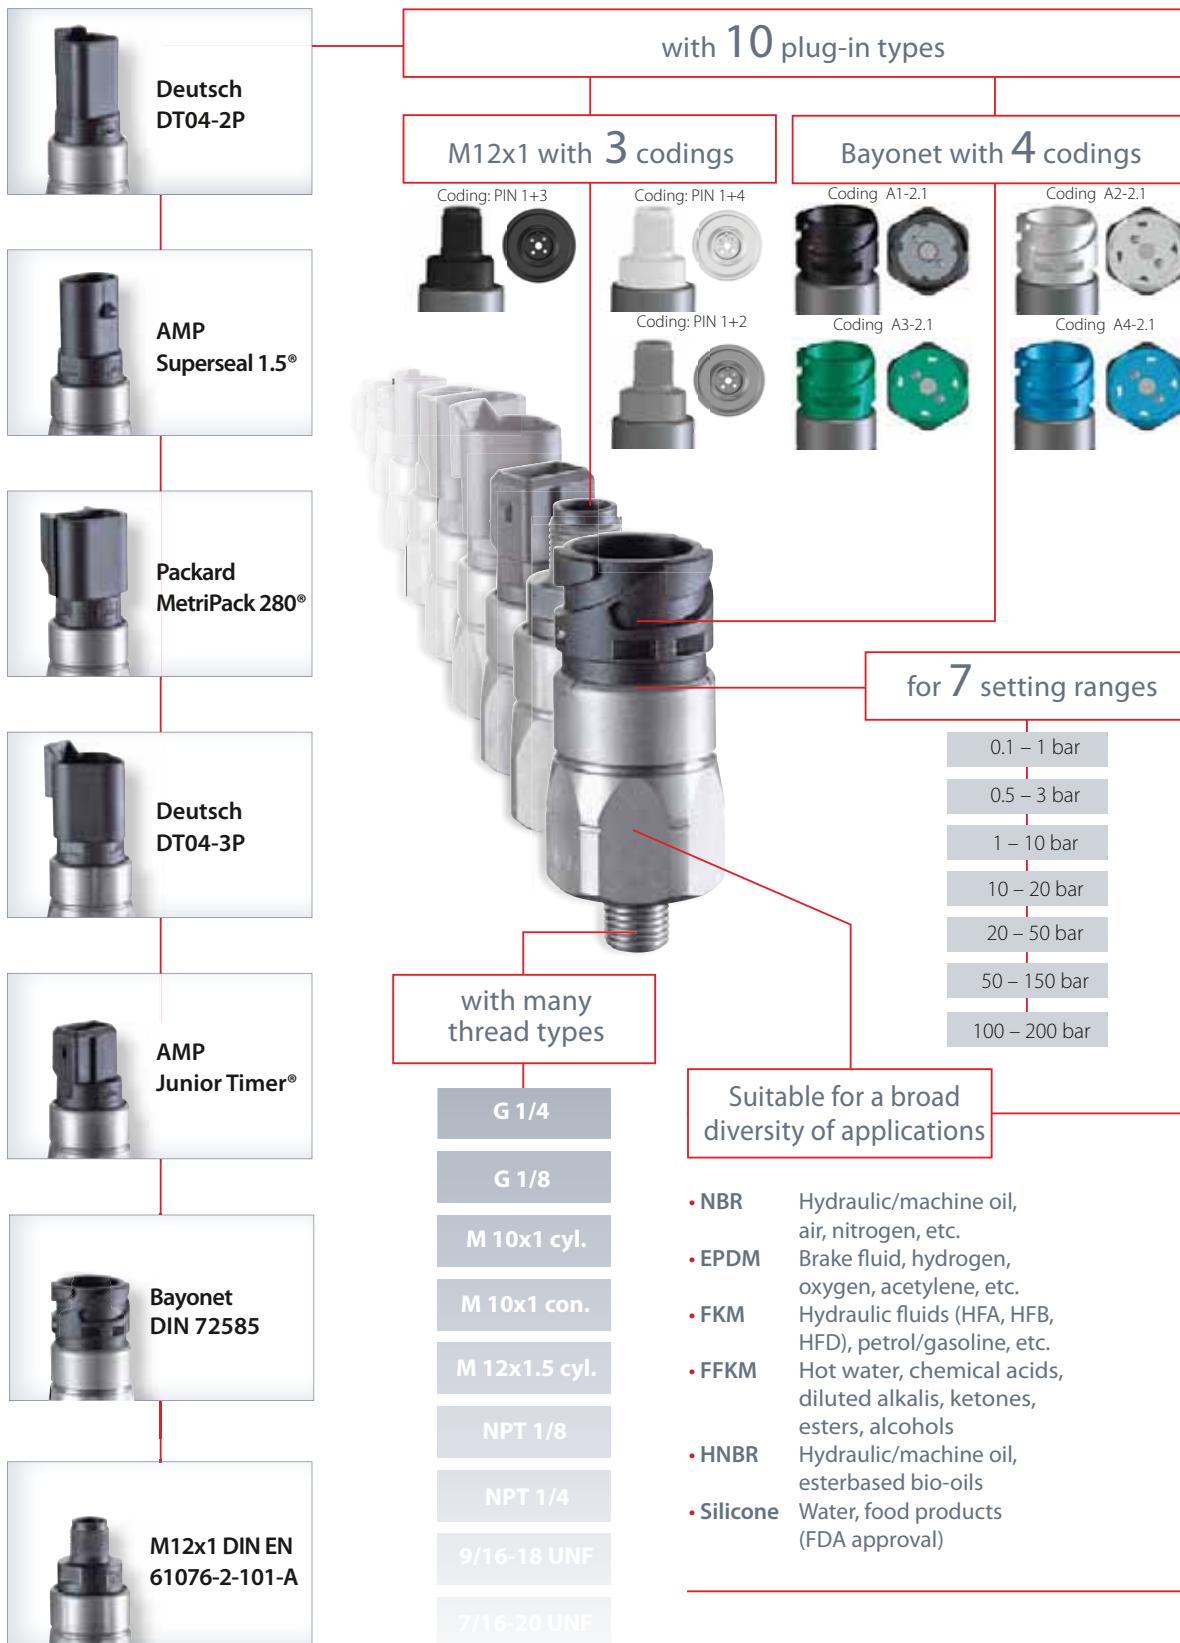

M.1

hex 24 integrated

Pressure switches hex 24 with integrated connector

Technical details

	0110 / 0111 Deutsch DT04-2P IP67, IP6K9K
	0112 / 0113 AMP Superseal 1.5° IP67
	0114 / 0115 Packard MetriPack 280° IP67
	0116 / 0117 Deutsch DT04-3P IP67, IP6K9K
	0118 / 0119 AMP Junior Timer® IP65, IPx4K
	0120 / 0121 Bayonet DIN 72585 IP67, IP6K9K
	0122 / 0123 M12x1 DIN EN 61076-2-101-A IP67
	0124 / 0125 M12x1 DIN EN 60947-5-2 IP67

Rated working voltage:	10 ... 42 VAC/DC	
Rated current range (resistive load, DC12 / AC12):	10 mA ... 4 A	
Switching power DC12 / AC12:	100 W / 100 VA	
Temperature resistance of sealing materials:	NBR (diaphragm pressure switch)	-40 °F ... +212 °F (-40 °C ... +100 °C)
	NBR (piston pressure switch)	-22 °F ... +212 °F (-30 °C ... +100 °C)
	EPDM	-22 °F ... +248 °F (-30 °C ... +120 °C)
	FKM (diaphragm pressure switch)	+23 °F ... +248 °F (-5 °C ... +120 °C)
	FKM (piston pressure switch)	+5 °F ... +248 °F (-15 °C ... +120 °C)
	FFKM	-4 °F ... +248 °F (-20 °C ... +120 °C)
	Silicone	-40 °F ... +248 °F (-40 °C ... +120 °C)
	HNBR	-22 °F ... +248 °F (-30 °C ... +120 °C)
Burst pressure (diaphragm pressure switch):	400 bar	
Burst pressure (piston pressure switch)	700 bar (for threads M10, G 1/8, R 1/8 and NPT 1/8 up to max. 600 bar)	
Switching frequency:	200 / min	
Mechanical life expectancy:	1,000,000 cycles (for diaphragm pressure switches, life expectancy value only applies for switching pressures to max. 50 bar)	
Pressure rise rate:	\leq 1,000 bar/s	
Hysteresis:	Average value 5...30 % depending on type, not adjustable	
Vibration resistance:	10 g; 5...200 Hz sine wave, DIN EN 60068-2-6	
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27	
Protection class:	Up to IP67 / IP6K9K according to manufacturer's specifications for the respective plug-in system only when plugged in, otherwise IP00	
Weight:	approx. 90 g	

Contact assignment for bayonet connectors

Coding A1-2.1	Coding A2-2.1	Coding A3-2.1	Coding A4-2.1

Diaphragm pressure switches with integrated connector

- Setting ranges up to 725 psi (50 bar) (higher settings refer to page 26)
- NC or NO, maximum voltage 42 V
- Zinc-plated steel (Cr VI-free)
- Overpressure safety up to 4,350 psi (300 bar)

Plug-in types for diaphragm pressure switches

Deutsch DT04-2P	0110 - XXX XX - X - XXX	0110 - XXX XX - X - XXX
AMP Superseal 1.5°	0112 - XXX XX - X - XXX	0112 - XXX XX - X - XXX
Packard MetriPack 280°	0114 - XXX XX - X - XXX	0114 - XXX XX - X - XXX
Deutsch DT04-3P (A+B)	0116 - XXX XX - X - XXX	0116 - XXX XX - X - XXX
AMP Junior Timer®	0118 - XXX XX - X - XXX	0118 - XXX XX - X - XXX
M12x1 DIN EN 61076-2-101-A (PIN 1+3)	0122 - XXX XX - X - XXX	0122 - XXX XX - X - XXX
M12x1 DIN EN 60947-5-2 (PIN 1+2 / PIN 1+4)	0124 - XXX XX - X - XXX	0124 - XXX XX - X - XXX

Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → ::

Diaphragm pressure switches with integrated connector

1.45 - 14.5 ± 2.90 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	XXXX - 403 01 - X - 009	XXXX - 404 01 - X - 013
	M 12x1.5 cyl.	XXXX - 423 02 - X - 010	XXXX - 404 02 - X - 013
	1/4" BSPP	XXXX - 403 03 - X - 011	XXXX - 404 03 - X - 015
	1/8" BSPP	XXXX - 403 28 - X - 603	XXXX - 404 28 - X - 604
	1/4" NPT	XXXX - 403 09 - X - 345	XXXX - 404 09 - X - 346
	1/8" NPT	XXXX - 403 04 - X - 012	XXXX - 404 04 - X - 016
	7/16 - 20 UNF	XXXX - 403 20 - X - 305	XXXX - 404 20 - X - 307
	9/16 - 18 UNF	XXXX - 403 21 - X - 306	XXXX - 404 21 - X - 308
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	XXXX - 423 01 - X - 070	XXXX - 424 01 - X - 070
	M 12x1.5 cyl.	XXXX - 423 02 - X - 070	XXXX - 424 02 - X - 070
	1/4" BSPP	XXXX - 423 03 - X - 070	XXXX - 424 03 - X - 070
	1/8" BSPP	XXXX - 423 28 - X - 070	XXXX - 424 28 - X - 070
	1/4" NPT	XXXX - 423 09 - X - 070	XXXX - 424 09 - X - 070
	1/8" NPT	XXXX - 423 04 - X - 070	XXXX - 424 04 - X - 070
	9/16 - 18 UNF	XXXX - 423 20 - X - 070	XXXX - 424 20 - X - 070
	9/16 - 18 UNF	XXXX - 423 21 - X - 070	XXXX - 424 21 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	XXXX - 407 01 - X - 025	XXXX - 408 01 - X - 029
	M 12x1.5 cyl.	XXXX - 407 02 - X - 026	XXXX - 408 02 - X - 030
	1/4" BSPP	XXXX - 407 03 - X - 027	XXXX - 408 03 - X - 031
	1/8" BSPP	XXXX - 407 28 - X - 607	XXXX - 408 28 - X - 608
	1/4" NPT	XXXX - 407 09 - X - 349	XXXX - 408 09 - X - 350
	1/8" NPT	XXXX - 407 04 - X - 028	XXXX - 408 04 - X - 032
	7/16 - 20 UNF	XXXX - 407 20 - X - 313	XXXX - 408 20 - X - 315
	9/16 - 18 UNF	XXXX - 407 21 - X - 314	XXXX - 408 21 - X - 316

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials

Your order number:

01XX - XXX XX - X - XXX

M.1

hex 24 integrated



M

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.



M.1

hex 24 integrated



0122 Coding: PIN 1+3



0124 Coding: PIN 1+4 (NO)



0124 Coding: PIN 1+2 (NC)



0110/0112/0114/0116/0118/0122/0124

Diaphragm pressure switches with integrated connector

- Setting ranges up to 725 psi (50 bar) (lower settings refer to page 25)
- NC or NO, maximum operating voltage up to 42 V
- Zinc-plated steel (Cr VI-free)
- Overpressure safety up to 4,350 psi (300 bar)¹⁾

Plug-in types for diaphragm pressure switches

Deutsch DT04-2P	0110 - XXX XX - X - XXX	0110 - XXX XX - X - XXX
AMP Superseal 1.5°	0112 - XXX XX - X - XXX	0112 - XXX XX - X - XXX
Packard MetriPack 280°	0114 - XXX XX - X - XXX	0114 - XXX XX - X - XXX
Deutsch DT04-3P (A+B)	0116 - XXX XX - X - XXX	0116 - XXX XX - X - XXX
AMP Junior Timer°	0118 - XXX XX - X - XXX	0118 - XXX XX - X - XXX
M12x1 DIN EN 61076-2-101-A (PIN 1+3)	0122 - XXX XX - X - XXX	0122 - XXX XX - X - XXX
M12x1 DIN EN 60947-5-2 (PIN 1+2 / PIN 1+4)	0124 - XXX XX - X - XXX	0124 - XXX XX - X - XXX

Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → ::
---	----------------	-------------------------	-------------------------

Diaphragm pressure switches with integrated connector

145 - 290 ± 14.50 psi (10 - 20 ± 1.0 bar)	M 10x1 taper	XXXX - 411 01 - X - 041	XXXX - 412 01 - X - 045
	M 12x1.5 cyl.	XXXX - 411 02 - X - 042	XXXX - 412 02 - X - 046
	1/4" BSPP	XXXX - 411 03 - X - 043	XXXX - 412 03 - X - 047
	1/8" BSPP	XXXX - 411 28 - X - 611	XXXX - 412 28 - X - 612
	1/4" NPT	XXXX - 411 09 - X - 353	XXXX - 412 09 - X - 354
	1/8" NPT	XXXX - 411 04 - X - 044	XXXX - 412 04 - X - 048
	7/16-20 UNF	XXXX - 411 20 - X - 321	XXXX - 412 20 - X - 323
	9/16-18 UNF	XXXX - 411 21 - X - 322	XXXX - 412 21 - X - 324

290 - 725 ± 29.00 psi (20 - 50 ± 2.0 bar)	M 10x1 taper	XXXX - 415 01 - X - 057	XXXX - 416 01 - X - 061
	M 12x1.5 cyl.	XXXX - 415 02 - X - 058	XXXX - 416 02 - X - 062
	1/4" BSPP	XXXX - 415 03 - X - 059	XXXX - 416 03 - X - 063
	1/8" BSPP	XXXX - 415 28 - X - 615	XXXX - 416 28 - X - 616
	1/4" NPT	XXXX - 415 09 - X - 357	XXXX - 416 09 - X - 358
	1/8" NPT	XXXX - 415 04 - X - 060	XXXX - 416 04 - X - 064
	7/16-20 UNF	XXXX - 415 20 - X - 329	XXXX - 416 20 - X - 331
	9/16-18 UNF	XXXX - 415 21 - X - 330	XXXX - 416 21 - X - 332

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	FFKM Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials.



Your order number:

01XX - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

Piston pressure switches with integrated connector

- Setting range up to 2,175 psi (150 bar)
- NC or NO, maximum operating voltage up to 42 V
- Zinc-plated steel (Cr VI-free)
- Overpressure safety up to 8,700 psi (600 bar)¹⁾

Plug-in types for piston pressure switches

Deutsch DT04-2P	0111 - XXX XX - X - XXX	0111 - XXX XX - X - XXX
AMP Supurseal 1.5°	0113 - XXX XX - X - XXX	0113 - XXX XX - X - XXX
Packard MetriPack 280°	0115 - XXX XX - X - XXX	0115 - XXX XX - X - XXX
Deutsch DT04-3P (A+B)	0117 - XXX XX - X - XXX	0117 - XXX XX - X - XXX
AMP Junior Timer®	0119 - XXX XX - X - XXX	0119 - XXX XX - X - XXX
M12x1 DIN EN 61076-2-101-A (PIN 1+3)	0123 - XXX XX - X - XXX	0123 - XXX XX - X - XXX
M12x1 DIN EN 60947-5-2 (PIN 1+2 / PIN 1+4)	0125 - XXX XX - X - XXX	0125 - XXX XX - X - XXX

Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → ::

Piston pressure switches with integrated connector

725 - 2,175±72.5 psi (50 - 150±5 bar)	M 10x1 taper	XXXX - 419 01 - X - 009	XXXX - 420 01 - X - 013
	M 12x1.5 cyl.	XXXX - 419 02 - X - 010	XXXX - 420 02 - X - 014
	1/4" BSPP	XXXX - 419 03 - X - 011	XXXX - 420 03 - X - 015
	1/8" BSPP	XXXX - 419 28 - X - 603	XXXX - 420 28 - X - 604
	1/4" NPT	XXXX - 419 09 - X - 311	XXXX - 420 09 - X - 312
	1/8" NPT	XXXX - 419 04 - X - 012	XXXX - 420 04 - X - 016
	7/16-20 UNF	XXXX - 419 20 - X - 305	XXXX - 420 20 - X - 307
	9/16-18 UNF	XXXX - 419 21 - X - 306	XXXX - 420 21 - X - 308

1,450 - 2,900 ±72.5 psi (100 - 200 ± 5 bar)	G 1/4 DIN 3852-2-A	XXXX - 493 60 - X - 011	XXXX - 494-60- X - 015
	M 12x1.5 DIN 3852-1-A	XXXX - 493 68 - X - 010	XXXX - 494-68- X - 014

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials.

M.1

hex 24 integrated



See table
for plug-in
types
page 23



0123 Coding: PIN 1+3



Coding: PIN 1+4 (NO)



Coding: PIN 1+2 (NC)



Your order number: 01XX - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.



M.1

hex 24 integrated

0120

Diaphragm pressure switches with integrated bayonet connector

- NC or NO, maximum operating voltage up to 42 V
- Zinc-plated steel (Cr VI-free)
- Overpressure safety up to 4,350 psi (300 bar)¹⁾



Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → :
---	----------------	------------------------	------------------------

0120 Diaphragm pressure switches with integrated connector

1.45 - 14.5 ±2.90 psi (0.1 - 1 ±0.2 bar)	M 10x1 taper	0120 - X03 01 - X - 009	0120 - X04 01 - X - 013
	M 12x1.5 cyl.	0120 - X03 02 - X - 010	0120 - X04 02 - X - 014
	1/4" BSPP	0120 - X03 03 - X - 011	0120 - X04 03 - X - 015
	1/8" BSPP	0120 - X03 28 - X - 011	0120 - X04 28 - X - 604
	1/4" NPT	0120 - X03 09 - X - 345	0120 - X04 09 - X - 346
	1/8" NPT	0120 - X03 04 - X - 012	0120 - X04 04 - X - 016
	7/16-20 UNF	0120 - X03 20 - X - 305	0120 - X04 20 - X - 307
	9/16-18 UNF	0120 - X03 21 - X - 306	0120 - X04 21 - X - 308
7.25 - 43.5 ±4.35 psi (0.5 - 3 ±0.3 bar)	M 10x1 taper	0120 - X23 01 - X - 070	0120 - X24 01 - X - 070
	M 12x1.5 cyl.	0120 - X23 02 - X - 070	0120 - X24 02 - X - 070
	1/4" BSPP	0120 - X23 03 - X - 070	0120 - X24 03 - X - 070
	1/8" BSPP	0120 - X23 28 - X - 070	0120 - 24 28 - X - 070
	1/4" NPT	0120 - X23 09 - X - 070	0120 - X24 09 - X - 070
	1/8" NPT	0120 - X23 04 - X - 070	0120 - X24 04 - X - 070
	7/16-20 UNF	0120 - X23 20 - X - 070	0120 - X24 20 - X - 070
	9/16-18 UNF	0120 - X23 21 - X - 070	0120 - X24 21 - X - 070
14.5 - 145 ±7.25 psi (1 - 10 ±0.5 bar)	M 10x1 taper	0120 - X07 01 - X - 025	0120 - X08 01 - X - 029
	M 12x1.5 cyl.	0120 - X07 02 - X - 026	0120 - X08 02 - X - 030
	1/4" BSPP	0120 - X07 03 - X - 027	0120 - X08 03 - X - 031
	1/8" BSPP	0120 - X07 28 - X - 607	0120 - X08 28 - X - 608
	1/4" NPT	0120 - X07 09 - X - 349	0120 - X08 09 - X - 350
	1/8" NPT	0120 - X07 04 - X - 028	0120 - X08 04 - X - 032
	7/16-20 UNF	0120 - X07 20 - X - 313	0120 - X08 20 - X - 315
	9/16-18 UNF	0120 - X07 21 - X - 314	0120 - X08 21 - X - 316

Coding

A1-2.1	4XX	4XX
A2-2.1	3XX	3XX
A3-2.1	2XX	2XX
A4-2.1	1XX	1XX

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range an

Your order number:

0120 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

0120/0121

Diaphragm/piston pressure switches with integrated bayonet

- NC or NO, maximum operating voltage up to 42 V
- Zinc-plated steel (Cr VI-free)
- Overpressure safety up to 4,350 psi (300 bar)¹⁾ for diaphragm variant
- Overpressure safety up to 8,700 psi (600 bar)¹⁾ for piston variant

Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → ::
---	----------------	-------------------------	-------------------------

0120 Diaphragm pressure switches with integrated connector

145 - 290 ± 14.50 psi (10 - 20 ± 1.0 bar)	M 10x1 taper	0120 - X11 01 - X - 041	0120 - X12 01 - X - 045
	M 12x1.5 cyl.	0120 - 11 02 - X - 042	0120 - X12 02 - X - 046
	1/4" BSPP	0120 - X11 03 - X - 043	0120 - X12 03 - X - 047
	1/8" BSPP	0120 - 11 28 - X - 611	0120 - 12 28 - X - 612
	1/4" NPT	0120 - X11 09 - X - 353	0120 - X12 09 - X - 354
	1/8" NPT	0120 - X11 04 - X - 044	0120 - X12 04 - X - 048
	7/16-20 UNF	0120 - X11 20 - X - 321	0120 - X12 20 - X - 323
	9/16-18 UNF	0120 - X11 21 - X - 322	0120 - X12 21 - X - 324

290 - 725 ± 29.0 psi (20 - 50 ± 2.0 bar)	M 10x1 taper	0120 - X15 01 - X - 057	0120 - X16 01 - X - 061
	M 12x1.5 cyl.	0120 - X15 02 - X - 058	0120 - X16 02 - X - 062
	1/4" BSPP	0120 - X15 03 - X - 059	0120 - X16 03 - X - 063
	1/8" BSPP	0120 - 15 28 - X - 615	0120 - 16 28 - X - 616
	1/4" NPT	0120 - X15 09 - X - 357	0120 - X16 09 - X - 358
	1/8" NPT	0120 - X15 04 - X - 060	0120 - X16 04 - X - 064
	7/16-20 UNF	0120 - X15 20 - X - 329	0120 - X16 20 - X - 331
	9/16-18 UNF	0120 - X15 21 - X - 330	0120 - X16 21 - X - 332

0121 Piston pressure switches with integrated connector

725 - 2,175 ± 72.5 psi (50 - 150 ± 5.0 bar)	M 10x1 taper	0121 - X19 01 - X - 009	0121 - X20 01 - X - 013
	M 12x1.5 cyl.	0121 - X19 02 - X - 010	0121 - X20 02 - X - 014
	1/4" BSPP	0121 - X19 03 - X - 011	0121 - X20 03 - X - 015
	1/8" BSPP	0121 - X19 28 - X - 603	0121 - X20 28 - X - 604
	1/4" NPT	0121 - X19 09 - X - 311	0121 - X20 09 - X - 312
	1/8" NPT	0121 - X19 04 - X - 012	0121 - X20 04 - X - 016
	7/16-20 UNF	0121 - X19 20 - X - 305	0121 - X20 20 - X - 307
	9/16-18 UNF	0121 - X19 21 - X - 306	0121 - X20 21 - X - 308

1,450 - 2,900 ± 72.5 psi (100 - 200 ± 5 bar)	G 1/4 DIN 3852-2-A	0121 - X 93 60 - X - 011	0121 - X 94 60 - X - 015
	M 12x1.5 DIN 3852-1-A	0121 - X 93 68 - X - 010	0121 - X 94 68 - X - 014

Coding

A1-2.1	4XX	4XX
A2-2.1	3XX	3XX
A3-2.1	2XX	2XX
A4-2.1	1XX	1XX

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials.

Your order number:

012X - XXX XX - X - XXX

M.1

hex 24 integrated



Coding A1-2.1




Coding A2-2.1



Coding A3-2.1



Coding A4-2.1

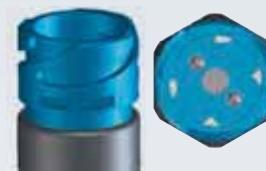

M

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.



Technical details, contact assignment & accessories

for hex 24 pressure switches with integrated connector




Please note:
Mating plugs are not included in the delivery and can be ordered separately.

Mating plug accessories¹⁾

Mating plug type	►	Deutsch DT04-2P (for DT06-2S)	AMP Superseal 1.5®	Packard MetriPack 280®
Including 2 m cable	►			
Cable cross-section	►	2 x 0,5 mm ² Radox cables	2 x 0,5 mm ² Radox cables	2 x 0,5 mm ² Radox cables
Protection class	►	IP65	IP65	IP65
Article number	►	1-1-10-653-118	1-1-12-653-113	1-1-14-653-114

¹⁾ For the pin assignment of the wires please refer to chapter M.10 Accessories (page 91)

Plug-in types for hex 24 diaphragm and piston pressure switches

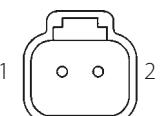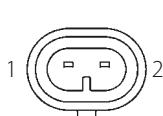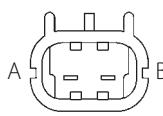Model / Type	►	0110 / 0111	0112 / 0113	0114 / 0115
Connector	►			
Protection class	►	Deutsch DT04-2P	AMP Superseal 1.5®	Packard MetriPack 280®
Overall height	►	IP67, IP6K9K	IP67	IP67
Contact assignment	►	H ≈ 61 mm	H ≈ 61 mm	H ≈ 62 mm
				

Deutsch DT04-3P (for DT04-3P)	AMP Junior Timer®	Bayonet DIN 72585/ISO 15170 A1 - 2.1	M12x1 DIN EN 61076-2-101-LF (A)
2 x 0,5 mm ² PUR cables	2 x 0,5 mm ² Radox cables	2 x 0,5 mm ² Radox cables	4 x 0,34 mm ² PUR cables
IP67	IP65	IP65	IP67
1-1-36-653-160	1-1-18-653-116	1-1-20-653-112	1-1-00-653-162

0116 / 0117	0118 / 0119	0120 / 0121	0122 / 0123	0124 / 0125
Deutsch DT04-3P	AMP Junior Timer®	Bayonet DIN 72585/ISO 15170	M12x1 DIN EN 61076-2-101-A	M12x1 DIN EN 60947-5-2
IP67, IP6K9K	IP65, IPx4K	IP67, IP6K9K	IP67	IP67
H ≈ 63 mm	H ≈ 54 mm	H ≈ 49 mm	H ≈ 51 mm	H ≈ 51 mm
A B	1 2	1 2 Coding: A1-2.1	NO / NC (black) 1: brown 3: blue	NO (light grey) 1: brown NC (dark grey) 2: black 4: white

Pressure switches hex 27 with integrated connector

Changeover switch with silver or gold contacts



- Large selection of electrical plug-in types for quick attachment and reliable connection
- Hysteresis adjustable at factory
- High protection class (to IP67 or IP6K9K)
- Compact and rugged design in industrial environments like construction and agricultural machinery or commercial vehicles
- Switching point can be set on site with adjusting screw¹⁾
- Very high overpressure safety
- Corresponding mating plugs are available as accessories (please refer to page 34)

¹⁾ Pressure switches can also be supplied preset at factory.
The switching point is embossed onto pressure switches preset at factory.

Pressure switches hex 27 with integrated connector

Technical details

M.2
hex 27 integrated



M

Types:	0132-0137	0184 / 0185	0194 / 0195
Rated working voltage:	10 ... 48 VAC/DC	10 ... 250 VAC/DC	5 ... 24 VDC
Rated current: (resistive load, DC12 / AC12)	10 mA ... 4 A	10 mA ... 4 A	3 ... 50 mA
Temperature resistance of sealing materials:	NBR (diaphragm pressure switch, $p_{max} = 5,800 \text{ psi} / 400 \text{ bar}$)	-22 °F ... +212 °F (-40 °C ... +100 °C)	
	NBR (diaphragm pressure switch, $p_{max} = 1,450 \text{ psi} / 100 \text{ bar}$) (piston pressure switch)	-40 °F ... +212 °F (-30 °C ... +100 °C)	
	EPDM	-22°F ... +248°F (-30°C ... +120°C)	
	FKM (diaphragm pressure switch)	+23 °F ... +248 °F (-5 °C ... +120 °C)	
	FKM (piston pressure switch)	+5 °F ... +248 °F (-15 °C ... +120 °C)	
	FFKM	-4 °F ... +248 °F (-20 °C ... +120 °C)	
	Silicone	-40 °F ... +248 °F (-40 °C ... +120 °C)	
	HNBR	-22 °F ... +248 °F (-30 °C ... +120 °C)	
Burst pressure (diaphragm pressure switch, overpressure resistance 1,450 psi)	2,900 psi (200 bar)		
Burst Pressure (diaphragm pressure switch, overpressure resistance 5,800 psi)	10,153 psi (700 bar) for threads M10, G 1/8, R 1/8 and NPT 1/8 up to max. 8,700 psi (600 bar)		
Burst pressure (Piston pressure switch)	14,500 psi (1,000 bar) for threads M10, G 1/8, R 1/8 and NPT 1/8 up to max. 8,700 psi (600 bar)		
Switching frequency:	200 / min		
Mechanical life expectancy:	1,000,000 cycles - for diaphragm pressure switches, life expectancy value only applies for switching pressures to max. 725 psi (50 bar)		
Pressure rise rate:	≤ 1 bar/ms		
Hysteresis: (can only be set at factory) ¹⁾ :	Adjustable average value 10 ... 30 % depending on type		
Vibration resistance:	10 g; 5 ... 200 Hz sine wave; DIN EN 60068-2-6		
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27		
Weight:	approx. 100 g	approx. 130 g	approx. 130 g

Overview of maximum working voltage and current and contact materials

Type:	0132	0133	0134	0135	0136	0137	0184	0185	0194	0195
5 ... 24 VDC									●	●
10 ... 48 VAC/DC	●	●	●	●	●	●				
10 ... 250 VAC/DC							●	●		
3 ... 50 mA									●	●
10 mA ... 4 A	●	●	●	●	●	●	●	●		
Gold contacts	○	○	○	○	○	○			●	●
Silver contacts	●	●	●	●	●	●	●	●		
Adjustable hysteresis (can only be set at factory)	●	●	●	●	●	●	●	●	●	●
Connector type	AMP Superseal 1.5°	M12x1 DIN EN 61076-2-101-A	Deutsch DT04-3P	DIN EN 175301						
Protection class	IP67	IP67	IP67, IP6K9K	IP65						

¹⁾ see notes on hysteresis in the technical explanations (page 15-16)

○ Available as an option

M.2

hex 27 integrated

0132/0133/0134/0135/0136/0137

Diaphragm/piston pressure switches with integrated connector,
maximum operating voltage up to 48 V

- Simple, quick and reliable electrical connection with easy-to-fit connectors
- Quick fitting with socket wrench (spanner)
- Changeover with silver contacts (gold contacts available as option)
- Hysteresis adjustable at factory
- Made of zinc-plated steel (CrVI-free, other housing materials available as option)







Model / type ►

0132 / 0133	0134 / 0135	0136 / 0137
		
TE AMP Superseal 1.5® IP67	M12x1 EN 61076-2-101-A Contact assignment DIN 60947-5-2 IP67	Deutsch DT04-3P® IP67, IP6K9K
H ≈ 73 mm	H ≈ 65 mm	H ≈ 71 mm

Height without thread ►

Contact assignments ►

Circuit diagrams ►

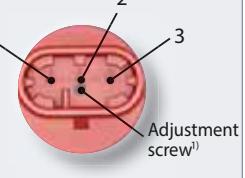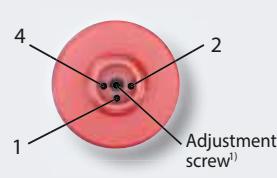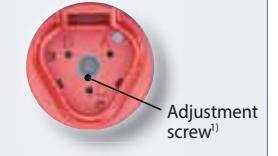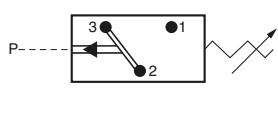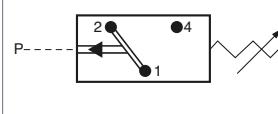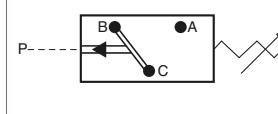¹⁾Blade of screwdriver max. 2 mm

Accessory ►

Not included
in the delivery.

Please order separately.

Cable cross-section /
IP protection ►

Article number ►

Mating plug with 2 m cable ²⁾

TE AMP Superseal 1.5®	M12x1 DIN EN 61076-2-101-LF	Deutsch DT06-3S®
		
3 x 0,5 mm² Radox cable / IP65	4 x 0,34 mm² PUR cable / IP67	3 x 0,5 mm² PUR cable / IP67
1-1-32-653-158	1-1-00-653-162	1-1-36-653-160

²⁾ For the pin assignment of the wires please refer to chapter M.10 Accessories (page 91)

0132/0133/0134/0135/0136/0137

Diaphragm/piston pressure switches with integrated connector,
maximum operating voltage up to 48 V

M.2

hex 27 integrated

sico

P _{max} in psi/bar	Adjustment range in bar	Tolerance at room temperature in bar	Thread	Article number
--------------------------------	----------------------------	---	--------	----------------

0132 / 0134 / 0136 Diaphragm pressure switches

1,450 psi ¹⁾ (100 bar)	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	1/4" BSPP	013X - 457 03 - X - 003
			M 10x1 taper	013X - 457 01 - X - 001
			M12x1.5 cyl.	013X - 457 02 - X - 002
			1/4" NPT	013X - 457 09 - X - 314
			1/8" NPT	013X - 457 04 - X - 318
			7/16-20 UNF	013X - 457 20 - X - 301
			9/16-18 UNF	013X - 457 21 - X - 302
5,801 psi ¹⁾ (400 bar)	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)	1/4" BSPP	013X - 458 03 - X - 042
			M 10x1 taper	013X - 458 01 - X - 040
			M12x1.5 cyl.	013X - 458 02 - X - 041
			1/4" NPT	013X - 458 09 - X - 340
			1/8" NPT	013X - 458 04 - X - 343
			7/16-20 UNF	013X - 458 20 - X - 341
			9/16-18 UNF	013X - 458 21 - X - 342
	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	1/4" BSPP	013X - 459 03 - X - 009
			M 10x1 taper	013X - 459 01 - X - 007
			M12x1.5 cyl.	013X - 459 02 - X - 008
			1/4" NPT	013X - 459 09 - X - 316
			1/8" NPT	013X - 459 04 - X - 320
			7/16-20 UNF	013X - 459 20 - X - 305
			9/16-18 UNF	013X - 459 21 - X - 306
	145 - 1,450 psi (10 - 100 bar)	± 43.5 - 72.5 psi (± 3.0 - 5.0 bar)	1/4" BSPP	013X - 461 03 - X - 012
			M 10x1 taper	013X - 461 01 - X - 010
			M12x1.5 cyl.	013X - 461 02 - X - 011
			1/4" NPT	013X - 461 09 - X - 317
			1/8" NPT	013X - 461 04 - X - 321
			7/16-20 UNF	013X - 461 20 - X - 307
			9/16-18 UNF	013X - 461 21 - X - 308

0133 / 0135 / 0137 Piston pressure switches

10,152 psi ^{1),2)} (700 bar)	725 - 2,900 psi (50 - 200 bar)	± 72.5 psi (± 5.0 bar)	1/4" BSPP	013X - 460 03 - X - 003
			M 10x1 taper	013X - 460 01 - X - 001
			M12x1.5 cyl.	013X - 460 02 - X - 002
			1/4" NPT	013X - 460 09 - X - 303
			1/8" NPT	013X - 460 04 - X - 304
			7/16-20 UNF	013X - 460 20 - X - 301
			9/16-18 UNF	013X - 460 21 - X - 302

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR ³⁾	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 33 for the temperature range and application thresholds of sealing materials.



Article number:

013 X - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ Excluding the thread sizes G 1/8, R 1/8, NPT 1/8 and M10x1 cylindrical/conical.

³⁾ HNBR diaphragm not available for pressure ranges 0.3 - 1.5 bar.




- Made of zinc-plated steel (CrVI-free, other housing materials available as option)
- Socket device similar to DIN EN 175301 (DIN 43650)
- Snap action with silver contacts
- Overpressure safety up to 1,450 / 5,801 psi (100 / 400 bar)¹⁾
- Differential adjustable at factory

$p_{\max.}$ in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
-----------------------------	----------------------------------	---	-------------	--------------

0184 Diaphragm pressure switches



Socket device
included in the delivery

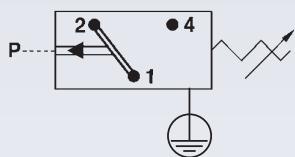

1,450 psi ¹⁾ (100 bar)	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/4" NPT 1/8" NPT 7/16-20 UNF 9/16-18 UNF	0184 - 457 01 - X - 001 0184 - 457 02 - X - 002 0184 - 457 03 - X - 003 0184 - 457 09 - X - 314 0184 - 457 04 - X - 318 0184 - 457 20 - X - 301 0184 - 457 21 - X - 302
--------------------------------------	-------------------------------------	------------------------------------	--	---

14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/4" NPT 1/8" NPT 7/16-20 UNF 9/16-18 UNF	0184 - 458 01 - X - 040 0184 - 458 02 - X - 041 0184 - 458 03 - X - 042 0184 - 458 09 - X - 340 0184 - 458 04 - X - 343 0184 - 458 20 - X - 341 0184 - 458 21 - X - 342
--------------------------------	------------------------------------	--	---

5,801 psi ¹⁾ (400 bar)	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/4" NPT 1/8" NPT 7/16-20 UNF 9/16-18 UNF	0184 - 459 01 - X - 007 0184 - 459 02 - X - 008 0184 - 459 03 - X - 009 0184 - 459 09 - X - 311 0184 - 459 04 - X - 320 0184 - 459 20 - X - 305 0184 - 459 21 - X - 306
--------------------------------------	--------------------------------	------------------------------------	--	---

145 - 1,450 psi (10 - 100 bar)	$\pm 43.5 - 72.5$ psi ($\pm 3.0 - 5.0$ bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/4" NPT 1/8" NPT 7/16-20 UNF 9/16-18 UNF	0184 - 461 01 - X - 010 0184 - 461 02 - X - 011 0184 - 461 03 - X - 012 0184 - 461 09 - X - 312 0184 - 461 04 - X - 321 0184 - 461 20 - X - 307 0184 - 461 21 - X - 308
-----------------------------------	---	--	---

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM(Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 33 for the temperature range and application thresholds of sealing materials.



Your order number:

0184 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.



0185

Piston pressure switches up to 250 V

- Made of zinc-plated steel (CrVI-free, other housing materials available as option)
- Socket device similar to DIN EN 175301 (DIN 43650)
- Snap action with silver contacts
- Overpressure safety up to 10,152 psi (700 bar)¹⁾
- Differential adjustable at factory

p_{\max} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
----------------------------	----------------------------------	---	-------------	--------------

0185 Piston pressure switches

10,152 psi (700 bar) ¹⁾	725 - 2,900 psi (50 - 200 bar)	± 72.5 psi (± 5.0 bar)	M 10x1 taper	0185 - 460 01 - X - 001
			M 12x1.5 cyl.	0185 - 460 02 - X - 002
			1/4" BSPP	0185 - 460 03 - X - 003
			1/4" NPT	0185 - 460 09 - X - 303
			7/16-20 UNF	0185 - 460 20 - X - 301
			9/16-18 UNF	0185 - 460 21 - X - 302

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 33 for the temperature range and application thresholds of sealing materials.

Your order number: 0185 - 460 XX - X - XXX


M.2

hex 27 integrated

soco



Socket device
included in the delivery

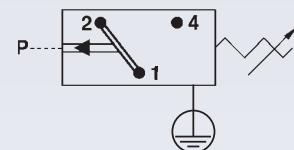

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.





0194

Diaphragm pressure switches up to 24 V with gold contacts

- Made of zinc-plated steel (CrVI-free)
- Socket device similar to DIN EN 175301 (DIN 43650)
- Changeover with gold contacts
- Overpressure safety up to 1,450 / 5,800 psi (100 / 400 bar)¹⁾
- Hysteresis adjustable at factory

P_{\max} in bar	Adjustment range in bar	Tolerance at room temperature in bar	Male thread	Article number
----------------------	----------------------------	---	-------------	----------------

0194 Diaphragm pressure switches

1,450 psi ¹⁾ (100 bar)	0.3 - 1.5	± 0.2	1/4" BSP	0194 - 457 03 - X - 003
			M 10x1 con.	0194 - 457 01 - X - 001
			M 12x1.5 cyl.	0194 - 457 02 - X - 002
			1/4" NPT	0194 - 457 09 - X - 314
			1/8" NPT	0194 - 457 04 - X - 318
			7/16-20 UNF	0194 - 457 20 - X - 301
			9/16-18 UNF	0194 - 457 21 - X - 302
5,800 psi ¹⁾ (400 bar)	1 - 10	± 0.5	1/4" BSP	0194 - 458 03 - X - 042
			M 10x1 con.	0194 - 458 01 - X - 040
			M 12x1.5 cyl.	0194 - 458 02 - X - 041
			1/4" NPT	0194 - 458 09 - X - 340
			1/8" NPT	0194 - 458 04 - X - 343
			7/16-20 UNF	0194 - 458 20 - X - 341
			9/16-18 UNF	0194 - 458 21 - X - 342
5,800 psi ¹⁾ (400 bar)	10 - 50	± 3.0	1/4" BSP	0194 - 459 03 - X - 009
			M 10x1 con.	0194 - 459 01 - X - 007
			M 12x1.5 cyl.	0194 - 459 02 - X - 008
			1/4" NPT	0194 - 459 09 - X - 311
			1/8" NPT	0194 - 459 04 - X - 320
			7/16-20 UNF	0194 - 459 20 - X - 305
			9/16-18 UNF	0194 - 459 21 - X - 306
5,800 psi ¹⁾ (400 bar)	10 - 100	$\pm 3.0 - 5.0$	1/4" BSP	0194 - 461 03 - X - 012
			M 10x1 con.	0194 - 461 01 - X - 010
			M 12x1.5 cyl.	0194 - 461 02 - X - 011
			1/4" NPT	0194 - 461 09 - X - 312
			1/8" NPT	0194 - 461 04 - X - 321
			7/16-20 UNF	0194 - 461 20 - X - 307
			9/16-18 UNF	0194 - 461 21 - X - 308

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR ²⁾	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 33 for the temperature range and application thresholds of sealing materials.



Article number:

0194 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ HNBR diaphragm not available for pressure ranges 0.3 - 1.5 bar.



0195

Piston pressure switches up to 24 V with gold contacts

- Made of zinc-plated steel (CrVI-free)
- Socket device similar to DIN EN 175301 (DIN 43650)
- Changeover with gold contacts
- Overpressure safety up to 10,150 psi (700 bar)¹⁾
- Hysteresis adjustable at factory

p _{max} in bar	Adjustment range in bar	Tolerance at room temperature in bar	Male thread	Article number
----------------------------	----------------------------	---	-------------	----------------

0195 Piston pressure switches

10,152 psi ^{1) 2)} (700 bar)	50 - 200	± 5.0	1/4 BSP	0195 - 460 03 - X - 003
			M 10x1 con.	0195 - 460 01 - X - 001
			M 12x1.5 cyl.	0195 - 460 02 - X - 002
			1/4 NPT	0195 - 460 09 - X - 303
			7/16-20 UNF	0195 - 460 20 - X - 301
			9/16-18 UNF	0195 - 460 21 - X - 302

0195 - 460 03 - X - 003
0195 - 460 01 - X - 001
0195 - 460 02 - X - 002
0195 - 460 09 - X - 303
0195 - 460 20 - X - 301
0195 - 460 21 - X - 302

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 33 for the temperature range and application thresholds of sealing materials.


Article number:

0195 - 460 XX - X - XXX

M.2
hex 27 integrated



Socket device
included in the delivery

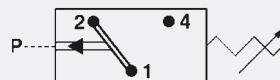

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.
²⁾ Excluding the thread sizes G 1/8, R 1/8, NPT 1/8 and M 10x1 cylindrical/conical.



Pressure switches hex 24

NC or NO, maximum voltage 42 V



- Most cost-effective solution for mechanical pressure monitoring
- Stable switching point even after long use and high load
- Switching point can be adjusted when fitted on site¹⁾
- High pressure resistance, compact, small switches, available as normally closed (NC) or normally open (NO)
- For solutions with integrated connectors, please refer to chapter M.1, starting at page 22
- For customized and ready-wired pressure switches, please refer to chapter M.5

¹⁾ Pressure switches can also be supplied preset at factory.
Our preset switches are sealed with lacquer paint, set points are embossed on the housing.

Pressure switches hex 24

Technical data

Rated working voltage:	10 ... 42 VAC/DC	
Rated current range (resistive load, DC12 / AC12:	10 mA ... 4 A	
Switching power DC12 / AC12:	100 W / 100 VA	
Temperature resistance of sealing materials:	NBR (BunaN)	-40 °F ... +212 °F (-40 °C ... +100 °C)
	NBR (in piston pressure switch)	-22 °F ... +212 °F (-30 °C ... +100 °C)
	EPDM	-22 °F ... +248 °F (-30 °C ... +120 °C)
	EPDM-W270, diaphragm	-4 °F ... +212 °F (-20 °C ... +100 °C)
	FKM (Viton®) (in diaphragm pressure switch)	+23 °F ... +248 °F (-5 °C ... +120 °C)
	FKM (Viton®) (in piston pressure switch)	+5 °F ... +248 °F (-15 °C ... +120 °C)
	FFKM	-4 °F ... +248 °F (-20 °C ... +120 °C)
	Silicone, diaphragm	-40 °F ... +248 °F (-40 °C ... +120 °C)
	HNBR	-22 °F ... +248 °F (-30 °C ... +120 °C)
Burst pressure (diaphragm pressure switch):	5,800 psi (400 bar)	
Burst pressure (piston pressure switch):	10,150 psi (700 bar) (for threads M10, G 1/8, R 1/8 and NPT 1/8 up to max. 600 bar)	
Switching frequency:	200 / min.	
Mechanical life expectancy:	1,000,000 cycles (for diaphragm pressure switches, life expectancy value only applies for switching pressures to max. 725 psi / 50 bar)	
Pressure rise rate:	$\leq 14.5 \text{ psi/ms}$ (1 bar/ms)	
Differential:	Average value 5 – 30 % depending on type, not adjustable	
Vibration resistance	10 g; 5 – 200 Hz sine wave; DIN EN 60068-2-6	
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27	
Protection class:	IP65 with socket device, terminals IP00	
Weight:	approx. 3.17 oz (90 g)	

Type:	0163	0164	0166	0167	0168	0169
Material:	Zinc-plated steel (CrVI-free)	●		●	●	●
	Stainless steel		●			
	Brass			●		
Overpressure safety up to:	35 bar			●		
	300 bar		●		●	
	600 bar	●	●			●



0163

Diaphragm pressure switches up to 42 V with spade terminal

- Made of zinc-plated steel (CrVI-free)
- Spade terminal
- Overpressure safety up to 8,700 psi (600 bar)¹⁾, Burst pressure safety up to 10,153 psi (700 bar)¹⁾

Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → :
---	----------------	-------------------------	-------------------------

0163 Diaphragm pressure switches with spade terminal

1.45 - 14.5 ± 2.90 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	0163 - 403 01 - X - 009	0163 - 404 01 - X - 013
	M 12x1.5 cyl.	0163 - 403 02 - X - 010	0163 - 404 02 - X - 014
	1/4" BSPP	0163 - 403 03 - X - 011	0163 - 404 03 - X - 015
	1/8" BSPP	0163 - 403 28 - X - 603	0163 - 404 28 - X - 604
	1/4" NPT	0163 - 403 09 - X - 345	0163 - 404 09 - X - 346
	1/8" NPT	0163 - 403 04 - X - 012	0163 - 404 04 - X - 016
	7/16-20 UNF	0163 - 403 20 - X - 305	0163 - 404 20 - X - 307
	9/16-20 UNF	0163 - 403 21 - X - 306	0163 - 404 21 - X - 308
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	0163 - 423 01 - X - 070	0163 - 424 01 - X - 070
	M 12x1.5 cyl.	0163 - 423 02 - X - 070	0163 - 424 02 - X - 070
	1/4" BSPP	0163 - 423 03 - X - 070	0163 - 424 03 - X - 070
	1/8" BSPP	0163 - 423 28 - X - 070	0163 - 424 28 - X - 070
	1/4" NPT	0163 - 423 09 - X - 070	0163 - 424 09 - X - 070
	1/8" NPT	0163 - 423 04 - X - 070	0163 - 424 04 - X - 070
	7/16-20 UNF	0163 - 423 20 - X - 070	0163 - 424 20 - X - 070
	9/16-20 UNF	0163 - 423 21 - X - 070	0163 - 424 21 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	0163 - 407 01 - X - 025	0163 - 408 01 - X - 029
	M 12x1.5 cyl.	0163 - 407 02 - X - 026	0163 - 408 02 - X - 030
	1/4" BSPP	0163 - 407 03 - X - 027	0163 - 408 03 - X - 031
	1/8" BSPP	0163 - 407 28 - X - 607	0163 - 408 28 - X - 608
	1/4" NPT	0163 - 407 09 - X - 349	0163 - 408 09 - X - 350
	1/8" NPT	0163 - 407 04 - X - 028	0163 - 408 04 - X - 032
	7/16-20 UNF	0163 - 407 20 - X - 313	0163 - 408 20 - X - 315
	9/16-20 UNF	0163 - 407 21 - X - 314	0163 - 408 21 - X - 316
145 - 290 ± 14.50 psi (10 - 20 ± 1.0 bar)	M 10x1 taper	0163 - 411 01 - X - 041	0163 - 412 01 - X - 045
	M 12x1.5 cyl.	0163 - 411 02 - X - 042	0163 - 412 02 - X - 046
	1/4" BSPP	0163 - 411 03 - X - 043	0163 - 412 03 - X - 047
	1/8" BSPP	0163 - 411 03 - X - 043	0163 - 412 03 - X - 047
	1/4" NPT	0163 - 411 09 - X - 353	0163 - 412 09 - X - 354
	1/8" NPT	0163 - 411 28 - X - 611	0163 - 412 28 - X - 612
	7/16-20 UNF	0163 - 411 20 - X - 321	0163 - 412 20 - X - 323
	9/16-20 UNF	0163 - 411 21 - X - 322	0163 - 412 21 - X - 324
290 - 725 ± 29.0 psi (20 - 50 ± 2.0 bar)	M 10x1 taper	0163 - 415 01 - X - 057	0163 - 416 01 - X - 061
	M 12x1.5 cyl.	0163 - 415 02 - X - 058	0163 - 416 02 - X - 062
	1/4" BSPP	0163 - 415 03 - X - 059	0163 - 416 03 - X - 063
	1/8" BSPP	0163 - 415 28 - X - 615	0163 - 416 28 - X - 616
	1/4" NPT	0163 - 415 09 - X - 357	0163 - 416 09 - X - 358
	1/8" NPT	0163 - 415 04 - X - 060	0163 - 416 04 - X - 064
	7/16-20 UNF	0163 - 415 20 - X - 329	0163 - 416 20 - X - 331
	9/16-20 UNF	0163 - 415 21 - X - 330	0163 - 416 21 - X - 332

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Your order number:

0163 - XXX XX - X - XXX

M.3

hex 24



Suc

M

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.



0163

Diaphragm pressure switches up to 42 V with M3 screw terminal

- Made of zinc-plated steel (CrVI-free)
- M3 screw terminal
- Overpressure safety up to 8,700 psi (600 bar)¹⁾

Adjustment range tolerance at room temperature	Male thread	Order number NO —> :	Order number NC —> :
---	----------------	-------------------------	-------------------------



0163 Diaphragm pressure switches with M3 screw terminal

1.45 - 14.5 ± 2.90 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	0163 - 401 01 - X - 001	0163 - 402 01 - X - 005
	M 12x1.5 cyl.	0163 - 401 02 - X - 002	0163 - 402 02 - X - 006
	1/4" BSPP	0163 - 401 03 - X - 003	0163 - 402 03 - X - 007
	1/8" BSPP	0163 - 401 28 - X - 601	0163 - 402 28 - X - 602
	1/4" NPT	0163 - 401 09 - X - 343	0163 - 402 09 - X - 344
	1/8" NPT	0163 - 401 04 - X - 004	0163 - 402 04 - X - 008
	7/16-20 UNF	0163 - 401 20 - X - 301	0163 - 402 20 - X - 303
	9/16-20 UNF	0163 - 401 21 - X - 302	0163 - 402 21 - X - 304
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	0163 - 421 01 - X - 070	0163 - 422 01 - X - 070
	M 12x1.5 cyl.	0163 - 421 02 - X - 070	0163 - 422 02 - X - 070
	1/4" BSPP	0163 - 421 03 - X - 070	0163 - 422 03 - X - 070
	1/8" BSPP	0163 - 421 28 - X - 070	0163 - 422 28 - X - 070
	1/4" NPT	0163 - 421 09 - X - 070	0163 - 422 09 - X - 070
	1/8" NPT	0163 - 421 04 - X - 070	0163 - 422 04 - X - 070
	7/16-20 UNF	0163 - 421 20 - X - 070	0163 - 422 20 - X - 070
	9/16-20 UNF	0163 - 421 21 - X - 070	0163 - 422 21 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	0163 - 405 01 - X - 017	0163 - 406 01 - X - 021
	M 12x1.5 cyl.	0163 - 405 02 - X - 018	0163 - 406 02 - X - 022
	1/4" BSPP	0163 - 405 03 - X - 019	0163 - 406 03 - X - 023
	1/8" BSPP	0163 - 405 28 - X - 605	0163 - 406 28 - X - 606
	1/4" NPT	0163 - 405 09 - X - 347	0163 - 406 09 - X - 348
	1/8" NPT	0163 - 405 04 - X - 020	0163 - 406 04 - X - 024
	7/16-20 UNF	0163 - 405 20 - X - 309	0163 - 406 20 - X - 311
	9/16-20 UNF	0163 - 405 21 - X - 310	0163 - 406 21 - X - 312
145 - 290 ± 14.50 psi (10 - 20 ± 1.0 bar)	M 10x1 taper	0163 - 409 01 - X - 033	0163 - 410 01 - X - 037
	M 12x1.5 cyl.	0163 - 409 02 - X - 034	0163 - 410 02 - X - 038
	1/4" BSPP	0163 - 409 03 - X - 035	0163 - 410 03 - X - 039
	1/8" BSPP	0163 - 409 28 - X - 609	0163 - 410 28 - X - 610
	1/4" NPT	0163 - 409 09 - X - 351	0163 - 410 09 - X - 352
	1/8" NPT	0163 - 409 04 - X - 036	0163 - 410 04 - X - 040
	7/16-20 UNF	0163 - 409 20 - X - 317	0163 - 410 20 - X - 319
	9/16-20 UNF	0163 - 409 21 - X - 318	0163 - 410 21 - X - 320
290 - 725 ± 29.0 psi (20 - 50 ± 2.0 bar)	M 10x1 taper	0163 - 413 01 - X - 049	0163 - 414 01 - X - 053
	M 12x1.5 cyl.	0163 - 413 02 - X - 050	0163 - 414 02 - X - 054
	1/4" BSPP	0163 - 413 03 - X - 051	0163 - 414 03 - X - 055
	1/8" BSPP	0163 - 413 28 - X - 051	0163 - 414 28 - X - 055
	1/4" NPT	0163 - 413 09 - X - 355	0163 - 414 09 - X - 356
	1/8" NPT	0163 - 413 04 - X - 052	0163 - 414 04 - X - 056
	7/16-20 UNF	0163 - 413 20 - X - 325	0163 - 414 20 - X - 327
	9/16-20 UNF	0163 - 413 21 - X - 326	0163 - 414 21 - X - 328

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 41 for the temperature range and application thresholds of sealing materials.



Your order number:

0163 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

0166

Diaphragm pressure switches up to 42 V with spade terminal

- Made of zinc-plated steel (CrVI-free)
- Spade terminal
- Overpressure safety up to 4,350 psi (300 bar), Burst pressure safety up to 5,800 psi (400 bar)¹⁾

Adjustment range tolerance at room temperature	Male thread	Order number NO —> :	Order number NC —> ::
---	----------------	--------------------------	--------------------------

0166 Diaphragm pressure switches with spade terminal

1.45 - 14.5 ± 2.90 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	0166 - 403 01 - X - 009	0166 - 404 01 - X - 013
	M 12x1.5 cyl.	0166 - 403 02 - X - 010	0166 - 404 02 - X - 014
	1/4" BSPP	0166 - 403 03 - X - 011	0166 - 404 03 - X - 015
	1/8" BSPP	0166 - 403 28 - X - 603	0166 - 404 28 - X - 604
	1/4" NPT	0166 - 403 09 - X - 345	0166 - 404 09 - X - 346
	1/8" NPT	0166 - 403 04 - X - 012	0166 - 404 04 - X - 016
	7/16-20 UNF	0166 - 403 20 - X - 305	0166 - 404 20 - X - 307
	9/16-18 UNF	0166 - 403 21 - X - 306	0166 - 404 21 - X - 308
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	0166 - 423 01 - X - 070	0166 - 424 01 - X - 070
	M 12x1.5 cyl.	0166 - 423 02 - X - 070	0166 - 424 02 - X - 070
	1/4" BSPP	0166 - 423 03 - X - 070	0166 - 424 03 - X - 070
	1/8" BSPP	0166 - 423 28 - X - 070	0166 - 424 28 - X - 070
	1/4" NPT	0166 - 423 09 - X - 070	0166 - 424 09 - X - 070
	1/8" NPT	0166 - 423 04 - X - 070	0166 - 424 04 - X - 070
	7/16-20 UNF	0166 - 423 20 - X - 070	0166 - 424 20 - X - 070
	9/16-18 UNF	0166 - 423 21 - X - 070	0166 - 424 21 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	0166 - 407 01 - X - 025	0166 - 408 01 - X - 029
	M 12x1.5 cyl.	0166 - 407 02 - X - 026	0166 - 408 02 - X - 030
	1/4" BSPP	0166 - 407 03 - X - 027	0166 - 408 03 - X - 031
	1/8" BSPP	0166 - 407 28 - X - 607	0166 - 408 28 - X - 608
	1/4" NPT	0166 - 407 09 - X - 349	0166 - 408 09 - X - 350
	1/8" NPT	0166 - 407 04 - X - 028	0166 - 408 04 - X - 032
	7/16-20 UNF	0166 - 407 20 - X - 313	0166 - 408 20 - X - 315
	9/16-18 UNF	0166 - 407 21 - X - 314	0166 - 408 21 - X - 316
145 - 290 ± 14.50 psi (10 - 20 ± 1.0 bar)	M 10x1 taper	0166 - 411 01 - X - 041	0166 - 412 01 - X - 045
	M 12x1.5 cyl.	0166 - 411 02 - X - 042	0166 - 416 02 - X - 046
	1/4" BSPP	0166 - 411 03 - X - 043	0166 - 412 03 - X - 047
	1/4" NPT	0166 - 411 09 - X - 353	0166 - 412 09 - X - 354
	1/8" NPT	0166 - 411 04 - X - 044	0166 - 412 04 - X - 048
	7/16-20 UNF	0166 - 411 20 - X - 321	0166 - 412 20 - X - 323
	9/16-18 UNF	0166 - 411 21 - X - 322	0166 - 412 21 - X - 324
290 - 725 ± 29.0 psi (20 - 50 ± 2.0 bar)	M 10x1 taper	0166 - 415 01 - X - 057	0166 - 416 01 - X - 061
	M 12x1.5 cyl.	0166 - 415 02 - X - 058	0166 - 416 02 - X - 062
	1/4" BSPP	0166 - 415 03 - X - 059	0166 - 416 03 - X - 063
	1/8" BSPP	0166 - 415 28 - X - 615	0166 - 416 28 - X - 616
	1/4" NPT	0166 - 415 09 - X - 357	0166 - 416 09 - X - 358
	1/8" NPT	0166 - 415 04 - X - 060	0166 - 416 04 - X - 064
	7/16-20 UNF	0166 - 415 20 - X - 329	0166 - 416 20 - X - 331
	9/16-18 UNF	0166 - 415 21 - X - 330	0166 - 416 21 - X - 332

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Your order number:

0166 - XXX XX - X - XXX

M.3

hex 24

AMP 6.3 x 0.8
Galvanically tin-plated



soco

M



¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

M.3

hex 24

0166

Diaphragm pressure switches up to 42 V with M3 screw terminal

- Made of zinc-plated steel (CrVI-free)
- M3 screw terminal
- Overpressure safety up to 4,350 psi (300 bar)¹⁾ Burst pressure safety up to 5,800 psi (400 bar)¹⁾



Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → :
---	----------------	------------------------	------------------------

0166 Diaphragm pressure switches with M3 screw terminal

1.45 - 14.5 ± 2.90 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	0166 - 401 01 - X - 001	0166 - 402 01 - X - 005
	M 12x1.5 cyl.	0166 - 401 02 - X - 002	0166 - 402 02 - X - 006
	1/4" BSPP	0166 - 401 03 - X - 003	0166 - 402 03 - X - 007
	1/8" BSPP	0166 - 401 28 - X - 601	0166 - 402 28 - X - 602
	1/4" NPT	0166 - 401 09 - X - 343	0166 - 402 09 - X - 344
	1/8" NPT	0166 - 401 04 - X - 004	0166 - 402 04 - X - 008
	7/16-20 UNF	0166 - 401 20 - X - 301	0166 - 402 20 - X - 303
	9/16-18 UNF	0166 - 401 21 - X - 302	0166 - 402 21 - X - 304
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	0166 - 421 01 - X - 070	0166 - 422 01 - X - 070
	M 12x1.5 cyl.	0166 - 421 02 - X - 070	0166 - 422 02 - X - 070
	1/4" BSPP	0166 - 421 03 - X - 070	0166 - 422 03 - X - 070
	1/8" BSPP	0166 - 421 28 - X - 070	0166 - 422 28 - X - 070
	1/4" NPT	0166 - 421 09 - X - 070	0166 - 422 09 - X - 070
	1/8" NPT	0166 - 421 04 - X - 070	0166 - 422 04 - X - 070
	7/16-20 UNF	0166 - 421 20 - X - 070	0166 - 422 20 - X - 070
	9/16-18 UNF	0166 - 421 21 - X - 070	0166 - 422 21 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	0166 - 405 01 - X - 017	0166 - 406 01 - X - 021
	M 12x1.5 cyl.	0166 - 405 02 - X - 018	0166 - 406 02 - X - 022
	1/4" BSPP	0166 - 405 03 - X - 019	0166 - 406 03 - X - 023
	1/8" BSPP	0166 - 405 28 - X - 605	0166 - 406 28 - X - 606
	1/4" NPT	0166 - 405 09 - X - 347	0166 - 406 09 - X - 348
	1/8" NPT	0166 - 405 04 - X - 020	0166 - 406 04 - X - 024
	7/16-20 UNF	0166 - 405 20 - X - 309	0166 - 406 20 - X - 311
	9/16-18 UNF	0166 - 405 21 - X - 310	0166 - 406 21 - X - 312
145 - 290 ± 14.50 psi (10 - 20 ± 1.0 bar)	M 10x1 taper	0166 - 409 01 - X - 033	0166 - 410 01 - X - 037
	M 12x1.5 cyl.	0166 - 409 02 - X - 034	0166 - 410 02 - X - 038
	1/4" BSPP	0166 - 409 03 - X - 035	0166 - 410 03 - X - 039
	1/8" BSPP	0166 - 409 28 - X - 609	0166 - 410 28 - X - 610
	1/4" NPT	0166 - 409 09 - X - 351	0166 - 410 09 - X - 352
	1/8" NPT	0166 - 409 04 - X - 036	0166 - 410 04 - X - 040
	7/16-20 UNF	0166 - 409 20 - X - 317	0166 - 410 20 - X - 319
	9/16-18 UNF	0166 - 409 21 - X - 318	0166 - 410 21 - X - 320
290 - 725 ± 29.0 psi (20 - 50 ± 2.0 bar)	M 10x1 taper	0166 - 413 01 - X - 049	0166 - 414 01 - X - 053
	M 12x1.5 cyl.	0166 - 413 02 - X - 050	0166 - 414 02 - X - 054
	1/4" BSPP	0166 - 413 03 - X - 051	0166 - 414 03 - X - 055
	1/8" BSPP	0166 - 413 28 - X - 613	0166 - 414 28 - X - 614
	1/4" NPT	0166 - 413 09 - X - 355	0166 - 414 09 - X - 356
	1/8" NPT	0166 - 413 04 - X - 052	0166 - 414 04 - X - 056
	7/16-20 UNF	0166 - 413 20 - X - 325	0166 - 414 20 - X - 327
	9/16-18 UNF	0166 - 413 21 - X - 326	0166 - 414 21 - X - 328

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 41 for the temperature range and application thresholds of sealing materials.

Article number:

0166 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

0168

Diaphragm pressure switches up to 42 V

- Made of zinc-plated steel (CrVI-free)
- Spade or M3 screw terminal
- Overpressure safety up to 4,351 psi (300 bar)¹⁾. Burst pressure safety up to 5,800 psi (400 bar)
- With female thread with compression-type fitting to DIN EN ISO 8434-1 (former DIN 2353)

Adjustment range tolerance at room temperature	Female thread	Order number NO —> :	Order number NC —> :
---	------------------	-------------------------	-------------------------



0168 Diaphragm pressure switches with M3 screw terminal

1.45 – 14.5 ±2.90 psi (0.1 – 1 ±0.2 bar)	M 12x1.5 female DIN 2353	0168 – 401 16 – X – 001	0168 – 402 16 – X – 002
7.25 – 43.5 ±4.35 psi (0.5 – 3 ±0.3 bar)		0168 – 421 16 – X – 070	0168 – 422 16 – X – 070
14.5 – 145 ±7.25 psi (1 – 10 ±0.5 bar)		0168 – 405 16 – X – 005	0168 – 406 16 – X – 006
145 – 290 ±14.5 psi (10 – 20 ±1.0 bar)		0168 – 409 16 – X – 009	0168 – 410 16 – X – 010
290 – 725 ±29.0 psi (20 – 50 ±2.0 bar)		0168 – 413 16 – X – 013	0168 – 414 16 – X – 014



0168 Diaphragm pressure switches with spade terminal

1.45 – 14.5 ±2.90 psi (0.1 – 1 ±0.2 bar)	M 12x1.5 female DIN 2353	0168 – 403 16 – X – 003	0168 – 404 16 – X – 004
7.25 – 43.5 ±4.35 psi (0.5 – 3 ±0.3 bar)		0168 – 423 16 – X – 070	0168 – 424 16 – X – 070
14.5 – 145 ±7.25 psi (1 – 10 ±0.5 bar)		0168 – 407 16 – X – 007	0168 – 408 16 – X – 008
145 – 290 ±14.5 psi (10 – 20 ±1.0 bar)		0168 – 411 16 – X – 011	0168 – 412 16 – X – 012
290 – 725 ±29.0 psi (20 – 50 ±2.0 bar)		0168 – 415 16 – X – 015	0168 – 416 16 – X – 016


Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 41 for the temperature range and application thresholds of sealing materials.

Your order number:

0168 – XXX XX – X – XXX

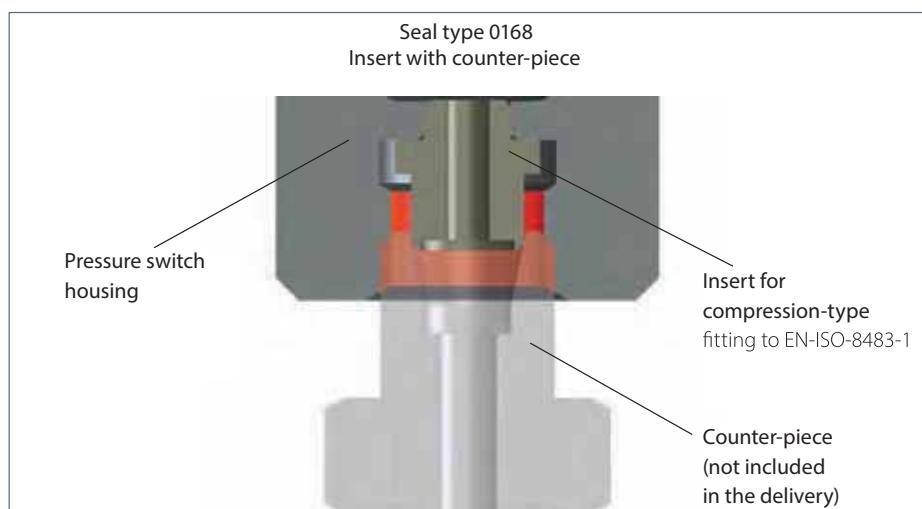

0169

Piston pressure switches up to 42 V

- Made of zinc-plated steel (CrVI-free)
- Spade or M3 screw terminal
- Overpressure safety up to 8,700 psi (600 bar), Burst pressure safety up to 10,153 psi (700 bar)¹⁾

M.3

hex 24



Adjustment range
(Tolerance at room temperature)

Male
thread

Article number
NO → :|

Article number
NC → :|

0169 Piston pressure switches with spade terminal

725 - 2175 ± 72.5 psi (50 - 150 ± 5 bar)	1/4" BSPP	0169 - 419 03 - X - 011	0169 - 420 03 - X - 015
	1/8" BSPP	0169 - 419 28 - X - 603	0169 - 420 28 - X - 604
	M10x1 cyl.	0169 - 419 13 - X - 003	0169 - 420 13 - X - 004
	M10x1 con.	0169 - 419 01 - X - 009	0169 - 420 01 - X - 013
	M12x1.5 cyl.	0169 - 419 02 - X - 010	0169 - 420 02 - X - 014
	NPT1/8	0169 - 419 04 - X - 012	0169 - 420 04 - X - 016

1450 - 2900 ± 72.5 psi (100 - 200 ± 5 bar)	1/4" BSPP	0169 - 493 03 - X - 011	0169 - 494 03 - X - 015
	1/8" BSPP	0169 - 493 28 - X - 603	0169 - 494 28 - X - 604
	M10x1 cyl.	0169 - 493 13 - X - 003	0169 - 494 13 - X - 004
	M10x1 con.	0169 - 493 01 - X - 009	0169 - 494 01 - X - 013
	M12x1.5 cyl.	0169 - 493 02 - X - 010	0169 - 494 02 - X - 014
	NPT1/8	0169 - 493 04 - X - 012	0169 - 494 04 - X - 016
	G 1/4 DIN 3852-2-A	0169 - 491 60 - X - 003	0169 - 492 60 - X - 007
	M12x1.5DIN3852-1-A	0169 - 491 68 - X - 002	0169 - 492 68 - X - 006

0169 Piston pressure switches with M3 screw terminal

725 - 2175 ± 72.5 psi (50 - 150 ± 5 bar)	1/4" BSPP	0169 - 417 03 - X - 003	0169 - 418 03 - X - 007
	1/8" BSPP	0169 - 417 28 - X - 601	0169 - 418 28 - X - 602
	M10x1 cyl.	0169 - 417 13 - X - 001	0169 - 418 13 - X - 002
	M10x1 con.	0169 - 417 01 - X - 001	0169 - 418 01 - X - 005
	M12x1.5 cyl.	0169 - 417 02 - X - 002	0169 - 418 02 - X - 006
	NPT1/8	0169 - 417 04 - X - 004	0169 - 418 04 - X - 008

1450 - 2900 ± 72.5 psi (100 - 200 ± 5 bar)	1/4" BSPP	0169 - 491 03 - X - 003	0169 - 492 03 - X - 007
	1/8" BSPP	0169 - 491 28 - X - 601	0169 - 492 28 - X - 602
	M10x1 cyl.	0169 - 491 13 - X - 001	0169 - 492 13 - X - 002
	M10x1 con.	0169 - 491 01 - X - 001	0169 - 492 01 - X - 005
	M12x1.5 cyl.	0169 - 491 02 - X - 002	0169 - 492 02 - X - 006
	NPT1/8	0169 - 491 04 - X - 004	0169 - 492 04 - X - 008
	G 1/4 DIN 3852-2-A	0169 - 491 60 - X - 003	0169 - 492 60 - X - 007
	M12x1.5DIN3852-1-A	0169 - 491 68 - X - 002	0169 - 492 68 - X - 006

Seal material – Application areas

NBR	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 41 for the temperature range and application thresholds of sealing materials.

Article number:

0169 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ Further thread types are available from a minimum order quantity of 500 pieces.



0164

Diaphragm pressure switches up to 42 V with stainless steel housing

- Stainless steel housing (AISI 303 / 1.4305)
- Spade or M3 screw terminal
- Overpressure safety up to 8,700 psi (600 bar)¹⁾ Burst pressure safety up 10,153 psi (700 bar)¹⁾
- (EPDM-W270 and silicone diaphragm up to 500 psi (35 bar))²⁾

Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → ::
---	----------------	-------------------------	-------------------------

0164 Diaphragm pressure switches with spade terminal

1.45 - 14.5 ± 2.90 psi (0.1 - 1 ± 0.2 bar)	1/4" BSPP-E	0164 - 403 41 - X - 003	0164 - 404 41 - X - 004
	1/8" BSPT	0164 - 403 12 - X - 003	0164 - 404 12 - X - 004
	1/4" BSPT	0164 - 403 46 - X - 003	0164 - 404 46 - X - 004
	1/8" NPT	0164 - 403 04 - X - 003	0164 - 404 04 - X - 004
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	1/4" BSPP-E	0164 - 423 41 - X - 070	0164 - 424 41 - X - 070
	1/8" BSPT	0164 - 423 12 - X - 070	0164 - 424 12 - X - 070
	1/4" BSPT	0164 - 423 46 - X - 070	0164 - 424 46 - X - 070
	1/8" NPT	0164 - 423 04 - X - 070	0164 - 424 04 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	1/4" BSPP-E	0164 - 407 41 - X - 007	0164 - 408 41 - X - 008
	1/8" BSPT	0164 - 407 12 - X - 007	0164 - 408 12 - X - 008
	1/4" BSPT	0164 - 407 46 - X - 007	0164 - 408 46 - X - 008
	1/8" NPT	0164 - 407 04 - X - 007	0164 - 408 04 - X - 008
145 - 290 ± 14.5 psi (10 - 20 ± 1 bar)	1/4" BSPP-E	0164 - 411 41 - X - 011	0164 - 412 41 - X - 012
	1/8" BSPT	0164 - 411 12 - X - 011	0164 - 412 12 - X - 012
	1/4" BSPT	0164 - 411 46 - X - 011	0164 - 412 46 - X - 012
	1/8" NPT	0164 - 411 04 - X - 011	0164 - 412 04 - X - 012
290 - 725 ± 29.0 psi (20 - 50 ± 2 bar)	1/4" BSPP-E	0164 - 415 41 - X - 015	0164 - 416 41 - X - 016
	1/8" BSPT	0164 - 415 12 - X - 015	0164 - 416 12 - X - 016
	1/4" BSPT	0164 - 415 46 - X - 015	0164 - 416 46 - X - 016
	1/8" NPT	0164 - 415 04 - X - 015	0164 - 416 04 - X - 016

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Water, Brake fluid, hydrogen, oxygen, acetylene, etc.	2
EPDM-W270	Drinking water ($p_{max} \leq 500$ psi / 35 bar)	5
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
Silicone	Water, food products, air, etc. ($p_{max} \leq 500$ psi / 35 bar)	8
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Your order number: 0164 - XXX XX - X - XXX

M.3

hex 24



AMP 6.3 x 0.8
galvanically tin-plated



¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ Overpressure safety of pressure switch up to 600 bar. Functional reliability only up to 35 bar with diaphragm materials EPDM-TW and silicone.

³⁾ The G1/4-E thread has an EPDM sealing ring if the silicone membrane is selected.



0164

Diaphragm pressure switches up to 42 V with stainless steel housing

- Stainless steel housing (1.4305 / AISI 303)
- M3 screw terminal
- Overpressure safety up to 8,700 psi (600 bar)¹⁾
- EPDM-TW and silicone diaphragm up to max. 35 bar²⁾

Adjustment range (Tolerance at room temperature)	Male thread	Article number NO → :	Article number NC → :
---	----------------	--------------------------	--------------------------

0164 Diaphragm pressure switches with screw terminal M3

1.45 - 14.5 ±2.90 psi 0.1 - 1 (± 0.2) bar	1/4 BSPP-E	0164 - 401 41 - X - 001	0164 - 402 41 - X - 002
	1/8" BSPT	0164 - 401 12 - X - 001	0164 - 402 12 - X - 002
	1/4" BSPT	0164 - 401 46 - X - 001	0164 - 402 46 - X - 002
	1/8" NPT	0164 - 401 04 - X - 001	0164 - 402 04 - X - 002
7.25 - 43.5 ±4.35 psi 0.5 - 3 (± 0.3) bar	1/4 BSPP-E	0164 - 421 41 - X - 070	0164 - 422 41 - X - 070
	1/8" BSPT	0164 - 421 12 - X - 070	0164 - 422 12 - X - 070
	1/4" BSPT	0164 - 421 46 - X - 070	0164 - 422 46 - X - 070
	1/8" NPT	0164 - 421 04 - X - 070	0164 - 422 04 - X - 070
14.5 - 145 ±7.25 psi 1 - 10 (± 0.5) bar	1/4 BSPP-E	0164 - 405 41 - X - 005	0164 - 406 41 - X - 006
	1/8" BSPT	0164 - 405 12 - X - 005	0164 - 406 12 - X - 006
	1/4" BSPT	0164 - 405 46 - X - 005	0164 - 406 46 - X - 006
	1/8" NPT	0164 - 405 04 - X - 005	0164 - 406 04 - X - 006
145 - 290 ±14.5 psi 10 - 20 (± 1) bar	1/4 BSPP-E	0164 - 409 41 - X - 009	0164 - 410 41 - X - 010
	1/8" BSPT	0164 - 409 12 - X - 009	0164 - 410 12 - X - 010
	1/4" BSPT	0164 - 409 46 - X - 009	0164 - 410 46 - X - 010
	1/8" NPT	0164 - 409 04 - X - 009	0164 - 410 04 - X - 010
290 - 725 ±29.0 psi 20 - 50 (± 2) bar	1/4 BSPP-E	0164 - 413 41 - X - 013	0164 - 414 41 - X - 014
	1/8" BSPT	0164 - 413 12 - X - 013	0164 - 414 12 - X - 014
	1/4" BSPT	0164 - 413 46 - X - 013	0164 - 414 46 - X - 014
	1/8" NPT	0164 - 413 04 - X - 013	0164 - 414 04 - X - 014

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Water, Brakefluid, hydrogen, oxygen, acetylene, etc.	2
EPDM-TW ²⁾	Drinking water ($p_{max} \leq 35$ bar)	5
FKM	Hydraulicfluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
Silicone ²⁾³⁾	Water, food products, air, etc. ($p_{max} \leq 35$ bar)	8
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 41 for the temperature range and application thresholds of sealing materials.



Article number: 0164 - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ Functional safety and reliability only up to max. 35 bar with EPDM-TW and silicone diaphragm.

³⁾ The G 1/4-E thread has an EPDM sealing ring if the silicone membrane is selected.

M.3

hex 24



M



0167

Diaphragm pressure switches up to 42 V with brass housing

- Brass housing
- Spade terminal
- Overpressure safety up to 500 psi (35 bar)¹⁾

M.3

hex 24



Adjustment range tolerance at room temperature	Male thread	Order number NO → :	Order number NC → ::
---	----------------	-------------------------	-------------------------

0167 Diaphragm pressure switches with spade terminal

1.45 - 14.5 ± 2.9 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	0167 - 403 01 - X - 007	0167 - 404 01 - X - 010
	1/8" BSPT	0167 - 403 12 - X - 008	0167 - 404 12 - X - 011
	1/2" BSPT	0167 - 403 07 - X - 009	0167 - 404 07 - X - 012
	1/4" BSPP	0167 - 403 03 - X - 039	0167 - 404 03 - X - 040
	1/8" BSPP	0167 - 403 28 - X - 003	0167 - 404 28 - X - 004
	1/8" NPT	0167 - 403 04 - X - 012	0167 - 404 04 - X - 016
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	0167 - 423 01 - X - 070	0167 - 424 01 - X - 070
	1/8" BSPT	0167 - 423 12 - X - 070	0167 - 424 12 - X - 070
	1/2" BSPT	0167 - 423 07 - X - 070	0167 - 424 07 - X - 070
	1/4" BSPP	0167 - 423 03 - X - 070	0167 - 424 03 - X - 070
	1/8" BSPP	0167 - 423 28 - X - 070	0167 - 424 28 - X - 070
	1/8" NPT	0167 - 423 04 - X - 070	0167 - 424 04 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	0167 - 407 01 - X - 019	0167 - 408 01 - X - 022
	1/8" BSPT	0167 - 407 12 - X - 020	0167 - 408 12 - X - 023
	1/2" BSPT	0167 - 407 07 - X - 021	0167 - 408 07 - X - 024
	1/4" BSPP	0167 - 407 03 - X - 043	0167 - 408 03 - X - 044
	1/8" BSPP	0167 - 407 28 - X - 007	0167 - 408 28 - X - 008
	1/8" NPT	0167 - 407 04 - X - 028	0167 - 408 04 - X - 032
145 - 290 ± 14.5 psi (10 - 20 ± 1 bar)	M 10x1 taper	0167 - 411 01 - X - 031	0167 - 412 01 - X - 034
	1/8" BSPT	0167 - 411 12 - X - 032	0167 - 412 12 - X - 035
	1/2" BSPT	0167 - 411 07 - X - 033	0167 - 412 07 - X - 036
	1/4" BSPP	0167 - 411 03 - X - 047	0167 - 412 03 - X - 048
	1/8" BSPP	0167 - 411 28 - X - 011	0167 - 412 28 - X - 012
	1/8" NPT	0167 - 411 04 - X - 044	0167 - 412 04 - X - 048

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Water, Brake fluid, hydrogen, oxygen, acetylene, etc.	2
EPDM-W270	Drinking water. ≥ 500 psi ($p_{max} \geq 35$ bar)	5
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
Silicone	Water, food products, air, etc. ≥ 500 psi ($p_{max} \geq 35$ bar)	8

Refer to page 41 for the temperature range and application thresholds of sealing materials.



Your order number:

0167 - XXX XX - X - XXX



M

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

0167

Diaphragm pressure switches up to 42 V with brass housing

- Brass housing
- M3 screw terminal
- Overpressure safety up to 500 psi (35 bar)¹⁾



Adjustment range tolerance at room temperature	Male thread
---	----------------

Order number NO —> :

Order number NC —> :

0167 Diaphragm pressure switches with M3 screw terminal

1.45 - 14.5 ± 2.9 psi (0.1 - 1 ± 0.2 bar)	M 10x1 taper	0167 - 401 01 - X - 001	0167 - 402 01 - X - 004
	1/8" BSPT	0167 - 401 12 - X - 002	0167 - 402 12 - X - 005
	1/2" BSPT	0167 - 401 07 - X - 003	0167 - 402 07 - X - 006
	1/4" BSPP	0167 - 401 03 - X - 037	0167 - 402 03 - X - 038
	1/8" BSPP	0167 - 401 28 - X - 001	0167 - 402 28 - X - 002
	1/8" NPT	0167 - 401 04 - X - 004	0167 - 402 04 - X - 008
7.25 - 43.5 ± 4.35 psi (0.5 - 3 ± 0.3 bar)	M 10x1 taper	0167 - 421 01 - X - 070	0167 - 422 01 - X - 070
	1/8" BSPT	0167 - 421 12 - X - 070	0167 - 422 12 - X - 070
	1/2" BSPT	0167 - 421 07 - X - 070	0167 - 422 07 - X - 070
	1/4" BSPP	0167 - 421 03 - X - 070	0167 - 422 03 - X - 070
	1/8" BSPP	0167 - 421 28 - X - 070	0167 - 422 28 - X - 070
	1/8" NPT	0167 - 421 04 - X - 070	0167 - 422 04 - X - 070
14.5 - 145 ± 7.25 psi (1 - 10 ± 0.5 bar)	M 10x1 taper	0167 - 405 01 - X - 013	0167 - 406 01 - X - 016
	1/8" BSPT	0167 - 405 12 - X - 014	0167 - 406 12 - X - 017
	1/2" BSPT	0167 - 405 07 - X - 015	0167 - 406 07 - X - 018
	1/4" BSPP	0167 - 405 03 - X - 041	0167 - 406 03 - X - 042
	1/8" BSPP	0167 - 405 28 - X - 005	0167 - 406 28 - X - 006
	1/8" NPT	0167 - 405 04 - X - 020	0167 - 406 04 - X - 024
145 - 290 ± 14.5 psi (10 - 20 ± 1 bar)	M 10x1 taper	0167 - 409 01 - X - 025	0167 - 410 01 - X - 028
	1/8" BSPT	0167 - 409 12 - X - 026	0167 - 410 12 - X - 029
	1/2" BSPT	0167 - 409 07 - X - 027	0167 - 410 07 - X - 030
	1/4" BSPP	0167 - 409 03 - X - 045	0167 - 410 03 - X - 046
	1/8" BSPP	0167 - 409 28 - X - 009	0167 - 410 28 - X - 010
	1/8" NPT	0167 - 409 04 - X - 036	0167 - 410 04 - X - 040

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Water, Brake fluid, hydrogen, oxygen, acetylene, etc.	2
EPDM-W270	Drinking water. ≥ 500 psi ($p_{max} \geq 35$ bar)	5
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
Silicone	Water, food products, air, etc. ≥ 500 psi ($p_{max} \geq 35$ bar)	8



Your order number:

0167 - XXX XX - X - XXX



1) Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

Pressure switches hex 27

Changeover with silver or gold contacts



- Switching point can be adjusted when fitted on site¹⁾
- Factory adjustable hysteresis (except types 0140 and 0141)
- High overpressure safety and long service life under harsh conditions
- Operating voltage up to 250 V
- Series 0140 / 0141 with protective insulation
- For ready-wired customized versions refer to chapter M.5, starting at page 62
- For pressure switches with integrated connectors refer to chapter M.2, starting at page 32

¹⁾ Pressure switches can also be supplied preset at factory.
Our preset switches are sealed with lacquer paint, set points are embossed on the housing.

Pressure switches hex 27

Technical details

Temperature resistance of sealing materials	NBR - diaphragm pressure switches, p _{max} = 4,352 / 5,800 psi (300 / 400 bar)	-40 °F ... +212 °F (-40 °C ... +100 °C)
	NBR - diaphragm pressure switch, p _{max} = 1,450 psi (100 bar)	-22 °F ... +212 °F (-30 °C ... +100 °C)
	EPDM	-22 °F ... +248 °F (-30 °C ... +120 °C)
	EPDM-TW (in diaphragm pressure switch)	-4 °F ... +212 °F (-20 °C ... +100 °C)
	FKM (in diaphragm pressure switch)	+23 °F ... 248 °F (-5 °C ... +120 °C)
	FKM (in piston pressure switch)	+5 °F ... +248 °F (-15 °C ... +120 °C)
	FFKM	-4 °F ... +248 °F (-20 °C ... +120 °C)
	Silicone (in diaphragm pressure switch)	-40 °F ... +248 °F (-40 °C ... +120 °C)
	HNBR	-22 °F ... +248 °F (-30 °C ... +120 °C)
Burst pressure (diaphragm pressure switch, overpressure resistance 100 bar)	2,900 psi (200 bar)	
Burst pressure (diaphragm pressure switch, overpressure resistance 400 bar)	10,152 psi (700 bar)	for threads M10, G 1/8, R 1/8, NPT 1/8 and type 0140 up to max. 600 bar)
Burst pressure (Piston pressure switch)	14,500 psi (1,000 bar)	for threads M10, G 1/8, R 1/8, NPT 1/8 and type 0140 up to max. 600 bar)
Switching frequency	200 /min	
Mechanical life expectancy	1,000,000 cycles (for diaphragm pressure switches, life expectancy value only applies for switching pressures to max. 50 bar)	
Pressure rise rate	≤ 14,500 psi/ms (≤ 1,000 bar/s)	
Hysteresis (only adjustable at factory)	Adjustable average value 10 ... 30 % depending on type Types 0140 and 0141 cannot be adjusted	
Vibration resistance	10 g; 5 ... 200 Hz sine wave; DIN EN 60068-2-6	
Shock resistance	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-6, DIN EN 60068-2-29	
Protection class	IP65 with socket device, terminals IP00	
Weight	approx. 100 g	

Switching performance and materials overview

Type	0140	0141	0170	0171	0180	0181	0183	0186	0187	0190	0191	0196	0197
5 ... 24 V DC										●	●	●	●
10 ... 42 V AC/DC			●	●									
10 ... 250 V AC/DC	●	●			●	●	●	●	●				
3 ... 50 mA										●	●	●	●
10 mA ... 2 A	●	●											
10 mA ... 4 A			●	●	●	●	●	●	●				
Gold contacts										●	●	●	●
Silver contacts	●	●	●	●	●	●	●	●	●				
Adjustable hysteresis			●	●	●	●	●	●	●	●	●	●	●
Zinc-plated steel (CrVI-free)	●	●	●	●	●	●	●	●		●	●		
Stainless steel 1.4305								●	●			●	●

Pressure switches hex 27

Electrical values

0140 / 0141

Rated working voltage U_e :	Rated working current I_e	Usage category ¹⁾
250 VAC 50 / 60 Hz	2 A	AC12
24 VDC	2 / 1 A	DC12 / DC13
50 VDC	1 / 0.5 A	DC12 / DC13
75 VDC	0.5 / 0.25 A	DC12 / DC13
125 VDC	0.2 / 0.1 A	DC12 / DC13
250 VDC	0.15 / 0.1 A	DC12 / DC13
Rated insulation voltage U_i :	300 V	
Rated impulse withstand voltage U_{imp} :	4 kV	
Conventional thermal current I_{the} :	5 A	
Switching overvoltage:	< 2.5 kV	
Rated frequency:	DC and 50 / 60 Hz	
Nominal current of short-circuit mechanism:	to 3.5 A	
Rated short-circuit current:	< 350 A	
IP class of protection according to DIN EN 60529:1991+A1:1999:	IP65 with socket device, terminals IP00	
Tightening torque of terminal screws:	< 0.35 Nm	
Connector cross-section:	0.5 - 1.5 mm ²	

0170 / 0171 / 0180 / 0181 / 0183 / 0186 / 0187 / 0190 / 0191 / 0196 / 0197

Rated working voltage U_e :	Rated working current I_e	Usage category ¹⁾
250 VAC 50 / 60 Hz	4 A	AC12
250 VAC 50 / 60 Hz	1 A	AC14
24 VDC	4 / 2 A	DC12 / DC13
50 VDC	2 / 1 A	DC12 / DC13
75 VDC	1 / 0.5 A	DC12 / DC13
125 VDC	0.3 / 0.2 A	DC12 / DC13
250 VDC	0.25 / 0.2 A	DC12 / DC13
Rated insulation voltage U_i :	300 V	
Rated impulse withstand voltage U_{imp} :	2.5 kV	
Conventional thermal current I_{the} :	5 A	
Switching overvoltage:	< 2.5 kV	
Rated frequency:	DC and 50 / 60 Hz	
Nominal current of short-circuit mechanism:	to 5 A	
Rated short-circuit current:	< 350 A	
IP class of protection according to DIN EN 60529:1991+A1:1999:	IP65 with socket device, terminals IP00	

¹⁾ For technical explanations refer to page 9

0140 / 0141

Diaphragm / piston pressure switches 250 V

- Protection class 2, protective insulation
- Zinc-plated steel (CrVI-free)
- Changeover with silver contacts
- Overpressure safety up to 4,300 psi / 8,700 psi (300 / 600 bar)¹⁾⁾
- Includes polyamide cap, protection class IP65

p _{max} in bar	Adjustment range in bar	Tolerance at room temperature in bar	Male thread	Article number
----------------------------	----------------------------	---	-------------	----------------

0140 Diaphragm pressure switches with screw terminals

4,350 psi (300 bar)	0.435 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	1/4" BSPP	0140 - 457 03 - X - 003
			1/8" NPT	0140 - 457 04 - X - 300
			1/4" NPT	0140 - 457 09 - X - 305
			7/16-20 UNF	0140 - 457 20 - X - 310
			9/16-18 UNF	0140 - 457 21 - X - 315
	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)	1/4" BSPP	0140 - 458 03 - X - 006
			1/8" NPT	0140 - 458 04 - X - 301
			1/4" NPT	0140 - 458 09 - X - 306
			7/16-20 UNF	0140 - 458 20 - X - 311
			9/16-18 UNF	0140 - 458 21 - X - 316
	145 - 290 psi (10 - 20 bar)	± 14.50 psi (± 1.0 bar)	1/4" BSPP	0140 - 459 03 - X - 009
			1/8" NPT	0140 - 459 04 - X - 302
			1/4" NPT	0140 - 459 09 - X - 307
			7/16-20 UNF	0140 - 459 20 - X - 312
			9/16-18 UNF	0140 - 459 21 - X - 317
	290 - 725 psi (20 - 50 bar)	± 29 psi (± 2.0 bar)	1/4" BSPP	0140 - 461 03 - X - 012
			1/8" NPT	0140 - 461 04 - X - 303
			1/4" NPT	0140 - 461 09 - X - 308
			7/16-20 UNF	0140 - 461 20 - X - 313
			9/16-18 UNF	0140 - 461 21 - X - 318

0141 Piston pressure switches with screw terminals

8,700 psi (600 bar)	725 - 2,175 psi (50 - 150 bar)	± 72.5 psi (± 5.0 bar)	1/4" BSPP	0141 - 460 03 - X - 003
			1/8" NPT	0141 - 460 04 - X - 304
			1/4" NPT	0141 - 460 09 - X - 309
			7/16-20 UNF	0141 - 460 20 - X - 314
			9/16-18 UNF	0141 - 460 21 - X - 319

Seal material – Application areas

NBR	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 53 for the temperature range and application thresholds of sealing materials.



Article number: 014X - XXX XX - X - XXX

M.4

hex 27

soco



¹⁾⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

RoSH III
2020-209
compliant

CE

0170 / 0171

Diaphragm / piston pressure switches up to 42 V

- Zinc-plated steel (CrVI-free)
- Snap action with silver contacts
- Overpressure safety up to 1,450 / 5,801 / 10,152 psi (100 / 400 / 700 bar)¹⁾
- Differential adjustable at factory

P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
-----------------------------------	----------------------------------	---	-------------	--------------

0170 Diaphragm pressure switches with spade terminal



1,450 psi ¹⁾ (100 bar)	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/8" NPT 1/4" NPT 7/16-20 UNF 9/16-18 UNF	0170 - 457 01 - X - 001 0170 - 457 02 - X - 002 0170 - 457 03 - X - 003 0170 - 457 04 - X - 318 0170 - 457 09 - X - 314 0170 - 457 20 - X - 301 0170 - 457 21 - X - 302
--------------------------------------	-------------------------------------	---------------------------	--	---

	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/8" NPT 1/4" NPT 7/16-20 UNF 9/16-18 UNF	0170 - 458 01 - X - 040 0170 - 458 02 - X - 041 0170 - 458 03 - X - 042 0170 - 458 04 - X - 343 0170 - 458 09 - X - 340 0170 - 458 20 - X - 341 0170 - 458 21 - X - 342
--	--------------------------------	---------------------------	--	---

5,801 psi ¹⁾ (400 bar)	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/8" NPT 1/4" NPT 7/16-20 UNF 9/16-18 UNF	0170 - 459 01 - X - 007 0170 - 459 02 - X - 008 0170 - 459 03 - X - 009 0170 - 459 04 - X - 320 0170 - 459 09 - X - 316 0170 - 459 20 - X - 305 0170 - 459 21 - X - 306
--------------------------------------	--------------------------------	---------------------------	--	---

	145 - 1,450 psi (10 - 100 bar)	± 43.5 - 72.5 psi (± 3.0 - 5.0 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/8" NPT 1/4" NPT 7/16-20 UNF 9/16-18 UNF	0170 - 461 01 - X - 010 0170 - 461 02 - X - 011 0170 - 461 03 - X - 012 0170 - 461 04 - X - 321 0170 - 461 09 - X - 317 0170 - 461 20 - X - 307 0170 - 461 21 - X - 308
--	-----------------------------------	--	--	---

0171 Piston pressure switches with spade terminal

10,152 psi ¹⁾ (700 bar)	725 - 2,900 psi (50 - 200 bar)	± 72.5 psi (± 5.0 bar)	M 10x1 taper M 12x1.5 cyl. 1/4" BSPP 1/8" NPT 1/4" NPT 7/16-20 UNF 9/16-18 UNF	0171 - 460 01 - X - 001 0171 - 460 02 - X - 002 0171 - 460 03 - X - 003 0171 - 460 04 - X - 304 0171 - 460 09 - X - 303 0171 - 460 20 - X - 301 0171 - 460 21 - X - 302
---------------------------------------	-----------------------------------	---------------------------	--	---

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 53 for the temperature range and application thresholds of sealing materials.



Your order number:

017X - XXX XX - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ Excluding the thread sizes G 1/8, R 1/8, NPT 1/8 and M 10x1 cylindrical/conical.

³⁾ HNBR diaphragm not available for pressure ranges between 0.3 - 1.5 bar.

Diaphragm / piston pressure switches up to 250 V

- Zinc-plated steel (CrVI-free)
- Snap action with silver contacts
- Overpressure safety up to 1,450 / 5,801 / 10,152 psi (100 / 400 / 700 bar)¹⁾
- Differential adjustable at factory

M.4

hex 27

P_{max} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
---------------------------	----------------------------------	---	-------------	--------------

0180 Diaphragm pressure switches with spade terminal

1,450 psi ¹⁾ (100 bar)	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	M 10x1 taper	0180 - 457 01 - X - 001
			M 12x1.5 cyl.	0180 - 457 02 - X - 002
			1/4" BSPP	0180 - 457 03 - X - 003
			1/8" NPT	0180 - 457 04 - X - 318
			1/4" NPT	0180 - 457 09 - X - 314
			7/16-20 UNF	0180 - 457 20 - X - 301
			9/16-18 UNF	0180 - 457 21 - X - 302

14.5 - 145 psi (1 - 10 bar)		± 7.25 psi (± 0.5 bar)	M 10x1 taper	0180 - 458 01 - X - 040
			M 12x1.5 cyl.	0180 - 458 02 - X - 041
			1/4" BSPP	0180 - 458 03 - X - 042
			1/8" NPT	0180 - 458 04 - X - 343
			1/4" NPT	0180 - 458 09 - X - 340
			7/16-20 UNF	0180 - 458 20 - X - 341
			9/16-18 UNF	0180 - 458 21 - X - 342

5,801psi ¹⁾ (400 bar)	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	M 10x1 taper	0180 - 459 01 - X - 007
			M 12x1.5 cyl.	0180 - 459 02 - X - 008
			1/4" BSPP	0180 - 459 03 - X - 009
			1/8" NPT	0180 - 459 04 - X - 320
			1/4" NPT	0180 - 459 09 - X - 311
			7/16-20 UNF	0180 - 459 20 - X - 305
			9/16-18 UNF	0180 - 459 21 - X - 306

145 - 1,450 psi (10 - 100 bar)		$\pm 43.5 - 72.5$ psi ($\pm 3.0 - 5.0$ bar)	M 10x1 taper	0180 - 461 01 - X - 010
			M 12x1.5 cyl.	0180 - 461 02 - X - 011
			1/4" BSPP	0180 - 461 03 - X - 012
			1/8" NPT	0180 - 461 04 - X - 321
			1/4" NPT	0180 - 461 09 - X - 312
			7/16-20 UNF	0180 - 461 20 - X - 307
			9/16-18 UNF	0180 - 461 21 - X - 308

0181 Piston pressure switches with spade terminal


10,152 psi ¹⁾ (700 bar)	725 - 2,900 psi (50 - 200 bar)	± 72.5 psi (± 5.0 bar)	M 10x1 taper	0181 - 460 01 - X - 001
			M 12x1.5 cyl.	0181 - 460 02 - X - 002
			1/4" BSPP	0181 - 460 03 - X - 003
			1/8" NPT	0181 - 460 04 - X - 304
			1/4" NPT	0181 - 460 09 - X - 303
			7/16-20 UNF	0181 - 460 20 - X - 301
			9/16-18 UNF	0181 - 460 21 - X - 302

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM(Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR ²⁾	Chemical acids, diluted alkalis, ketones, ester's, alcohols	9

Refer to page 53 for the temperature range and application thresholds of sealing materials.

Your order number: 018X - XXX XX - X - XXX

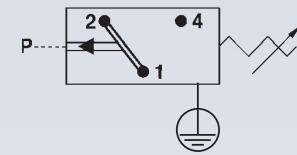

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ HNBR diaphragm not available for pressure ranges between 4.35 - 21.75 psi (0.3 - 1.5 bar).

M.4

hex 27

0183

Piston pressure switches up to 250 V

- Zinc-plated steel (CrVI-free)
- Snap action with silver contacts
- Overpressure safety up to 8,700 psi (600 bar)¹⁾, Differential adjustable at factory
- Adjustment range: 1,450 - 5,800 psi (100 - 400 bar)
- Height only 51 mm

Thread similar to ISO 6149-3
(including O-ring for sealing)



Order number	Male thread	Tolerance in psi (bar) at room temperature	Adjustment range in psi (bar)	Pressure max. in psi (bar)
--------------	-------------	--	-------------------------------	----------------------------

0183 Piston pressure switches with spade terminal

8,700 psi (600 bar) ¹⁾	1,450 - 4,350 psi (100 - 300 bar)	± 145 psi (± 10.0 bar)	M 14x1.5	0183 - 462 45 - X - 051
	2,900 - 5,800 psi (200 - 400 bar)			0183 - 463 45 - X - 061

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Your order number:

0183 - 46X 45 - X - XXX

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

Accessory ▶

Not included in the delivery.
Please order separately.

Thread adapters

from M 14 x 1.5		
to 1/4 BSPP	to M12 x 1.5	to NPT 1/8

Order number ▶

1-1-83-420-006

1-1-83-420-007

1-1-83-420-008

0186 / 0187

Diaphragm / piston pressure switches up to 250 V
with stainless steel housing

- Stainless steel housing (AISI 303 / 1.4305)
- Snap action with silver contacts
- Overpressure safety up to 5,801 / 10,152 psi (400 / 700 bar)¹⁾
(EPDM-W270 and silicone diaphragm up to 500 psi (35 bar)²⁾
- Differential adjustable at factory

P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
-----------------------------------	----------------------------------	---	-------------	--------------

0186 Diaphragm pressure switches with spade terminal

1,450 psi (100 bar)	4.3 - 21.7 psi (0.3 - 1.5 bar)	2.9 psi (± 0.2 bar)	1/4 BSPP DIN 3852-2-A	0186 - 446 60 - X - 001
	14.5 - 145 psi (1-10 bar)	7.25 psi (± 0.5 bar)		0186 - 458 60 - X - 050
5,800 psi (400 bar) ¹⁾⁺²⁾	7.25 - 72.5 psi (0.5 - 5 bar)	± 4.35 psi (± 0.3 bar)	1/4 BSPP	0186 - 457 03 - X - 003
	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)		0186 - 458 03 - X - 006
	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)		0186 - 459 03 - X - 009
	145 - 1,450 psi (10 - 100 bar)	± 43.5 - 72.5 psi (± 3.0 - 5.0 bar)		0186 - 461 03 - X - 012

0187 Piston pressure switches with spade terminal

10,152 psi ¹⁾ (700 bar) ¹⁾	725- 2,900 psi (50 - 200 bar)	± 7.25 psi (± 0.5 bar)	1/4 BSPP	0187 - 460 03 - X - 003
8,700 psi (600 bar)			1/8" NPT	0187 - 460 04 - X - 304

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
EPDM-W270	Drinking water (only in diaphragm, P _{max} ≤ 500 psi / 35 bar)	5
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
Silicone	Water, food products, air, etc (only in diaphragm (P _{max} ≤ 500 psi / 35 bar))	8
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 53 for the temperature range and application thresholds of sealing materials.




Your order number: 018X - XXX 03 - X - XXX

soco

M.4

hex 27

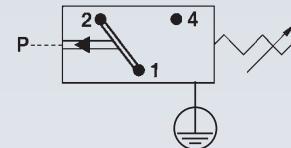

1) Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.
2) Functional safety and reliability only up to max. 35 bar with EPDM-TW and silicone diaphragm.
3) Including the thread sizes 1/8 BSPP, 1/8 BSPT and M 10x1 cylindrical/conical.



0190 / 0191

Diaphragm / piston pressure switches up to 24 V with gold contacts

- Zinc-plated steel (CrVI-free), with spade terminal
- Snap action with gold contacts
- Overpressure safety up to 1,450 / 5,801 / 10,152 psi (100 / 400 / 700 bar)¹⁾
- Differential adjustable at factory

P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
-----------------------------------	----------------------------------	---	-------------	--------------

0190 Diaphragm pressure switches with spade terminal



1,450 psi ¹⁾ (100 bar)	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	M 10 x1 taper	0190 - 457 01 - X - 001
			M 12x1.5 cyl.	0190 - 457 02 - X - 002
			1/4" BSPP	0190 - 457 03 - X - 003
			1/4" NPT	0190 - 457 09 - X - 314
			1/8" NPT	0190 - 457 04 - X - 318
			7/16-20 UNF	0190 - 457 20 - X - 301
			9/16/18 UNF	0190 - 457 21 - X - 302

14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)		M 10 x1 taper	0190 - 458 01 - X - 040
			M 12x1.5 cyl.	0190 - 458 01 - X - 041
			1/4" BSPP	0190 - 458 03 - X - 042
			1/4" NPT	0190 - 458 09 - X - 340
			1/8" NPT	0190 - 458 04 - X - 343
			7/16-20 UNF	0190 - 458 20 - X - 341
			9/16/18 UNF	0190 - 458 21 - X - 342

5,801 psi ¹⁾ (400 bar)	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	M 10 x1 taper	0190 - 459 01 - X - 007
			M 12x1.5 cyl.	0190 - 459 01 - X - 008
			1/4" BSPP	0190 - 459 03 - X - 009
			1/4" NPT	0190 - 459 09 - X - 316
			1/8" NPT	0190 - 459 04 - X - 320
			7/16-20 UNF	0190 - 459 20 - X - 305
			9/16/18 UNF	0190 - 459 21 - X - 306

145 - 1,450 psi (10 - 100 bar)	$\pm 43.5 - 72.5$ psi ($\pm 3.0 - 5.0$ bar)		M 10 x1 taper	0190 - 461 01 - X - 010
			M 12x1.5 cyl.	0190 - 461 02 - X - 011
			1/4" BSPP	0190 - 461 03 - X - 012
			1/4" NPT	0190 - 461 09 - X - 317
			1/8" NPT	0190 - 461 04 - X - 321
			7/16-20 UNF	0190 - 461 20 - X - 307
			9/16/18 UNF	0190 - 461 21 - X - 308

0191 Piston pressure switches with spade terminal

10,152 psi ¹⁾ (700 bar)	725 - 2,900 psi (50 - 200 bar)	± 72.5 psi (± 5.0 bar)	M 10 x1 taper	0191 - 460 01 - X - 001
			M 12x1.5 cyl.	0191 - 460 02 - X - 002
			1/4" BSPP	0191 - 460 03 - X - 003
			1/4" NPT	0191 - 460 09 - X - 303
			1/8" NPT	0191 - 460 04 - X - 304
			7/16-20 UNF	0191 - 460 20 - X - 301
			9/16/18 UNF	0191 - 460 21 - X - 302

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Chemical acids, diluted alkalis, ketones, ester's, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 53 for the temperature range and application thresholds of sealing materials.

019X - XXX XX - X - XXX

Your order number:



1) Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.
2) Excluding the thread sizes G 1/8, R 1/8, NPT 1/8 and M 10x1 cylindrical/conical.
3) HNBR diaphragm not available for pressure ranges between 0.3 - 1.5 bar.

0196 / 0197

Diaphragm / piston pressure switches up to 24 V with stainless steel housing

- Stainless steel housing (AISI 303 / 1.4305)
- Fitted with snap action contact and gold contacts
- Overpressure safety up to 5,801 / 10,152 psi (400 / 700 bar)¹⁾
(EPDM-W270 and silicone diaphragm up to 500 psi / 35 bar)²⁾
- Differential adjustable at factory

P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
-----------------------------------	----------------------------------	---	-------------	--------------

0196 Diaphragm pressure switches with spade terminal

1,450 psi (100 bar)	4.3 - 21.7 psi (0.3 - 1.5 bar)	2.9 psi (± 0.2 bar)	1/4 BSPP DIN 3852-2-A	0196 - 446 60 - X - 001
	14.5 - 145 psi (1-10 bar)	7.25 psi (± 0.5 bar)		0196 - 458 60 - X - 050

5,801 psi ¹⁾⁺²⁾ (400 bar) ¹⁾⁺²⁾	7.25 - 72.5 psi (0.5 - 5 bar)	± 4.35 psi (± 0.3 bar)	1/4 BSPP	0196 - 457 03 - X - 003
	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)		0196 - 458 03 - X - 006
	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)		0196 - 459 03 - X - 009
	145 - 1,450 psi (10 - 100 bar)	± 43.5 - 72.5 psi (± 3.0 - 5.0 bar)		0196 - 461 03 - X - 012

0197 Piston pressure switches with spade terminal

10,152 psi ¹⁾ (700 bar) ¹⁾	725- 2,900 psi (50 - 200 bar)	± 7.25 psi (± 0.5 bar)	1/4 BSPP	0197 - 460 03 - X - 003
			1/8" NPT	0197 - 460 04 - X - 304

Seal material – Application areas


NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Water, Brake fluid, hydrogen, oxygen, acetylene, etc.	2
EPDM-TW	Drinking water (only in diaphragm, p _{max} ≤ 500 psi / 35 bar)	5
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, ester's, alcohols	6
Silicone	Water, food products, air, etc (only in diaphragm, p _{max} ≤ 500 psi / 35 bar)	8
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 53 for the temperature range and application thresholds of sealing materials.

M.4

hex 27

soco

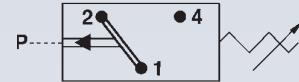

Your order number: 019X - XXX 03 - X - XXX

1) Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

2) Functional safety and reliability only up to max. 35 bar with EPDM-TW and silicone diaphragm.

3) Including the thread sizes G 1/8, R 1/8 and M 10x1 cylindrical/conical.



M.5

hex 24 / 27
Ready-wired

hex 24 / hex 27 ready-wired pressure switches

Custom designs



- Ready-wired pressure switches hex 24 and hex 27, available with all commercial plug-in types and individual cable length.
- The technical details of ready-wired pressure switch types correspond to those of the same standard pressure switch types. Different technical details will be agreed with the customer.
- Pressure switches usually have protection class IP65. Our ready-wired pressure switches attain IP67 or IP6K9K. This is a requirement particularly in commercial vehicle construction, mobile hydraulics and similarly demanding applications.
- Ready-wired pressure switches enable plug connectors to be moved in climatically non-critical and low-vibration areas.
- The modular layout also enables the production of lower volumes.
- The switching point for ready-wired pressure switches is factory-set to a fixed value.
Exception: The switching point of the 0240/0241 can be adjusted on site even after the sealing process.

hex 24 / 27


Custom designs

All hex 24 and hex 27 pressure switches can be individually wired according to customer needs.

Standard types suitable for ready-wiring

0163 / 0166	0168	0170 / 0171	0140 / 0141
0164		0180 / 0181	
0167		0190 / 0191	
0169		0196 / 0197	
			
Technical details page 41	Technical details page 41	Technical details page 53	Technical details page 53
The switching point is factory preset and cannot be changed subsequently, so please state the switching point when ordering.			The switching point is adjustable even after sealing.

A selection from the wide variety of connectors we can supply

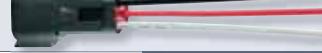Connector to DIN 72585-A1-4.1	
AMP Junior Timer®	
Cannon connector	
AMP Superseal 1.5°	
Packard connector (Weather Pack® 2-wire)	
Packard connector (Weather Pack® 3-wire)	
Deutsch connector (DT 06 - 2S)	
Deutsch connector (DT 04 - 2P)	
Deutsch connector (DT 04 - 3P)	

M.5

hex 24 / 27 Ready-wired

Please note our detailed information on

- CE marking
- protection class
- custom applications

For gas applications below 10 bar (145 PSI) we generally recommend venting the housing for encapsulated pressure switches.

M.5

hex 24 / 27
Ready-wired

0240 / 0241

Diaphragm / piston pressure switches, hex 27

Technical data

Refer to page 54 for electrical values

Rated working voltage:	max. 42 V / 250 V depending on connection
Rated working current:	max. 2 A
Protection class:	2, protective insulation
Temperature resistance of sealing materials:	NBR (diaphragm pressure switch) -40 °F...+212 °F (-40 °C...+100 °C)
	NBR (piston pressure switch) -22 °F...+212 °F (-30 °C...+100 °C)
	EPDM -22 °F...+248 °F (-30 °C...+120 °C)
	FKM (Viton®) (in diaphragm pressure switch) +23 °F...+248 °F (-5 °C...+120 °C)
	FKM (Viton®) (in piston pressure switch) +5 °F...+248 °F (-15 °C...+120 °C)
	FFKM +5 °F...+248 °F (-15 °C...+120 °C)
	Silicone -4 °F...+248 °F (-20 °C...+120 °C)
	HNBR -22 °F...+248 °F (-30 °C...+120 °C)
Switching frequency:	200 / min.
Mechanical life expectancy:	1,000,000 cycles (for diaphragm pressure switches, life expectancy value only applies for switching pressures to max. 725 psi (50 bar))
Pressure rise rate:	≤ 14,500 psi/s (1,000 bar/s)
Differential:	Average value 10 – 20 % (not adjustable)
Vibration resistance:	10 g / 5 – 200 Hz sine wave, DIN EN 60068-2-6
Shock resistance:	294 m/s² 14 ms half sine wave, DIN EN 60068-2-6
Materials:	Housing material: zinc-plated steel Protective cap: anodised aluminium
Protection class:	IP67
Cable:	Standard length 6.5 ft (2 m) with wire end sleeves
Weight:	approx. 4.5 oz (120 g)

Options for 0240 / 0241

- Other cable lengths and plug-in systems
- Fixed switching point, factory-set, set point embossed on housing
- Alternative housing materials and connection threads
- Other sealing materials, such as silicone for diaphragm pressure switches

0240 / 0241

Diaphragm / piston pressure switches, hex 27

- Zinc-plated steel (CrVI-free)
- Overpressure safety up to 4,350 / 8,700 psi (300 / 600 bar)¹⁾
- Switching point can also be adjusted during use
- Protection class 2, protective insulation

P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Male thread	Order number
-----------------------------------	----------------------------------	---	-------------	--------------

0240 Diaphragm pressure switches

4,350 psi ¹⁾ (300 bar) ¹⁾	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	1/4" BSPP	0240 - 457 03 - X - 003
			1/8" NPT	0240 - 457 04 - X - 300
			1/4" NPT	0240 - 457 09 - X - 305
			7/16-20 UNF	0240 - 457 20 - X - 310
4,350 psi ¹⁾ (300 bar) ¹⁾	14.5 - 145 psi (1- 10 bar)	± 7.25 psi (± 0.5 bar)	9/16-18 UNF	0240 - 457 21 - X - 315
			1/4" BSPP	0240 - 458 03 - X - 006
			1/8" NPT	0240 - 458 04 - X - 301
			1/4" NPT	0240 - 458 09 - X - 306
4,350 psi ¹⁾ (300 bar) ¹⁾	145 - 290 psi (10 - 20 bar)	± 14.5 psi (± 1.0 bar)	7/16-20 UNF	0240 - 458 20 - X - 311
			9/16-18 UNF	0240 - 458 21 - X - 316
			1/4" BSPP	0240 - 459 03 - X - 009
			1/8" NPT	0240 - 459 04 - X - 302
4,350 psi ¹⁾ (300 bar) ¹⁾	290 - 725 psi (20 - 50 bar)	± 29.0 psi (± 2.0 bar)	1/4" NPT	0240 - 459 09 - X - 307
			7/16-20 UNF	0240 - 459 20 - X - 312
			9/16-18 UNF	0240 - 459 21 - X - 317
			1/4" BSPP	0240 - 461 03 - X - 012
8,700 psi ¹⁾ (600 bar) ¹⁾	725 - 2,175 psi (50 - 150 bar)	± 72.5 psi (± 5.0 bar)	1/8" NPT	0240 - 461 04 - X - 303
			1/4" NPT	0240 - 461 09 - X - 308
			7/16-20 UNF	0240 - 461 20 - X - 313
			9/16-18 UNF	0240 - 461 21 - X - 318

0241 Piston pressure switches

8,700 psi ¹⁾ (600 bar) ¹⁾	725 - 2,175 psi (50 - 150 bar)	± 72.5 psi (± 5.0 bar)	1/4" BSPP	0241 - 460 03 - X - 003
			1/8" NPT	0241 - 460 04 - X - 304
			1/4" NPT	0241 - 460 09 - X - 309
			7/16-20 UNF	0241 - 460 20 - X - 314
			9/16-18 UNF	0241 - 460 21 - X - 319

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen ²⁾ , etc.	1
EPDM	EPDM Brake fluid, water, hydrogen, oxygen, acetylene ²⁾ , etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9


Refer to page 64 for the temperature range and application thresholds of sealing materials.

M.5

hex 24 / 27
Ready-wired



M

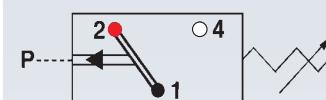

Contact assignment:
 ● 1 = Black
 ● 2 = Red
 ○ 4 = White

Your order number: 024X - XXX XX - X - XXX

1) Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.
 2) For gas applications below 10 bar (145 PSI) we generally recommend venting the housing for encapsulated pressure switches. Please contact us so we can offer you a suitable solution.



Pressure switches **PLUS**

with integrated connector and supplementary functions

Hex 24, NC or NO, voltage up to 42 V



Intelligent, supplementary electronic functions broaden the capabilities of mechanical pressure switches by adding numerous features:

- NAMUR diagnostic function (fail-safe) with short-circuit and cable break detection
- Overvoltage protection for prolonging the contact service life
- Active reduction of EMC emissions
- Temperature-controlled switching function (e.g. cold start, i.e. inactive switching function until a certain temperature is reached)
- In-rush current limitation (overload limitation of the switching contacts when switching load is too high, e.g. lamp load, motor start-up)
- Display of the switching status with LED
- Overload protection with self-resetting electrical fuse
- High protection class up to IP67 and IP6K9K
- Switching point can be set on site with adjusting screw in the connector¹⁾

¹⁾ Pressure switches can also be supplied preset at factory.
The switching point is embossed onto pressure switches preset at factory.

Pressure switches **PLUS**

with integrated connector and supplementary functions

M.6
hex 24
PS **PLUS**



Overview of possible supplementary functions

Circuit	Symbol	Function	Application	Code for order number
Resistor Resistor circuit to NAMUR, refer to page 68		<ul style="list-style-type: none"> Diagnostic function (fail-safe) with short-circuit and cable break detection 	Safety systems such as brake systems, hydrostatic steering systems and fire extinguisher systems	04XX - R
Varistor Circuit with varistor for overvoltage limitation, refer to page 69		<ul style="list-style-type: none"> Overshoot protection for the prolonging of contact service life under conditions of inductive load and long connection length Active reduction of EMC emissions on switching of the pressure switch 	The flyback voltage is effectively limited if the pressure switch interrupts the current in circuits with magnetic valves, relays or motors	04XX - V
NTC thermistor		<ul style="list-style-type: none"> Temperature-controlled switch behaviour (e.g. filter monitoring) In-rush current limitation, e.g. for motors („soft start“) and in PSUs On-delay (in series) and dropout delay (in parallel) for relays 	For a cold start in a mobile hydraulic application, a pressure switch used for filter monitoring may activate due to the high viscosity of the oil at low temperatures, and signals a blocked filter. The NTC thermistor integrated in the pressure switch means the circuit remains interrupted until the pressure switch, and so also the thermistor, have warmed up; not until then does the circuit become low impedance.	04XX - N
PTC thermistor		<ul style="list-style-type: none"> Protection against overcurrent In-rush current limitation, such as for filament lamps and condenser load 	E.g. brake light monitoring in mobile hydraulics: The in-rush current can be up to 8 times the nominal current of a filament lamp. This high current is only reduced at the moment of switch-on, thereby protecting the contact system of the pressure switch from overload.	upon request ¹⁾
LED		<ul style="list-style-type: none"> Displays the switching status by an integrated LED 	Direct switching status display for applications in which the controller is physically remote; e.g. in an automation system or permanently installed extinguishing or gas systems.	upon request ¹⁾
Multifuse, PPTC		<ul style="list-style-type: none"> Protection against overcurrent Self-resetting: After removing the short-circuit (cooling the MF) the fuse resets 	In applications which need to be protected against overcurrent e.g. electronic applications	upon request ¹⁾

M


¹⁾ Available from a minimum order quantity of 2,000 pieces.

Pressure switches PLUS

Resistor circuit to NAMUR, with gold contacts
(pressure switches with part numbers 04XX-R)

The additional circuitry of the switching contact of the pressure switch enables not only the states to be shown enabled and disabled, it also enables interrogation for line breaks (standby current principle) and short-circuits in the electric circuit.

The resistor circuitry is designed such that the NAMUR specifications can be satisfied. An operating voltage of 8.2 VDC must be provided for NAMUR-compliant operation. A resistance of 11 kΩ is present in the circuit when the switch contact is open. The resistance is 1 kΩ when the switch contact is closed. Other resistance values can also be realised.

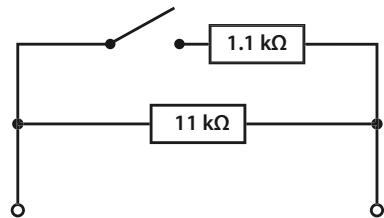

Switching status	Closed	Open	Short-circuit SC	Line Break LB
Contact				
Resistor				
Current				
Example: Supply voltage 12VDC	$I = \frac{U_{cc}}{1\text{ k}\Omega} = \frac{12\text{ V}}{1\text{ k}\Omega} = 12\text{ mA}$	$I = \frac{U_{cc}}{11\text{ k}\Omega} = \frac{12\text{ V}}{11\text{ k}\Omega} = 1.1\text{ mA}$	$I \gg \frac{U_{cc}}{1\text{ k}\Omega} \quad I \gg \frac{12\text{ V}}{1\text{ k}\Omega} \quad I \gg 12\text{ mA}$	$I = 0\text{ mA}$

Technical details	
Rated working voltage Ucc:	8.2 VDC ... 30 VDC
Maximum rated operating current:	$\leq 30\text{ mA}$
Switching capacity:	< 1 W
Switching frequency:	200 / min.
Mechanical and electrical service life:	1,000,000 cycles
Permitted pressure rise rate:	$\leq 1,000\text{ bar / s}$
Vibration resistance:	10 g; 5 ... 200 Hz sine wave; DIN EN 60068-2-6
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27
Protection class:	Refer to the table on the following pages: According to manufacturer specifications for the respective plug-in system (only when plugged in), otherwise IP00.

Pressure switches **PLUS**

Circuit with varistor for overvoltage limitation
(pressure switches with part numbers 04XX-V)

M.6
hex 24
PS **PLUS**



M

The switching off inductive consumers such as valves, relays and motors by a mechanical pressure switch generates a high voltage peak. The cause for this is the energy stored in the magnetic field of inductance, which entails an induction voltage when the current is changed.

The induction voltage (or flyback voltage) is defined as follows:


$$U_L = -L \frac{di}{dt}$$

where L = Inductance
 di/dt = Change of current over time

This induction voltage can result in discharge effects and the occurrence of arcs at the opening contacts. This gives rise to localised, very hot places on the contact surfaces which are able to fuse the contact material. Increasing load damages the contact surface and the contact transition resistance rises. This can result in sporadic interruption, adhesion and welding of the contacts, and so lead to complete failure of the pressure switch.

The effect of induction voltage is countered by means of a varistor – a resistor which reduces its ohmic resistance with increasing connection voltage. The induction voltage is limited to the responding value of the varistor, and the energy is converted to heat in the varistor.

Varistors are suitable for DC and AC in equal measure. In DC circuits, the response voltage of the varistor must be greater than the highest value of the supply voltage. In AC circuits, it must be 1.5 times the peak-to-peak value of the supply voltage.

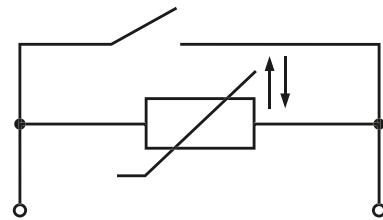

Technical details

Rated operating voltage Ucc:	10 V ... 24 ... 30 VDC / 10 V ... 21 VAC
Rated operating current, ohmic load DC12 / AC12:	10 mA ... 4 A
Rated operating current, inductive load DC13 / AC13:	10 mA ... 1 A
AC / DC switching capacity:	< 100 W / 100 VA
Switching frequency:	200 / min.
Varistor response voltage:	41 VDC ± 10 % at 1 mA
Maximum varistor energy:	0.4 J (10/1000 µs); 0.3 J (2 ms)
Maximum varistor peak current:	120 A (8/20 µs, one-off loading), 60 A (8/20 µs, dual loading)
Mechanical service life:	1,000,000 cycles
Permitted pressure rise rate:	≤ 1,000 bar / s
Vibration resistance:	10 g; 5 – 200 Hz sine wave; DIN EN 60068-2-6
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27
Protection class:	Refer to the table on the following pages: According to manufacturer specifications for the respective plug-in system (only when plugged in), otherwise IP00.

0410/0412/0414/0416/0418/0422/0424

Diaphragm pressure switches, up to 42 V
with supplementary functions

- Zinc-plated steel (CrVI-free)
- Overpressure safety up to 4,350 psi (300 bar)¹⁾
- Burst pressure safety up to 5,800 psi (400 bar)¹⁾

Plug-in types for diaphragm pressure switches

	0410 / 0411 Deutsch DT04-2P IP67, IP6K9K
--	--

	0412 / 0413 AMP Superseal 1.5° IP67
--	---

	0414 / 0415 Packard MetriPack 280° IP67
--	---

	0416 / 0417 Deutsch DT04-3P IP67, IP6K9K
--	--

	0418 / 0419 AMP Junior Timer® IP65, IPx4K
--	---

	0422 / 0423 M12x1 DIN EN 61076-2-101-A IP67
--	---

	0424 / 0425 M12x1 DIN EN 60947-5-2 IP67
--	---

Deutsch DT04-2P	0410 - XXX XX - X - 001
AMP Superseal 1.5°	0412 - XXX XX - X - 001
Packard MetriPack 280	0414 - XXX XX - X - 001
Deutsch DT04-3P	0416 - XXX XX - X - 001
AMP Junior Timer®	0418 - XXX XX - X - 001
M12x1 DIN EN 61076-2-101-A (PIN 1+3)	0422 - XXX XX - X - 001
M12x1 DIN EN 60947-5-2 (PIN 1+2 / PIN 1+4)	0424 - XXX XX - X - 001

Adjustment range (tolerance at room temperature)	Male thread	Article number NO → :	Article number NC → :
---	----------------	---------------------------	---------------------------

04XX Diaphragm pressure switches

1.45 - 14.5 ± 2.90 psi 0.1 - 1 (± 0.2) bar	M 10x1 taper	04XX - X 03 01 - X - 001	04XX - X 04 01 - X - 002
	1/4" BSPP	04XX - X 03 03 - X - 001	04XX - X 04 03 - X - 002
	1/8" NPT	04XX - X 03 04 - X - 001	04XX - X 04 04 - X - 002
	1/4" NPT	04XX - X 03 09 - X - 001	04XX - X 04 09 - X - 002
	7/16-20 UNF	04XX - X 03 20 - X - 001	04XX - X 04 20 - X - 002
	9/16-18 UNF	04XX - X 03 21 - X - 001	04XX - X 04 21 - X - 002
7.25 - 43.5 ± 4.35 psi 0.5 - 3 (± 0.3) bar	M 10x1 taper	04XX - X 23 01 - X - 001	04XX - X 24 01 - X - 002
	1/4" BSPP	04XX - X 23 03 - X - 001	04XX - X 24 03 - X - 002
	1/8" NPT	04XX - X 23 04 - X - 001	04XX - X 24 04 - X - 002
	1/4" NPT	04XX - X 23 09 - X - 001	04XX - X 24 09 - X - 002
	7/16-20 UNF	04XX - X 23 20 - X - 001	04XX - X 24 20 - X - 002
	9/16-18 UNF	04XX - X 23 21 - X - 001	04XX - X 24 21 - X - 002
14.5 - 145 ± 7.25 psi 1 - 10 (± 0.5) bar	M 10x1 taper	04XX - X 07 01 - X - 001	04XX - X 08 01 - X - 002
	1/4" BSPP	04XX - X 07 03 - X - 001	04XX - X 08 03 - X - 002
	1/8" NPT	04XX - X 07 04 - X - 001	04XX - X 08 04 - X - 002
	1/4" NPT	04XX - X 07 09 - X - 001	04XX - X 08 09 - X - 002
	7/16-20 UNF	04XX - X 07 20 - X - 001	04XX - X 08 20 - X - 002
	9/16-18 UNF	04XX - X 07 21 - X - 001	04XX - X 08 21 - X - 002

Supplementary functions²⁾

Resistor	Diagnostics function	R XX XX
Varistor	Overvoltage protection	V XX XX
NTC thermistor	Filter monitoring	N XX XX

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, water, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials.

Article number: **04XX - XXX XX - X - 00X**

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.
²⁾ Other versions available depending on minimum order quantity (see p. 67)

0410/0412/0414/0416/0418/0422/0424

Diaphragm pressure switches, up to 42 V
with supplementary functions

- Zinc-plated steel (CrVI-free)
- Overpressure safety up to 4,350 psi (300 bar)¹⁾
- Burst pressure safety up to 5,800 psi (400 bar) ¹⁾

Plug-in types for diaphragm pressure switches

Deutsch DT04-2P	0410 - XXX XX - X - 001
AMP Superseal 1.5®	0412 - XXX XX - X - 001
Packard MetriPack 280	0414 - XXX XX - X - 001
Deutsch DT04-3P	0416 - XXX XX - X - 001
AMP Junior Timer®	0418 - XXX XX - X - 001
M12x1 DIN EN 61076-2-101-A (PIN 1+3)	0422 - XXX XX - X - 001
M12x1 DIN EN 60947-5-2 (PIN 1+2 / PIN 1+4)	0424 - XXX XX - X - 001

0410 - XXX XX - X - 002
0412 - XXX XX - X - 002
0414 - XXX XX - X - 002
0416 - XXX XX - X - 002
0418 - XXX XX - X - 002
0422 - XXX XX - X - 002
0424 - XXX XX - X - 002

Adjustment range (tolerance at room temperature)	Male thread
	Article number NO → :

Article number NO → :

Article number NC → :

04XX Diaphragm pressure switches

145 - 290 ± 14.50 psi 10 - 20 (± 1) bar	M 10x1 taper	04XX - X 11 01 - X - 001
	1/4" BSPP	04XX - X 11 03 - X - 001
	1/8" NPT	04XX - X 11 04 - X - 001
	1/4" NPT	04XX - X 11 09 - X - 001
	7/16-20 UNF	04XX - X 11 20 - X - 001
	9/16-18 UNF	04XX - X 11 21 - X - 001
		04XX - X 12 01 - X - 002
290 - 725 ± 29.0 psi 20 - 50 (± 2) bar	1/4" BSPP	04XX - X 12 03 - X - 002
	1/8" NPT	04XX - X 12 04 - X - 002
	1/4" NPT	04XX - X 12 09 - X - 002
	7/16-20 UNF	04XX - X 12 20 - X - 002
	9/16-18 UNF	04XX - X 12 21 - X - 002
		04XX - X 15 01 - X - 001
		04XX - X 15 03 - X - 001
	M 10x1 taper	04XX - X 15 04 - X - 001
	1/4" BSPP	04XX - X 15 09 - X - 001
	1/8" NPT	04XX - X 15 20 - X - 001
	1/4" NPT	04XX - X 15 21 - X - 001
	7/16-20 UNF	04XX - X 16 01 - X - 002
	9/16-18 UNF	04XX - X 16 03 - X - 002
		04XX - X 16 04 - X - 002
		04XX - X 16 09 - X - 002
		04XX - X 16 20 - X - 002
		04XX - X 16 21 - X - 002

04XX - X 12 01 - X - 002
04XX - X 12 03 - X - 002
04XX - X 12 04 - X - 002
04XX - X 12 09 - X - 002
04XX - X 12 20 - X - 002
04XX - X 12 21 - X - 002
04XX - X 15 01 - X - 001
04XX - X 15 03 - X - 001
04XX - X 15 04 - X - 001
04XX - X 15 09 - X - 001
04XX - X 15 20 - X - 001
04XX - X 15 21 - X - 001
04XX - X 16 01 - X - 002
04XX - X 16 03 - X - 002
04XX - X 16 04 - X - 002
04XX - X 16 09 - X - 002
04XX - X 16 20 - X - 002
04XX - X 16 21 - X - 002

Supplementary functions²⁾

Resistor	Diagnostics function	R XX XX
Varistor	Ovvoltage protection	V XX XX
NTC thermistor	Filter monitoring	N XX XX

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, water, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM	Hot water, chemical acids, diluted alkalis, ketones, esters, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials.



Article number: 04XX - XXX XX - X - 00X

M.6

hex 24

PS PLUS



M

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

²⁾ Other versions available depending on minimum order quantity (see p. 67)





0411/0413/0415/0417/0419/0423/0425

Piston pressure switches, up to 42 V with supplementary functions

- Zinc-plated steel (CrVI-free)
- Overpressure safety up to 4,350 psi (600 bar)¹⁾
- Overpressure safety up to 5,800 psi (700 bar)¹⁾

Plug-in types for piston pressure switches

Deutsch DT04-2P	0411 - XXX XX - X - 001
AMP Superseal 1.5®	0413 - XXX XX - X - 001
Packard MetriPack 280	0415 - XXX XX - X - 001
Deutsch DT04-3P	0417 - XXX XX - X - 001
AMP Junior Timer®	0419 - XXX XX - X - 001
M12x1 DIN EN 61076-2-101-A (PIN 1+3)	0423 - XXX XX - X - 001
M12x1 DIN EN 60947-5-2 (PIN 1+2 / PIN 1+4)	0425 - XXX XX - X - 001

0411 - XXX XX - X - 002
0413 - XXX XX - X - 002
0415 - XXX XX - X - 002
0417 - XXX XX - X - 002
0419 - XXX XX - X - 002
0423 - XXX XX - X - 002
0425 - XXX XX - X - 002

Adjustment range (tolerance at room temperature)	Male thread
725 - 2,175 ± 72.5 psi 50 - 150 (± 5.0) bar	M 10x1 taper 1/4" BSPP 1/8" NPT 1/4" NPT 7/16-20 UNF 9/16-18 UNF

Article number NO → :
Article number NC → :

Article number NC → :
04XX - X 20 01 - X - 002

04XX Piston pressure switches

725 - 2,175 ± 72.5 psi 50 - 150 (± 5.0) bar	M 10x1 taper	04XX - X 19 01 - X - 001
	1/4" BSPP	04XX - X 19 03 - X - 001
	1/8" NPT	04XX - X 19 04 - X - 001
	1/4" NPT	04XX - X 19 09 - X - 001
	7/16-20 UNF	04XX - X 19 20 - X - 001
	9/16-18 UNF	04XX - X 19 21 - X - 001

04XX - X 20 03 - X - 002
04XX - X 20 04 - X - 002
04XX - X 20 09 - X - 002
04XX - X 20 20 - X - 002
04XX - X 20 21 - X - 002

Supplementary functions²⁾

Resistor	Diagnostics function	R XX XX
Varistor	Ovvoltage protection	V XX XX
NTC thermistor	Filter monitoring	N XX XX

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, water, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 24 for the temperature range and application thresholds of sealing materials.

Article number:

04XX - XXX XX - X - 00X

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.²⁾ Other versions available depending on minimum order quantity (see p. 67)

Pressure switches **PLUS**

Plug-in types for diaphragm and piston pressure switches

M.6

hex 24

PS PLUS



Technical details of plug-in types

0410 / 0411
Deutsch DT04-2P
IP67, IP6K9K
H ≈ 61 mm

0412 / 0413
AMP Superseal 1.5°
IP67
H ≈ 61 mm

0414 / 0415
Packard MetriPack 280°
IP67
H ≈ 62 mm

◀ Model / type

◀ Connector

◀ Protection class

◀ Overall height

◀ Contact assignment

0416 / 0417
Deutsch DT04-3P
IP67, IP6K9K
H ≈ 63 mm

0418 / 0419
AMP Junior Timer®
IP65, IPx4K
H ≈ 54 mm
 Not recommended for new applications

0422 / 0423
M12x1 DIN EN 61076-2-101-A
IP67
H ≈ 51 mm
 1: brown 3: blue

0424 / 0425
M12x1 DIN EN 60947-5-2
IP67
H ≈ 51 mm
 1: brown 2: black 4: white

◀ Model / type

◀ Connector

◀ Protection class

◀ Overall height

◀ Contact assignment

M



M.7

30 A/F

Pressure switches 30 A/F

Snap action with silver contacts



- Attachment options for wall fitting and block style enable clearly structured, accessible, easy-maintenance installation
- Switching pressure can be adjusted easily by user
- High overpressure safety
- Socket devices enable simple installation on the machine

Pressure switches 30 A/F

Technical data

M.7

30 A/F



M

Temperature resistance of sealing materials:	NBR (diaphragm pressure switch) -40 °F ... +212 °F (-40 °C ... +100 °C)
	NBR (piston pressure switch) -22°F ... +212°F (-30°C ... +100°C)
	EPDM -22°F ... +248°F (-30°C ... +120°C)
	FKM (Viton®) (in diaphragm pressure switch) +23°F ... +248°F (-5°C ... +120°C)
	FKM (Viton®) (in piston pressure switch) +5°F ... +248°F (-15°C ... +120°C)
Switching frequency:	200 / min.
Mechanical life expectancy:	1,000,000 cycles (for diaphragm pressure switches, life expectancy value only applies for switching pressures up to 725 psi / 50 bar)
Pressure rise rate:	≤ 1,450 psi / s (≤ 1,000 bar / s)
Differential:	Typ 0159: approx. 10 ... 30 % (not adjustable) Types 0161, 0162, 0175: approx. 10 ... 30 % (factory adjustable)
Vibration resistance:	10 g; 5 ... 200 Hz sine wave; DIN EN 60068-2-6
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27
Housing material:	Aluminium
Protection class:	IP65 with Socket device fitted
Weight:	Typ 0159, 0161, 0162: approx. 8.5 oz (240 g) Typ 0175: approx. 11 oz (310 g)

Electrical values	0159	0161 / 0162 / 0175
Rated working voltage U_e	Rated working current I_e	
250 VAC 50 / 60 Hz, AC 12	2.5 A	5 A
250 VAC 50 / 60 Hz, AC 14	1 A	1 A
24 VDC, DC 12 / DC 13	2 / 2 A	3.5 / 3.5 A
50 VDC, DC 12 / DC 13	1 / 0.5 A	2 / 1 A
75 VDC, DC 12 / DC 13	0.75 / 0.4 A	1 / 0.5 A
125 VDC, DC 12 / DC 13	0.3 / 0.2 A	0.3 / 0.2 A
250 VDC, DC 12 / DC 13	0.3 / 0.2 A	0.25 / 0.2 A
Rated insulation voltage ψ	300 V	
Rated impulse withstand voltage U_{imp} :	2.5 kV	
Conventional thermal current I_{thc} :	6 A	
Switching overvoltage:	< 2.5 kV	
Rated frequency:	DC and 50 / 60 Hz	
Nominal current of short-circuit mechanism:	to 2.5 A	to 6.3 A
Conditional short-circuit current:	< 350 A	
Tightening torque of terminal screws:	< 0.35 Nm	
Connector cross-section:	0.5 – 1.5 mm ²	




M.7

30 A/F

0159

Diaphragm / piston pressure switch up to 250 V

- Aluminium housing
- Snap action with silver contacts
- Overpressure safety up to 2,900 / 8,700 psi (200 / 600 bar)¹⁾
- Switching point continuously adjustable by turning knurled screw whilst system in operation

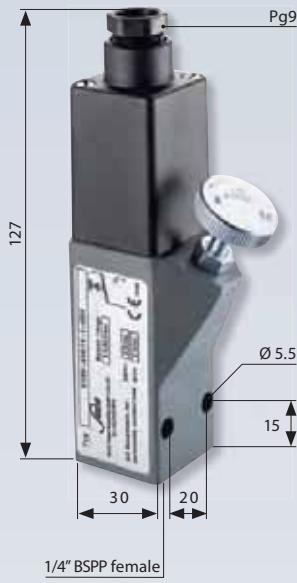

p_{max} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Thread	Order number:
---------------------------	----------------------------------	---	--------	---------------

With female thread

0159 Diaphragm pressure switches

2,900 psi ¹⁾ (200 bar ¹¹⁾	2.90 - 29 psi (0.2 - 2 bar)	$\pm 2.90 - 4.35$ psi ($\pm 0.2 - 0.3$ bar)	1/4" BSPP female	0159 - 426 14 - X - 001
	7.25 - 72.5 psi (0.5 - 5 bar)	$\pm 2.90 - 7.25$ psi ($\pm 0.2 - 0.5$ bar)		0159 - 427 14 - X - 001
	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)		0159 - 428 14 - X - 001
	29 - 290 psi (2 - 20 bar)	± 14.5 psi (± 1.0 bar)		0159 - 429 14 - X - 001
	72.5 - 725 psi (5 - 50 bar)	± 43.5 psi (± 3.0 bar)		0159 - 430 14 - X - 001
	145 - 1,450 psi (10 - 100 bar)	$\pm 43.5 - 72.5$ psi ($\pm 3.0 - 5.0$ bar)		0159 - 431 14 - X - 001


0159 Piston pressure switches

8,700 psi ¹⁾ (600 bar ¹¹⁾	145 - 1,450 psi (10 - 100 bar)	$\pm 43.5 - 72.5$ psi ($\pm 3.0 - 5.0$ bar)	1/4" BSPP female	0159 - 432 14 - X - 001
	362.5 - 3,625 psi (25 - 250 bar)	$\pm 72.5 - 101.5$ psi ($\pm 5.0 - 7.0$ bar)		0159 - 433 14 - X - 001
	580 - 5,800 psi (40 - 400 bar)	$\pm 72.5 - 130.5$ psi ($\pm 5.0 - 9.0$ bar)		0159 - 434 14 - X - 001

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3

Refer to page 75 for the temperature range and application thresholds of sealing materials

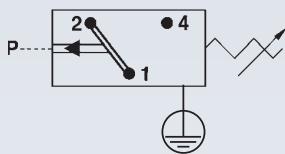

Your order number:

0159 - XXX 14 - X - XXX



¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

Diaphragm / piston pressure switches up to 250 V

- Aluminium housing
- Snap action with silver contacts
- Overpressure safety up to 2,900 / 8,700 psi (200 / 600 bar)¹⁾
- Socket device similar to DIN EN 175301 (DIN 43650)
- Differential adjustable at factory

P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Dimension A in mm	Order number:
-----------------------------------	----------------------------------	---	----------------------	---------------

With female 1/4 BSPP thread

0161 Diaphragm pressure switches

2,900 psi ¹⁾ (200 bar) ¹⁾	7.25 - 14.5 psi (0.5 - 1 bar)	± 2.90 psi (± 0.2 bar)	39	0161 - 436 14 - X - 001
	7.25 - 72.5 psi (0.5 - 5 bar)	± 2.90 - 7.25 psi (± 0.2 - 0.5 bar)	83	0161 - 437 14 - X - 001
	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)	30	0161 - 438 14 - X - 001
	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	20	0161 - 439 14 - X - 001
	725 - 1,450 psi (50 - 100 bar)	± 43.5 - 72.5 psi (± 3.0 - 5.0 bar)	Ø 5.5	0161 - 440 14 - X - 001

0161 Piston pressure switches

8,700 psi ¹⁾ (600 bar) ¹⁾	1,450 - 5,800 psi (100 - 400 bar)	± 72.5 - 130.5 psi (± 5.0 - 9.0 bar)	19.5	0161 - 441 14 - X - 001
--	--------------------------------------	---	------	-------------------------

Block style (with O-ring NBR 5 x 1.5 mm)

0162 Diaphragm pressure switches

2,900 psi ¹⁾ (200 bar) ¹⁾	7.25 - 14.5 psi (0.5 - 1 bar)	± 2.90 psi (± 0.2 bar)	15	0162 - 436 14 - X - 001
	7.25 - 72.5 psi (0.5 - 5 bar)	± 2.90 - 7.25 psi (± 0.2 - 0.5 bar)	20	0162 - 437 14 - X - 001
	14.5 - 145 psi (1 - 10 bar)	± 7.25 psi (± 0.5 bar)	Ø 5.5	0162 - 438 14 - X - 001
	145 - 725 psi (10 - 50 bar)	± 43.5 psi (± 3.0 bar)	15	0162 - 439 14 - X - 001
	725 - 1,450 psi (50 - 100 bar)	± 43.5 - 72.5 psi (± 3.0 - 5.0 bar)	A	0162 - 440 14 - X - 001

0162 Piston pressure switches


8,700 psi ¹⁾ (600 bar) ¹⁾	1,450 - 5,800 psi (100 - 400 bar)	± 72.5 - 130.5 psi (± 5.0 - 9.0 bar)	19.5	0162 - 441 14 - X - 001
--	--------------------------------------	---	------	-------------------------

Seal material – Application areas



NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3

Refer to page 75 for the temperature range and application thresholds of sealing materials

0161 with female thread

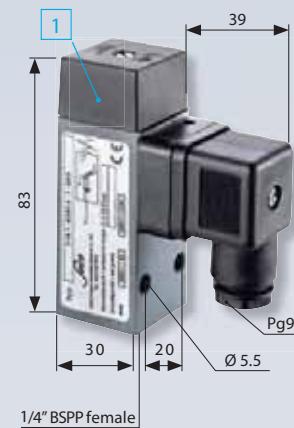

0162 Block style

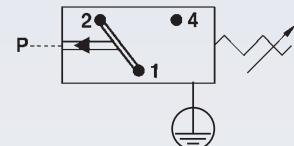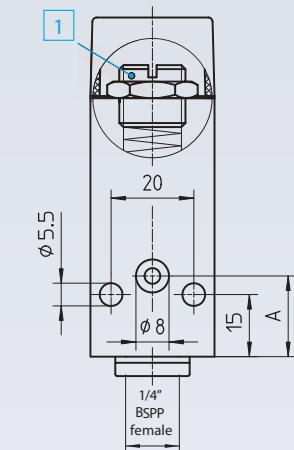

Your order number: 016X - XXX 14 - X - XXX

1 Adjusting the set point

To adjust the set point, undo the locknut and adjust the set screw using a screwdriver. Clockwise screwing increases the switching pressure. After adjusting, tighten the locknut again.

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.





0175

Diaphragm pressure switches up to 250 V

- For low pressure, high accuracy
- Aluminium housing
- Changeover with silver contacts
- Overpressure safety up to 363 psi (25 bar)¹⁾
- Socket device similar to DIN EN 175301 (DIN 43650)
- Hysteresis adjustable at factory

p_{\max} in bar	Adjustment range in bar	Tolerance at room temperature in bar	Thread	Article number
----------------------	----------------------------	---	--------	----------------

With female thread



0175 Diaphragm pressure switches

363 psi (25 bar) ¹⁾	0.1 – 1	± 0.1 – 0.2	G 1/4 female	0175 – 435 14 – 1 – 001
--------------------------------	---------	-----------------	--------------	-------------------------

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc. Temperature resistance: -30 °C ... +100 °C
-----	--

Article number: 0175 – 435 14 – 1 – 001

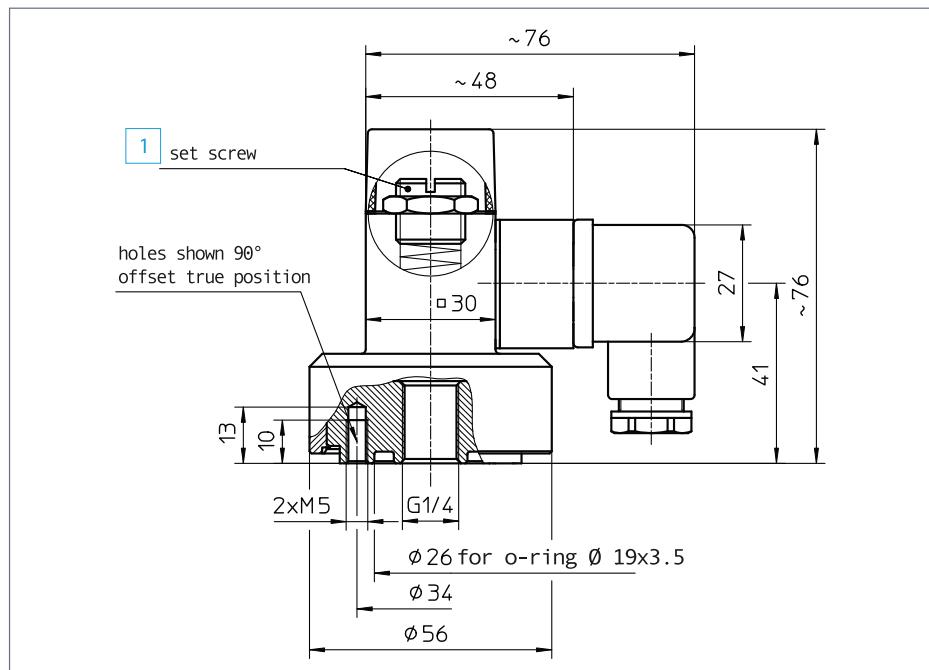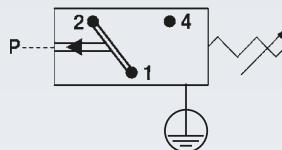

1 Adjusting the set point

To adjust the set point, undo the locknut and adjust the set screw M16 using a screwdriver. Clockwise screwing increases the switching pressure. After adjusting, tighten the locknut again.



¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

Explosion-protected pressure switches

according to ATEX directive 2014/34/EU and IECEx scheme



- ATEX certification for the Ex-protected zones:
 - 1 + 2 (Gases and vapours)
 - 21 + 22 (Dust)
 - M2 Mining (Methane / coal dust)
- Types 0342/0343 are certified according to IECEx scheme
- Switching point can be easily adjusted by the user while system in operation
- Compact design
- Excellent price-performance ratio

Explosion-protected pressure switches

Technical details

M.8
ATEX



Technical explanations

Explosion-protected pressure switches are classified according to the respective combustible material-type. This division is:

Gases and vapours 0165, 0342 / 0343	Dusts 0340 / 0341, 0342 / 0343	Methane / coal dust 0342 / 0343
---	--	---

ATEX/IECEx marking for pressure switches

Our pressure switches are designed for gases and vapours (G), dust (D) and methane / coal dust (M) in mining:

Series	Flammable materials	Ex zones	Ex marking acc. to 2014/34/EU
0165	Gases and vapours	1 + 2	Ex II 2G Ex d II CT6/T5 X
0340 / 0341	Dusts	22	Ex II 3D Ex tc IIIC T90°C Dc
0342 / 0343	Gases and vapours	1 + 2	Ex II 2G Ex db IIC T6 / T5 Gb
	Dusts	21 + 22	Ex II 2D Ex tb IIIC T80°C / T100°C Db
	Methane / coal dust	M2 (Mining)	Ex I M2 Ex db I Mb

The following table shows an overview of the explosion protection zones, device groups and categories. The applications covered by our pressure switches (according to Ex zones) are highlighted in colour.

Conditions in potentially explosive atmosphere

Com-bustible materials	Temporary behaviour of com-bustible materials in potentially explosive area	Categori-sation of potentially explosive areas	Marking required on equipment to be used	
			Equipment group	Equipment category
Gases Vapours	are present continually, frequently or for long periods	Zone 0	II	1G
	occur occasionally	Zone 1	II	2G
	are unlikely to occur, and if so, are then only seldom or for short periods	Zone 2	II	2G
Dusts	are present continually, frequently or for long periods	Zone 20	III	1D
	occur occasionally	Zone 21	III	2D
	occur if accumulated dust is whirled up, and then only seldom or for short periods	Zone 22	III	3D or 2D
Methane / Coal dust	operation where there is a risk of explosions	-	I	M1
	disconnection where there is a risk of explosion	-	I	M2 or M1



Explosion-protected pressure switches

Technical details

Type	0165	0340 / 0341	0342 / 0343						
Ex zones:	1 + 2	22	1 + 2	21 + 22	Mining				
Flammable materials:	Gases and vapours	Dusts	Gases and vapours	Dusts	Methan / coal dust				
Temperature resistance:	NBR	-4 °F... +176 °F (-20 °C ... +80 °C)							
	EPDM	-4 °F... +176 °F (-20 °C ... +80 °C)							
	FKM (Diaphragm pressure switch)	41 °F... +176 °C (-5 °C ... +80 °C)							
	FKM (Piston pressure switch)	5 °F... +176 °C (-15 °C ... +80 °C)							
	FFKM (0340 + 0342 only)	-4 °F... +176 °F (-20 °C ... +80 °C)							
	HNBR	-4 °F... +176 °F (-20 °C ... +80 °C)							
Switching frequency:	200 / min								
Mechanical life expectancy:	1.000.000 cycles								
Pressure rise rate:	$\leq 14,500 \text{ psi/s}$ ($\leq 1.000 \text{ bar/s}$)								
Hysteresis:	10 ... 30 % (depending on type, non-adjustable)								
Vibration resistance:	10 g; 5 ... 200 Hz sine wave; DIN EN 60068-2-6								
Shock resistance:	294 m/ $\frac{1}{2}$ 14 ms half sine wave; DIN EN 60068-2-27								
Cable length:	Standard length approx. 2m with wire end sleeve, also available in lengths of approx. 5m as well as customer-specific lengths								
Protection class:	IP65								
Cable cross-section:	3 x 0,75 mm ²	3 x 0,5 mm ²							
Housing material:	Aluminium	Zinc-plated steel (CrVI-free), anodised aluminium							
Weight:	approx. 380 g	approx. 230 g							

Elektrische Werte

Rated working voltage U_e (usage category)	Rated working current I_e :	
250 VAC 50 / 60 Hz, AC 12	2 A	5 A
250 VAC 50 / 60 Hz, AC 14	1 A	1 A
24 VDC, DC 12 / DC 13	2 / 1 A	3,5 / 3,5 A
50 VDC, DC 12 / DC 13	1 / 0,5 A	2 / 1 A
75 VDC, DC 12 / DC 13	0,5 / 0,25 A	1 / 0,5 A
125 VDC, DC 12 / DC 13	0,2 / 0,1 A	0,3 / 0,2 A
250 VDC, DC 12 / DC 13	0,15 / 0,1 A	0,25 / 0,2 A
Rated insulation voltage U_i	300 V	
Rated impulse withstand voltage U_{imp} :	4 kV	
Conventional thermal current I_{the} :	5 A	
Switching overvoltage:	< 2,5 kV	
Rated frequency:	DC und 50 / 60 Hz	
Nominal current of short-circuit mechanism:	bis 3,5 A	
Conditional short-circuit current:	< 350 A	

0165

Diaphragm / piston pressure switches up to 250 V

ATEX 0102 CE \otimes II 2G Ex d II C T6 / T5 X (gas-protected zones 1 and 2)

- Aluminium housing
- Snap action with silver contacts
- Operating voltage up to 250 V
- Overpressure safety up to 2,900 / 8,700 psi (200 / 600 bar)¹⁾

p_{\max} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Thread	Order number
----------------------------	----------------------------------	---	--------	--------------

0165 Diaphragm pressure switches

$2,900 \text{ psi}^1$ (200 bar) ¹⁾	14.5 - 87 psi (1 - 6 bar)	$\pm 7.25 \text{ psi}$ ($\pm 0.5 \text{ bar}$)	1/4" BSPP female	0165 - 448 14 - 1 - 001
	72.5 - 725 psi (5 - 50 bar)	$\pm 43.5 \text{ psi}$ ($\pm 3.0 \text{ bar}$)		0165 - 449 14 - 1 - 001

0165 Piston pressure switches

$8,700 \text{ psi}^1$ (600 bar) ¹⁾	290 - 1,450 psi (20 - 100 bar)	$\pm 43.5 - 72.5 \text{ psi}$ ($\pm 3.0 - 5.0 \text{ bar}$)	1/4" BSPP female	0165 - 450 14 - X - 001
	362.5 - 3,625 psi (25 - 250 bar)	$\pm 72.5 - 101.5 \text{ psi}$ ($\pm 5.0 - 7.0 \text{ bar}$)		0165 - 452 14 - X - 001
	1,450 - 5,800 psi (100 - 400 bar)	$\pm 72.5 - 130.5 \text{ psi}$ ($\pm 5.0 - 9.0 \text{ bar}$)		0165 - 451 14 - X - 001

Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
EPDM	Brake fluid, hydrogen, oxygen, acetylene, etc.	2
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3

Refer to page 82 for the temperature range and application thresholds of sealing materials

Your order number: 0165 - XXX 14 - X - 001

Piston pressure switches only have limited suitability for use with gases.


M.8

ATEX



Contact assignment:

- 1 = white
- 2 = green
- 4 = brown

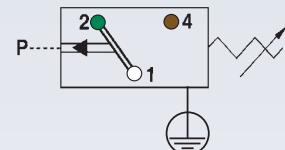

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.



0340 / 0341

Diaphragm / piston pressure switches up to 250 V

ATEX CE II 3D IP65 T90°C (dust protection zone 22)

- Zinc-plated steel housing (CrVI-free), with anodised aluminium protective cap
- Snap action with silver contacts
- Operation voltage up to 250 V, protection class 2, protective insulation
- Overpressure safety up to 4,350 / 8,700 psi (300 / 600 bar)¹⁾



Contact assignment:

- 1 = black
- 2 = red
- 4 = white



P _{max.} in psi (bar)	Adjustment range in psi (bar)	Tolerance in psi (bar) at room temperature	Thread	Order number
--------------------------------	-------------------------------	--	--------	--------------

0340 Diaphragm pressure switches

4,350 psi ¹⁾ (300 bar ¹⁾	4.35 - 21.75 psi (0.3 - 1.5 bar)	± 2.90 psi (± 0.2 bar)	1/4" BSPP	0340 - 457 03 - X - 003
	14.5 - 145 psi (1 - 10 bar)	± 7.25 - 14.5 psi (± 0.5 - 1.0 bar)		0340 - 458 03 - X - 006
	145 - 290 psi (10 - 20 bar)	± 14.5 psi (± 1.0 bar)		0340 - 459 03 - X - 009
	290 - 725 psi (20 - 50 bar)	± 29 psi (± 2.0 bar)		0340 - 461 03 - X - 012

0341 Piston pressure switches

8,700 psi ¹⁾ (600 bar ¹⁾	725 - 2,175 psi (50 - 150 bar)	± 72.5 psi (± 5.0 bar)	1/4" BSPP	0341 - 460 03 - X - 003
---	-----------------------------------	---------------------------	-----------	-------------------------

Seal material – Application areas

NBR	Hydraulic/machine oil, air, nitrogen, etc.	1
EPDM	Brake fluid, water, hydrogen, oxygen, acetylene, etc.	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3
FFKM ²⁾	Hot water, chemical acids, diluted alkalis, ketones, ester's, alcohols	6
HNBR	Hydraulic/machine oil, ester-based bio-oils	9

Refer to page 82 for the temperature range and application thresholds of sealing materials.

Article number:

034X - XXX 03 - X - XXX

Piston pressure switches only have limited suitability for use with gases (refer to Page 17 for explanations).



1) Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

2) Only suitable for diaphragm pressure switches (Type 0340).

Vacuum switches

for negative pressure from 950 mbar to 100 mbar



- Switching point can be adjusted when fitted on site¹⁾
- High overpressure resistance
- Long service life even under harsh conditions
- 0150 series available as changeover contacts up to 250 V
- 0151 series available as NC or NO up to 42 V

¹⁾ Pressure switches can also be supplied preset at factory.
Our preset switches are sealed with lacquer paint, set points are embossed on the housing.

Vacuum switches

Technical data

M.9

Vacuum




M

Type:	0150	0151
Operating voltage:	10 ... 250 VAC/DC	10 ... 42 VAC/DC
Rated current (resistive load):	Refer to electrical values below	10 mA ... 4 A
Switching power:	Refer to electrical values below	100 VA
Temperature resistance of sealing materials:	-4 °F ... +212 °F (-20 °C ... +100 °C)	+5 °F ... +248 °F (-15 °C ... +120 °C)
Switching frequency:	200/min.	
Mechanical life expectancy:	1,000,000 cycles	
Pressure rise rate:	≤ 14.5 psi/ms (≤ 1 bar/ms)	
Vibration resistance:	10 g; 5 ... 200 Hz sine wave; DIN EN 60068-2-6	
Shock resistance:	294 m/s ² ; 14 ms half sine wave; DIN EN 60068-2-27	
Housing material:	Aluminium	Brass
Protection class:	IP65 with socket device	IP65, terminals IP00
Weight:	approx. 9.5 oz (270 g)	approx. 5 oz (140 g)

0150 Electrical values (also refer to page 14 for technical explanations)

Rated working voltage U _e	Rated working current I _e (usage category)
250VAC 50 / 60 Hz	5 A (AC 12)
250VAC 50 / 60 Hz	1 A (AC 14)
24VDC	3.5 / 3.5 A (DC 12 / DC 13)
50VDC	2 / 1 A (DC 12 / DC 13)
75VDC	1 / 0.5 A (DC 12 / DC 13)
125VDC	0.3 / 0.2 A (DC 12 / DC 13)
250VDC	0.25 / 0.2 A (DC 12 / DC 13)
Rated insulation voltage U _i :	300V
Rated impulse withstand voltage U _{imp} :	2.5 kV
Conventional thermal current I _{the} :	6 A
Switching overvoltage:	< 2.5 kV
Rated frequency:	DC and 50 / 60 Hz
Nominal current of short-circuit mechanism:	up to 6.3 A
Conditional short-circuit current:	< 350 A
Tightening torque of terminal screws:	< 0.35 Nm
Connector cross-section:	0.5 ... 1.5 mm ²

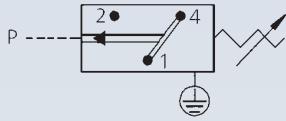

0150

Vacuum switch up to 250 V with snap action switch

- Aluminium housing
- Operating voltage up to 250 V
- Snap action with silver contacts
- Overpressure safety up to 290 psi (20 bar)¹⁾
- Socket device similar to DIN EN 175301 (DIN 43650)
- Differential approx. 1.5" - 3" HG (50 – 150 mbar)(non-adjustable)

P _{max.} in psi (bar)	Adjustment range in HG (mbar) (relative)	Tolerance in HG (mbar) at room temperature	Thread	Order number
-----------------------------------	---	---	--------	--------------

0150 Vacuum switch

290 psi ¹⁾ (20 bar) ¹⁾	3" - 29" (100-950 mbar)	± 1.5" (± 50 mbar)	1/8" BSPP female	0150 - 456 15 - 4 - 001
---	----------------------------	-----------------------	------------------	-------------------------


Seal material – Application areas

ECO	Air, oils, greases, fuel/gasoline	4
-----	-----------------------------------	---

Temperature resistance: - 4 °F ... +212 °F (-20 °C ... +100 °C)

Your order number:

0150 - 456 15 - 4 - 001

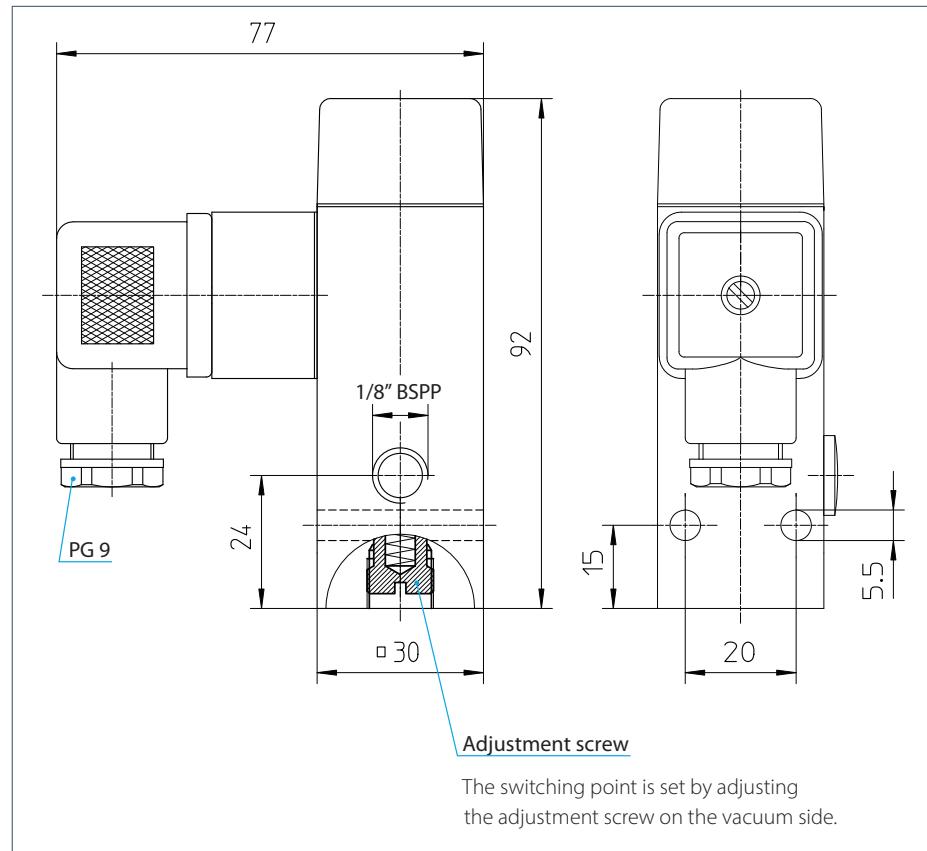

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

0151

Vacuum switch up to 42 V, NO or NC

- Brass housing
- Spade or M3 screw terminal
- Operating voltage up to 42 V
- Overpressure safety up to 500 psi (35 bar)¹⁾

$p_{\text{max.}}$ in psi (bar)	Adjustment range in HG (mbar) (relative)	Tolerance in HG (mbar) at room temperature	Thread	Order number
-----------------------------------	---	---	--------	--------------

0151 Vacuum switches with M3 screw terminal

500 psi ¹⁾ (35 bar) ¹⁾	6" - 29" (200 - 950 mbar)	$\pm 3"$ (± 100 mbar)	1/8" BSPP female
---	------------------------------	-------------------------------	------------------

NO → |:

0151 - 452 15 - **3** - 001

NC → :|

0151 - 453 15 - **3** - 001

0151 Vacuum switches with spade terminal

500 psi ¹⁾ (35 bar) ¹⁾	6" - 29" (200 - 950 mbar)	$\pm 3"$ (± 100 mbar)	1/8" BSPP female
---	------------------------------	-------------------------------	------------------

NO → |:

0151 - 454 15 - **3** - 001

NC → :|

0151 - 455 15 - **3** - 001

Seal material – Application areas


FKM (Viton®)	Air, oils, greases, fuel/gasoline	3
--------------	-----------------------------------	---

Temperature resistance: +5 °F...+248 °F (-15 °C...+120 °C)

Your order number:

0151 - XXX 15 - **3** - 001

Comparison of absolute/relative pressures

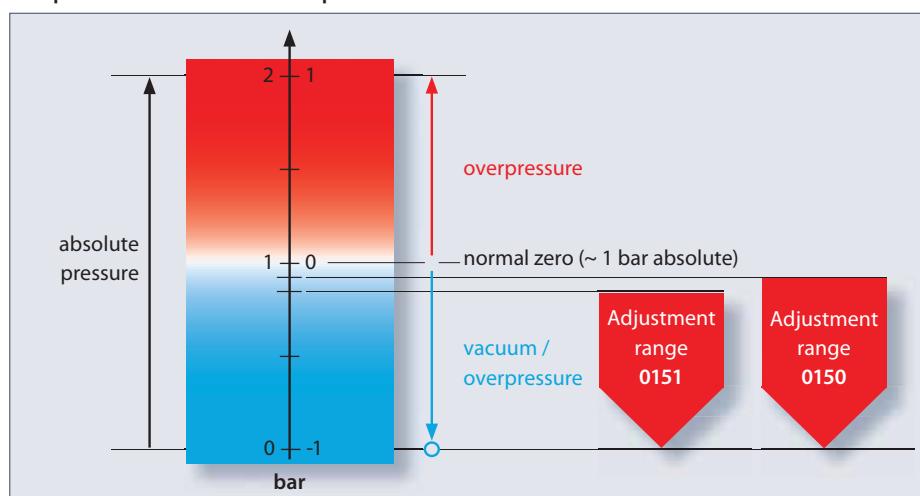

Note: Required set points in the vacuum range must be specified relative to atmospheric pressure (normal pressure) in the ordering process.

¹⁾ Static value. Dynamic value is 30-50 % lower. Values pertain to the hydraulic/pneumatic part of the pressure switch.

M.9

Vacuum

soco



Switches are also available on request with outer thread or integrated connector.



Accessories

Mating plugs, Socket devices and Thread adapters



- High-quality accessories
- Developed for our products
- Aligned to our products
- Originals from the manufacturer









Mating plugs

For pressure switches with integrated connector

M.10

Accessories

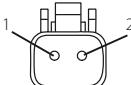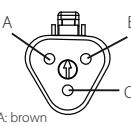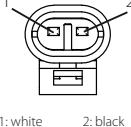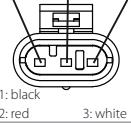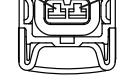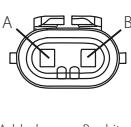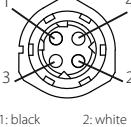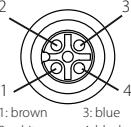

Deutsch DT06-2S (for DT04-2P) 2 x 0,5 mm ² Radox cable, IP65	suitable for series 0110 / 0111 0410 / 0411	Article number: 1-1-10-653-118	 
Deutsch DT06-3S (for DT04-3P) 3 x 0,75 mm ² PUR cable, IP67	suitable for series 0116 / 0117 / 0136 / 0137 0416 / 0417	Article number: 1-1-36-653-160	 
TE AMP Superseal 1.5°, 2-pin 2 x 0,5 mm ² Radox cable, IP65	suitable for series 0112 / 0113 0412 / 0413	Article number: 1-1-12-653-113	 
TE AMP Superseal 1.5°, 3-pin 3 x 0,5 mm ² Radox cable, IP65	suitable for series 0132 / 0133	Article number: 1-1-32-653-158	 
TE AMP Junior Timer, 2-pin 2 x 0,5 mm ² Radox cable, IP65	suitable for series 0118 / 0119 0418 / 0419	Article number: 1-1-18-653-116	 
Packard MetriPack 280, 2-pin 2 x 0,5 mm ² Radox cable, IP65	suitable for series 0114 / 0115 0414 / 0415	Article number: 1-1-14-653-114	 
Bayonet DIN 72585 A1-2.1 2 x 0,5 mm ² Radox cable, IP65	suitable for series 0120 / 0121	Article number: 1-1-20-653-112	 
M 12x1 DIN EN 61076-2-101-LF, 4-pin 4 x 0,34 mm ² PUR cable, IP65	suitable for series 0122 / 0123 / 0124 / 0125 0134 / 0135 / 0424 / 0425	Article number: 1-1-00-653-162	 

All mating plugs with 2 m cable

M

Socket devices and protective caps

- IP65 socket devices or IP54 rubber protective caps for increased protection
- Simple installation with plug-in socket devices

 Rubber protective cap	 Rubber protective cap	 Rubber protective cap	 Socket device
With central cable feed-through for 1.5 - 5 mm cable diameter	With two cable feed-throughs for 1.7 - 2,2 mm cable diameter	With two cable feed-throughs for 1.7 - 2,3 mm cable diameter	cCSAus approval Housing: Polyamide PG9 screw fitting (tightening range 6 - 9 mm)
With rubber protective cap fitted: IP54 Suitable for voltages up to 42 V	With rubber protective cap fitted: IP54 Suitable for voltages up to 42 V	With rubber protective cap fitted: IP54 Suitable for voltages up to 42 V	With socket device fitted: IP65 Suitable for voltages up to 250 V
suitable for series 0151 / 0163 / 0164 / 0166 0167 / 0168 / 0169	suitable for series 0151 / 0163 / 0164 / 0166 0167 / 0168 / 0169	suitable for series 0170 / 0171 / 0180* / 0181* / 0183* / 0186* / 0187* 0190 / 0191 / 0196 / 0197 (*up to 42 V)	suitable for series 0170 / 0171 / 0180 / 0181 0183 / 0186 / 0187 0190 / 0191 / 0196 / 0197
Article number: 1-1-66-621-010	Article number: 1-1-66-621-003	Article number: 1-1-70-621-007	Article number: 1-1-80-652-002

<p>Socket device to DIN EN 175301-803-A (DIN 43650)</p> <p>PG9 screw fitting (tightening range 6 – 9 mm) terminals for wire cross-sections: 0.34 ... 1.5 mm² (AWG 22 ... AWG 16), tightening torque for terminal screw 0.4 Nm</p> <p>With socket device fitted: IP65</p> <p>Suitable for voltages up to 250 V</p>	<p>Socket device With indicator lamp to DIN EN 175301-803-A (DIN 43650)</p> <p>PG9 screw fitting (tightening range 6 – 9 mm) terminals for wire cross-sections: 0.34 ... 1.5 mm² (AWG 22 ... AWG 16), tightening torque for terminal screw 0.4 Nm</p> <p>With socket device fitted: IP65</p> <p>Suitable for voltages up to 24 or 250 V</p>	<p>Socket device M 12x1 DIN EN 61076-2-101 A straight, 4-pin</p> <p>Terminals for wire cross-section 0.75 mm² (AWG 18), tightening torque for terminal screw 0.4 Nm</p> <p>With socket device fitted: IP65</p> <p>Suitable for voltages up to 48 V</p>	<p>Socket device M 12x1 DIN EN 61076-2-101 A angled, 4-pin</p> <p>Terminals for wire cross-section 0.75 mm² (AWG 18), tightening torque for terminal screw 0.4 Nm</p> <p>With socket device fitted: IP65</p> <p>Suitable for voltages up to 48 V</p>
<p>suitable for series 0150 / 0161 / 0162 / 0175 0184 / 0185 / 0194 / 0195</p>	<p>suitable for series 0150 / 0161 / 0162 / 0175 0184 / 0185 / 0194 / 0195</p>	<p>suitable for series 0122 / 0123 / 0124 / 0125 0134 / 0135 / 0424 / 0425</p> <p>and for all transmitters and electronic pressure switches with an M12 connector</p>	<p>suitable for series 0122 / 0123 / 0124 / 0125 0134 / 0135 / 0424 / 0425</p> <p>and for all transmitters and electronic pressure switches with an M12 connector</p>
<p>Article number: 1-1-84-652-009</p>	<p>Article number: for 24 VDC: 1-1-84-652-011 for 250 VAC: 1-1-84-652-010</p>	<p>Article number: 1-6-00-652-016</p>	<p>Article number: 1-6-00-652-017</p>

Thread adapters

For requirements at short notice and for realising custom solutions

- The materials and shapes of thread adapters are aligned perfectly to our switches and transmitters
- Thread adapters are supplied with seals



For G 1/8 female

Vacuum switch
with thread code 15



For G1/4 DIN EN ISO 1179-1 (DIN 3852-E)

All pressure switches and transmitters
with thread code 41

Dual nipple brass

G 1/8 shape E
DIN EN ISO 1179-2
includes
sealing ring NBR



NPT 1/8-27

hex 15
h = 25 mm

Article number:

1-1-00-420-014

G 1/8 shape A
DIN ISO 16030
includes sealing ring
stainless steel / NBR



NPT 1/4-18

hex 24
h = 28 mm

Article number:

1-1-00-420-029

Thread adapters

stainless steel (1.4305 / AISI 303)

G 1/4

DIN EN ISO 1179-1 (DIN 3852-E)
female thread



M10 x 1 shape A
DIN 3852-1

hex 22
h = 30,5 mm

Article number:

1-1-00-420-020



M14 x 1.5 shape E
DIN 3852-E
includes
sealing ring FKM

hex 22
h = 35 mm

Article number:

1-1-00-420-028



NPT 1/4-18

hex 22
h = 35,5 mm

Article number:

1-1-00-420-021



9/16 -18UNF
includes
O-ring FKM

hex 22
h = 33 mm

Article number:

1-1-00-420-027



Thread adapters zinc-plated steel (CrVI-free)					Adapter Aluminium
G 1/4 female thread includes sealing ring FKM		M14 x 1.5 DIN EN ISO 6149-1 female thread			G 1/4 female thread includes copper sealing ring
R 1/4	3/8-24 UNF-2A	G 1/4	M12 x 1.5	NPT 1/8-27	Block style includes NBR O-ring
hex 24 h = 30 mm	hex 24 h = 26 mm	hex 24 h = 26 mm	hex 24 h = 26 mm	hex 24 h = 26 mm	35 A/F h = 22 mm
Article number:	Article number:	Article number:	Article number:	Article number:	Article number:
1-1-00-420-009	1-1-00-420-013	1-1-83-420-006	1-1-83-420-007	1-1-83-420-008	1-1-00-420-025

E. Electronic Pressure Switches



E.4 Menu-controlled electronic pressure switches
with display

from page 118

Special feature:	All functions programmable from menu Switching state LEDs, display, coding, etc.
Switching point:	0 – 400 bar (0-5,800 psi)
Overpressure protection:	Up to 2 x
Transistor outputs:	Qty: 2, output current: max. 1.4 A
Variant:	PNP
Additional analogue output:	4 – 20 mA
Housing materials:	Anodised aluminium and die-casted zinc
Sealing materials:	NBR, FKM
Thread:	Female thread
Type:	0570

Electronic pressure switches with SoS technology



E.5 Electronic pressure switches, High-Performance series,
hex 22 with 1 switching output

from page 122

Special feature:	Highest accuracy and long-term stability
Switching point:	0 – 600 bar (0-8,700 psi)
Overpressure protection:	Up to 4 x
Transistor outputs:	Qty: 1, maximum output current 0.5 A
Variants:	PNP or NPN
Housing materials:	Stainless steel 1.4305 (AISI 303)
Sealing materials:	All welded, without elastomer seal
Threads:	Different male threads
Types:	0530, 0531, 0532, 0533

E.6 Electronic pressure switches, High-Performance series,
hex 22 with 2 switching outputs

from page 126

Special feature:	Highest accuracy and long-term stability
Switching point:	0 – 600 bar (0-8,700 psi)
Overpressure protection:	Up to 4 x
Transistor outputs:	Qty: 2, maximum output current 0.5 A
Variants:	PNP or NPN
Housing materials:	Stainless steel 1.4305 (AISI 303)
Sealing materials:	All welded, without elastomer seal
Threads:	Different male threads
Types:	0540, 0541, 0542, 0544, 0545, 0546

E.7 Accessories

from page 130

- Mating plugs
- Thread adapters
- Programming device PPD05



E.4 Menu-controlled electronic pressure switches
with display

from page 118

Special feature:	All functions programmable from menu Switching state LEDs, display, coding, etc.
Switching point:	0 – 400 bar (0-5,800 psi)
Overpressure protection:	Up to 2 x
Transistor outputs:	Qty: 2, output current: max. 1.4 A
Variant:	PNP
Additional analogue output:	4 – 20 mA
Housing materials:	Anodised aluminium and die-casted zinc
Sealing materials:	NBR, FKM
Thread:	Female thread
Type:	0570

Electronic pressure switches with SoS technology



E.5 Electronic pressure switches, High-Performance series,
hex 22 with 1 switching output

from page 122

Special feature:	Highest accuracy and long-term stability
Switching point:	0 – 600 bar (0-8,700 psi)
Overpressure protection:	Up to 4 x
Transistor outputs:	Qty: 1, maximum output current 0.5 A
Variants:	PNP or NPN
Housing materials:	Stainless steel 1.4305 (AISI 303)
Sealing materials:	All welded, without elastomer seal
Threads:	Different male threads
Types:	0530, 0531, 0532, 0533

E.6 Electronic pressure switches, High-Performance series,
hex 22 with 2 switching outputs

from page 126

Special feature:	Highest accuracy and long-term stability
Switching point:	0 – 600 bar (0-8,700 psi)
Overpressure protection:	Up to 4 x
Transistor outputs:	Qty: 2, maximum output current 0.5 A
Variants:	PNP or NPN
Housing materials:	Stainless steel 1.4305 (AISI 303)
Sealing materials:	All welded, without elastomer seal
Threads:	Different male threads
Types:	0540, 0541, 0542, 0544, 0545, 0546

E.7 Accessories

from page 130

- Mating plugs
- Thread adapters
- Programming device PPD05



Technical explanations for electronic pressure switches

What is an electronic pressure switch?

An electronic pressure switch converts the medium pressure which is present at the measuring cell into a digital, electrical switch signal (ON / OFF).

An electronic pressure switch is more complex than a mechanical pressure switch, and thus generally more expensive. As an electronic pressure switch has no moving parts (relative to each other), it usually has a much prolonged service life and provides a higher level of precision (depending on application).

The hysteresis can be set over a wide range and virtually independently of the switching point. Electronic pressure switches can also be equipped with additional functions, such as optical displays and menu control.

How does an electronic pressure switch work?

The pressure measuring cell fitted (1) has a membrane that is exposed to the pressure to be measured. Affixed to this membrane is a bridge circuit consisting of four ohmic resistors in the form of a Wheatstone bridge. The values of these resistors change proportionally to the pressure load present at the measuring cell or membrane. The bridge voltage of the measuring cell is amplified in the evaluation electronics (2) and processed digitally by a microcontroller (3).

Once the switching point or switch-back point is reached, the output transistor (4) closes or opens depending on the output function (normally open / closed contact).

„Oil-filled“ stainless steel measuring cell

In this measuring cell technology, the piezo-resistive measuring cell is packaged within a metallic housing filled with fluorine oil. This means the measuring cell is virtually free of external mechanical stress. Fluorine oil has excellent characteristics in regards to temperature and ageing behaviour, and is not flammable and so fits perfectly for oxygen applications. It is not recommended for food applications.



Ceramic measuring cell / thick film technology

Ceramic thick film pressure measuring cells are made up of a sintered ceramic body. The ceramic body sleeve already has the key geometries for the subsequent pressure range. The membrane thickness required and thus, the pressure range required is established with grinding and lapping. The resistors are imprinted with thick film technology and interconnect to form a measuring bridge.

SoS technology

In the silicone-on-sapphire technology, the substrate of the thin film measuring cell is synthetic sapphire. This has excellent mechanical and temperature stable properties and prevents undesired parasitic effects, thereby having a positive effect on accuracy and stability. In conjunction with a titanium membrane, this results in virtually unique coaction between the temperature coefficients of sapphire and titanium.

This is because, unlike silicon and stainless steel, they are more closely matched and thus require only a low level of compensation. This also has a favourable effect on longterm stability.

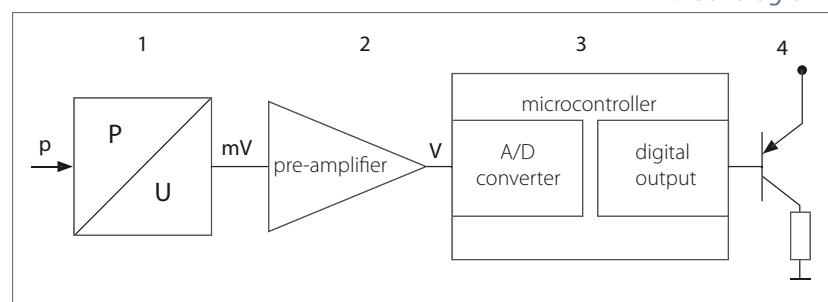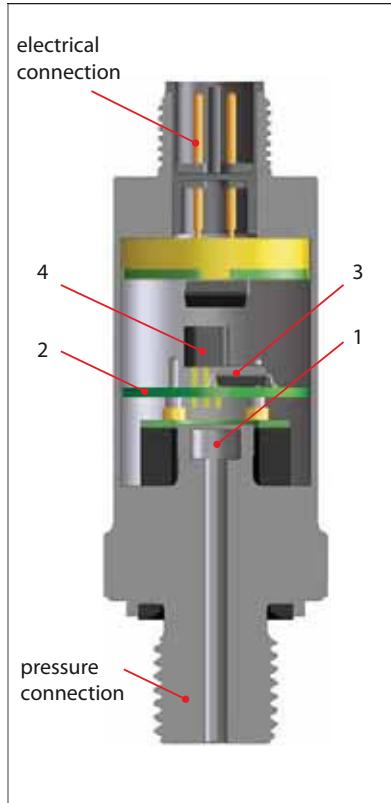

Adjustment range of switching point

The pressure range within which the switching point of an electronic pressure switch can be set is called adjustment range. The switching point corresponds to the pressure value at which the electric circuit of the output is opened or closed.

Switching point accuracy and tolerances

The switching point accuracy of electronic pressure switches is specified by SUCO and relates to the full scale value (FS).

The switching point tolerances specified by us are valid at room temperature (RT) and new state. The values can change as a result of temperature, ageing and application specific conditions. Switching points can either be set at the factory or by the customer on site (depending on model).

Hysteresis

Rising/falling switching point

The difference between the rising (upper) and falling (lower) switching points (refer to the figure) is known as hysteresis (switchback difference).

Our electronic pressure switches are a perfect fit to extremely low or high hysteresis.


Hysteresis is either set at the factory or by the customer on site (only the 0570 series). The hysteresis or switch-back point of all pressure switches can be set over almost the entire adjustment range.

Please ask about the possible setting ranges you may require.

The hysteresis specified in the data sheet is set if nothing is specified in the order.


Window function

In the window function, the switch signal is programmed such that it remains ON or OFF between two values. This means a defined pressure range can be monitored. This function is only possible on the 053X series.

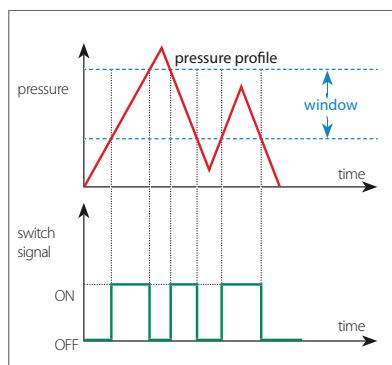


Switching delay

Switch outputs can be programmed with a delay separately for switch-on and switch-off (depending on model). Delays of up to several seconds are possible.

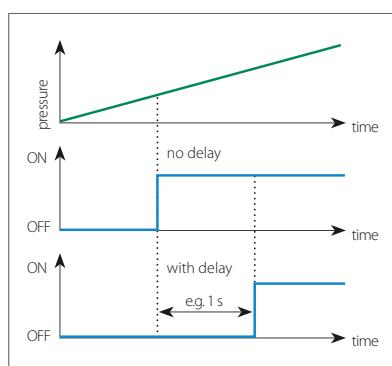

Hysteresis

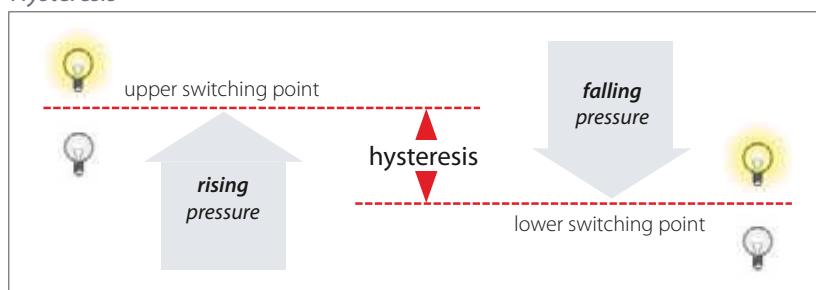

Operating/supply voltage

All electronic pressure switches work with DC voltage and have no galvanic isolation. Within the thresholds specified in the relevant data sheet, the supply voltage may change without influencing the output signal. In order to guarantee the functionality of an electronic pressure switch, the minimum operating voltage must be respected. The maximum operating voltage may not be exceeded to avoid damage on the electronics.

Output current

Depending on the model, electronic pressure switches have a maximum output current of 0.5 A to 1.4 A and therefore are also suitable for applications requiring relatively high control and switching currents.

Load

The output transistor is an open collector, i.e. the output must be wired with a load. The load limits the switching current and is selected according to the application.

Electronic pressure switches have protection from voltage peaks at the output, and are short-circuit proof. When inductive loads are switched (relays, motors, etc.), provision may have to be made for an additional electronic snubber to eliminate high voltage peaks. This is realised e.g. with flyback diodes, or even better with suppressor diodes or varistors.


Technical explanations for electronic pressure switches

Connection types and output functions

There are essentially two different ways to connect the load or apparent ohmic resistance to electronic pressure switches:


PNP output / high-side / plus-switching

PNP output (plus-switching) is the most popular variant in Europe. Here the load is connected to the output of the switch and ground (GND as reference potential).

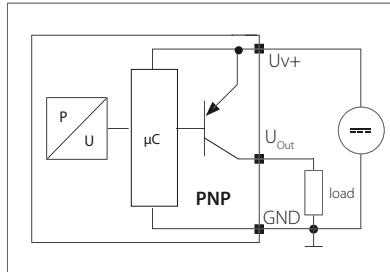

NPN output / low-side / minus-switching

For an NPN output (minus-switching), the load is connected to the switching output and to the positive line of the supply voltage (Uv+ as reference potential).

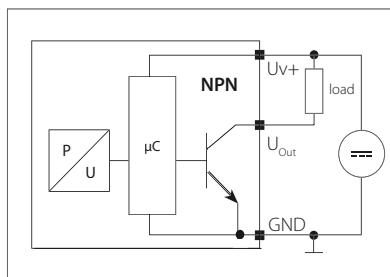


NO / NC

Electronic pressure switches are available as normally open (NO) or normally closed (NC) versions. Also refer to section M.0, page 14.

Temperature errors and ranges

The temperature (both of the medium and environment) generally has a significant influence on the accuracy of an electronic pressure switch. Electronic pressure switches are temperature compensated over a particular range corresponding to the typical application. This means that temperature errors within this temperature range are minimised by means of circuitry design and algorithms. The temperature error is added to the accuracy, and shown in the total error band of the electronic pressure switch, also called „butterfly graph“. Outside the compensated temperature range, the maximum error is not defined, however the electronic pressure switch still functions. To prevent mechanical and electrical damage, electronic pressure switches may not be used beyond the threshold temperature ranges specified in the data sheet.

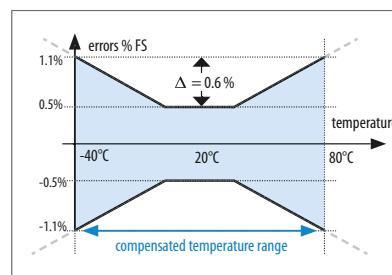


Service life and long-term stability

Service life information pertains to nominal conditions specified in the data sheet, and can vary considerably when a product is operated mechanically or electrically outside the specifications. Service life essentially depends on the used measuring cell technology.


Ageing is accelerated (or slowed) due to different factors - such as temperature, temperature change and reduction of mechanical forces. The occurrence of ageing does effect the total accuracy.

SUCO specifies long-term stability in accordance with DIN 16086 in relation to one year. Typically the influence of aging on the accuracy reduces with increasing operating duration. The information in the data sheet corresponds to the worst case scenario.

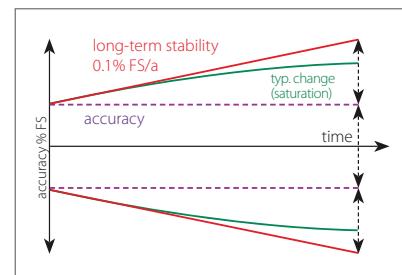


Resolution

The A/D resolution (analogue - digital) of an electronic pressure switch defines the smallest change of the analogue – digital – analogue conversion which takes place by the signal processing of an electronic pressure switch. If for example 13-bit resolution is used for an electronic pressure switch with a 100 bar setting range, the smallest signal change is 8192 steps (2^{13}). As state of the art a resolution of 12 bits and hence 4096 steps (2^{12}) is typical. Therefore pressure changes of 100 bar / 4096 = 0.024 bar can be recorded.

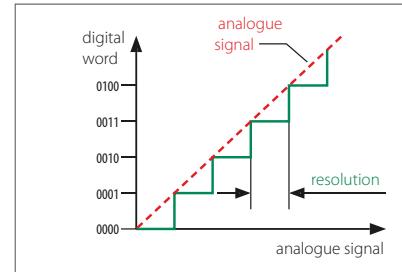


Sampling rate

The sampling rate (or sampling frequency) defines the number of samples per time unit (typically in seconds or milliseconds) taken from an analogue signal and converted to a digital signal. The sampling rate is an indicator of how fast the output signal of an electronic pressure switch responds to the pressure change at the input.

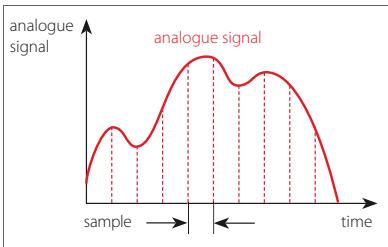

Response time

The response or circuit time is shorter than 2 to 4 milliseconds (depending on model). The sum of A/D and D/A conversions, and the analogue and digital filters in the signal chain from the measuring bridge to the output, make up the response time. Filtering is used to suppress unwanted pressure peaks and electrical interference signals and to ensure good EMC characteristics.

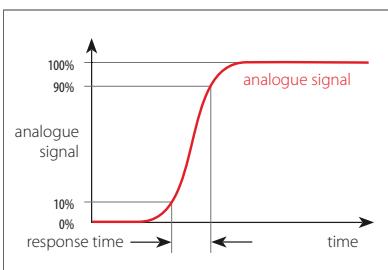

CE mark

Electronic pressure switches from SUCO fall under the 2014/30/EU EMC Directive. EC declarations of conformity have been issued for the electronic pressure switches available on request or can be downloaded from our website. The relevant devices are denoted by a CE mark in our catalogue.

The Machinery Directive 2006/42/EC is not applicable, because our products are classed as components.

Our products are designed for Group 2 fluids based upon good engineering practise in line with Pressure Equipment Directive 2014/68/EU, meaning neither a declaration of conformation may be issued nor a CE mark affixed.

Electromagnetic compatibility (EMC)

Electronic pressure switches from SUCO do comply to all important industrial EMC standards. The basis for the standards are the stricter thresholds for transient emissions in residential environments (EN 61000-6-3) and immunity for industrial environments (EN 61000-6-2).

Generic standard	Test standard	Parameter(s)
Radio disturbance and immunity	EN 55016-2-1 EN 55016-2-3	60 dBuV
Radiated, high-frequency electromagnetic field immunity test	EN 61000-4-3	10 V/m; 80-1000 MHz, 3 V/m; 1400-2000 MHz, 1 V/m; 2000-2700 MHz
Immunity to conducted disturbances, induced by radio-frequency fields	EN 61000-4-6	10 V; 0,15-80 MHz
Electrical fast transient / burst immunity test	EN 61000-4-4	±2 kV
Surge immunity test	EN 61000-4-5	±0.5 kV (common) ±0.5 kV (differential)
Electrostatic discharge (ESD) immunity test	EN 61000-4-2	air: 8 kV with contact: 4 kV

Technical explanations for electronic pressure switches

Conversion chart for pressure units

Abbreviation for unit	Name of unit	Pa = N/m ²	bar	Torr	lbf/in ² , PSI
1 Pa = N/m ²	Pascal	1	0.00001	0.0075	0.00014
1 bar	Bar	100 000	1	750.062	14.5
1 Torr = 1 mmHg	Millimeters of mercury	133.322	0.00133	1	0.01934
1 lbf/in ² = 1 PSI	Pound-force per square inch	6894	0.06894	51.71	1

Conversion chart for temperature units

	K	°C	F
K	1	K - 273.15	9/5 K - 459.67
°C	°C + 273.15	1	9/5 °C + 32
F	5/9 (F + 459.67)	5/9 (F - 32)	1

Insulation strength

According to the latest specifications for immunity to surges and lightning protection, the following must be taken into account when testing insulation strength: With insulation test devices having an inner resistance exceeding 42 Ohm, the insulation strength of electronic pressure switches can be tested up to 500 VDC.

All contacts must be tested short-circuited against the housing. For a specific threshold value of test voltage, the protective circuit for surge protection is activated without any defects arising within the circuit.

In the process, the current may rise to a point at which an insulation strength fault is indicated. The recommendation therefore is to conduct the insulation test of the electronic pressure switch when it is removed, or independently of the overall system.

Medium compatibility

The specifications on medium compatibility in this catalogue pertain to the specific seal and housing materials as well as the used measuring cell technology and so cannot be generalised.

Titanium

Its high levels of mechanical resistance and the wide media compatibility – in particular to corrosive media – do make titanium the ideal material for measuring cells and membranes. It is not recommended for oxygen or hydrogen applications.

Stainless steel (1.4305 / AISI 303)

Stainless steel with broad level of media compatibility. Also suitable for oxygen and hydrogen applications.

Stainless steel (1.4404 / AISI 316L)

Stainless steel with broad level of media compatibility. Also suitable for chemical industry and sea water applications.

Oxygen and hydrogen

It is recommended to use an EPDM seal for the media oxygen / hydrogen to be monitored. The EPDM seal of the „Performance“ series (pp. 106-113) was successfully tested at the BAM (Federal Institute for Materials Testing) up to 250 bar by means of an oxygen pressure shock test at 60 °C.

EPDM must not come into contact with oil, as this results in swelling and softening of the material and thus the failure of the electronic pressure switch.

Country-specific safety requirements and application guidelines must be observed if the medium to be monitored is oxygen or hydrogen, such as DGUV accident prevention regulations (DGUV 500, Section 2.32 and BG 617).

Please specify when ordering „for oxygen, oil and grease-free“ or order plasma cleaned and individually packaged electronic pressure switches (see also „Plasma cleaning for oxygen applications / LABS-free (PWIS-free)“ on page 9).

Pressure peak dampening

If required, our electronic pressure switches can also be fitted with a pressure snubber (pressure peak orifice) to protect the measuring cell against transient pressure loads such as pressure peaks due to the switching of valves, cavitation effects, etc. which can shorten life expectancy.

For liquid media, the hole of a pressure snubber cannot be chosen to be any small size. At low temperatures the viscosity of the media will increase. In a case of dropping pressure the media might remain in the cavity behind the snubber which might affect the functionality of the electronic pressure switch. Thus a bore diameter of 0.8 mm has been established.

Product information

The technical information in this catalogue is based upon fundamental testing during product development, as well as upon empirical values. The information cannot be used for all application scenarios.

Testing of the suitability of our products for a specific application (e.g. also the checking of material compatibilities) falls under the responsibility of the user. It may be the case that suitability can only be guaranteed with appropriate field testing.

Subject to technical changes.

Selection matrix for electronic pressure switches

Type / series	0500	0501	0510	0511	0520	0570	0530	0531	0532	0533	0540	0541	0542	0544	0545	0546
Page	109	109	113	113	117	120	125	125	125	125	129	129	129	129	129	129
Technology	ceramic / thick-film	■	■	■	■	■										
Measuring cell	titanium / SoS						■	■	■	■	■	■	■	■	■	■
Variants	NO	■		■	■	■	■	■	■	■	■	■	■	■	■	■
	NC		■		■				■	■	■	■	■	■	■	■
	1 switching output	■	■	■	■	■		■	■	■						
	2 switching outputs						■				■	■	■	■	■	■
	PNP (High Side)	■	■	■	■	■	■	■	■	■	■	■	■	■	■	
	NPN (Low Side)								■	■				■	■	■
	analogue output 4 - 20 mA						■									
Supply voltage	9.6 – 32 V	■	■	■	■			■	■	■	■	■	■	■	■	■
	12–30V					■										
	15–36V					■										
Adjustment range	0 – 2 bar (0-29 psi)	■	■	■	■											
	0 – 4 bar (0-58 psi)	■	■	■	■											
	0 – 10 bar (0-145 psi)	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
	0 – 16 bar (0-232 psi)	■	■	■	■			■	■	■	■	■	■	■	■	■
	0 – 25 bar (0-362 psi)						■	■	■	■	■	■	■	■	■	■
	0 – 40 bar (0-580 psi)	■	■	■	■											
	0 – 100 bar (0-1,450 psi)	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
	0 – 250 bar (0-3,626 psi)	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
	0 – 400 bar (0-5,800 psi)						■	■	■	■	■	■	■	■	■	■
	0 – 600 bar (0-8,700 psi)						■	■	■	■	■	■	■	■	■	■
Switch point adjustability	at factory	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
	by customer (on site)			■	■	■	■	■	■	■	■	■	■	■	■	■
Hysteresis adjustability	at factory	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
	by customer (on site)						■									
	window mode (settable at factory)	■	■	■	■			■	■	■	■	■	■	■	■	■
Max. over-pressure	up to 2x	■	■	■	■	■	■									
	up to 4x							■	■	■	■	■	■	■	■	■
Size	hex 22							■	■	■	■	■	■	■	■	■
	hex 24	■	■	■	■											
	A/F 30					■										
	A/F 32						■									
Housing material	zinc-plated steel															
	stainless steel 1.4305 / AISI 303	■	■	■	■			■	■	■	■	■	■	■	■	■
	aluminium / die-casted zinc							■								
Additional functions	7-segment and menu control							■								
	LED switching state indicator	■	■	■	■			■	■	■	■	■	■	■	■	■
	Programmable via PPD05	■	■													
Option	suitable for oxygen (on request)	■	■	■	■											

■ M12x1 DIN EN 61076-2 101 A connector only

E.1

hex 24

Performance

adjustable at factory

Electronic pressure switches, Performance series

adjustable at factory or programmable with programming device PPD05



- Very attractively priced electronic pressure switches, particularly for high volume deployment
- High overpressure protection (up to 2 x)
- Small, compact electronic switches with ceramic sensor
- Hysteresis adjustable within a wide range (2 % – 98 %, set at factory)
- Programming of switching points and switching delay time possible via PPD05 (see Chapter E.7, page 133)
- Monitoring of a pressure range due to window function
- High level of adaptability to your requirements (custom solutions)
- Available as 'plasma cleaned for oxygen applications'¹⁾

¹⁾ For oxygen applications, the EPDM diaphragm can only be used up to 250 bar and a media temperature of max. +60°C.

Electronic pressure switches, Performance series

Technical details

	0500 NO 0501 NC
Transistor output:	PNP output (High-Side N-channel)
Supply voltage:	9.6 – 32 VDC with reverse voltage protection
Output current:	0.5 A with (≤ 0.2 A at ≥ 50 °C) short-circuit and overvoltage protection
Idle power consumption:	< 30 mA
Adjustment range p_{nom} :	0 - 2 bar (0 - 29 psi) 0 - 4 bar (0 - 58 psi) 0 - 10 bar (0 - 145 psi) 0 - 16 bar (0 - 232 psi) 0 - 40 bar (0 - 580 psi) 0 - 100 bar (0 - 1,450 psi) 0 - 250 bar (0 - 3,625 psi)
Max. overpressure: ¹⁾	4 bar (58 psi) 10 bar (145 psi) 20 bar (290 psi) 40 bar (580 psi) 100 bar (1,450 psi) 150 bar (2,175 psi) 375 bar (5,439 psi)
Burst pressure: ¹⁾	8 bar (116 psi) 20 bar (290 psi) 35 bar (507 psi) 60 bar (870 psi) 140 bar (2,030 psi) 300 bar (4,350 psi) 500 bar (7,252 psi)
Mechanical life expectancy:	5,000,000 switching cycles at rise rates to 1,000 bar/s at p_{nom}
Pressure rise rate:	1,450 psi (1,000 bar/s)
Accuracy:	± 0.5 % of adjustment range p_{nom} (full scale (FS)) at room temperature
Switching point adjustment range:	3 ... 100 % of adjustment range p_{nom} (FS), set at factory
Hysteresis: ²⁾	2 ... 98 % FS, programmable at factory (max. tolerance ± 1.0 % of adjustment range p_{nom})
Default-Hysteresis without order specification	2 bar (29 psi) 4 bar (58 psi) 10 bar (145 psi) 16 bar (232 psi) 40 bar (580 psi) 100 bar (1,450 psi) 250 bar (3,625 psi)
	0.1 bar (1.5 psi) 0.2 bar (3 psi) 0.5 bar (7 psi) 0.8 bar (12 psi) 2 bar (29 psi) 5 bar (72.5 psi) 10 bar (145 psi)
Operating mode:	with hysteresis or window function (see page 101), programmable at factory
Resolution:	0.2 % of adjustment range p_{nom} (FS)
Long term stability:	± 0.1 % of adjustment range p_{nom} (FS) per year
Repeatability: ³⁾	± 0.1 % of adjustment range p_{nom} (FS)
Switching time:	< 4 ms
Switch-on / - off delay:	Adjustable between 0 and 2 s (please specify when ordering, otherwise default 0 s is set)
Temperature error: ³⁾	± 0.04 % of adjustment range p_{nom} (FS) / °C
Compensated temperature range:	0 °C ... +70 °C (+32 °F ... +158 °F), total error ≤ 2 %
Temperature range ambient:	-30 °C ... +100 °C (-22 °F ... +212 °F)
Temperature range media:	with TPE seal: -22 °F ... +230 °F (-30 °C ... +110 °C)
	with NBR seal: -22 °F ... +212 °F (-30 °C ... +100 °C)
	with EPDM seal: -22 °F ... +257 °F (-30 °C ... +125 °C)
	with FKM seal: ⁴⁾ -4 °F ... +257 °F (-20 °C ... +125 °C)
Wetted parts material	Housing: Stainless steel (1.4305 / AISI 303)
	Messuring cell: Ceramic
	Seal material: TPE, NBR, EPDM or FKM ⁴⁾
Insulation resistance:	> 100 MΩ (35 VDC)
Vibration resistance:	20 g; at 4...2000 Hz sine wave, DIN EN 60068-2-6
Shock resistance:	500 m/s ² ; 11 ms half sine wave; DIN EN 60068-2-27
Protection class:	IP65: DIN EN 175301-803-A IP67: M12x1, AMP-Superseal®, cable connector IP67 and IP6K9K: Bayonet ISO 15170-A1-4.1, Deutsch DT04-3P
Electromagnetic compatibility:	EMV 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007
Cable output thread size:	For DIN EN 175301: PG9 (outside diameter of cable 6 to 9 mm)
Weight:	approx. 80 g (DIN EN 175301 approx. 110 g)

¹⁾ Static pressure, dynamic pressure 30 to 50 % lower. Values refer to the hydraulic or pneumatic part of the electronic pressure switch.



²⁾ 3 ... 98 % with programming device PPD05 (see page 133).

³⁾ Within the compensated temperature range.

⁴⁾ FKM sealings are only suitable for pressure ranges up to 0-16 bar.

E.1

hex 24
Performance
adjustable at factory

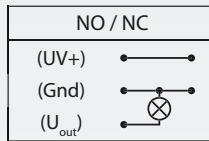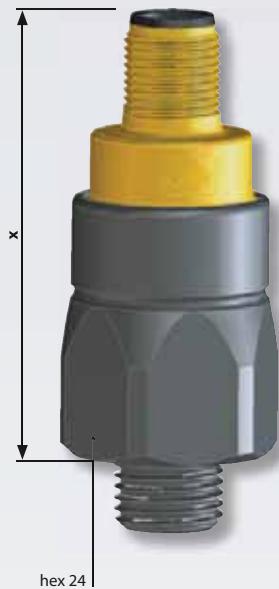

0500 / 0501

Electrical connectors and threads

DIN EN 175301-803-A

Pin	Assignment
1	U _{V+}
2	Gnd
3	U _{out}
PE	

IP65
x ~ 60 mm without socket device
x ~ 77 mm with socket device
Connection code: 013

M12 – DIN EN 61076-2-101 A

Pin	Assignment
1	U _{V+}
2	nc
3	Gnd
4	U _{out}

IP67
x ~ 54 mm
Connection code: 002

ISO 15170-A1-4.1

Pin	Assignment
1	U _{V+}
2	Gnd
3	U _{out}
4	nc

IP67, IP6K9K
x ~ 56 mm
Connection code: 004

AMP Superseal 1.5 °

Pin	Assignment
1	U _{out}
2	Gnd
3	U _{V+}

IP67
x ~ 61 mm
Connection code: 007

Deutsch DT04-3P



Pin	Assignment
A	U _{V+}
B	Gnd
C	U _{out}

IP67, IP6K9K
x ~ 61 mm
Connection code: 010

Cable connection

Pin	Assignment
red	U _{V+}
white	U _{out}
black	Gnd

IP67
x ~ 47 mm
(+ 25 mm bend relief)
Cable length ~ 2 m
Connection code: 011

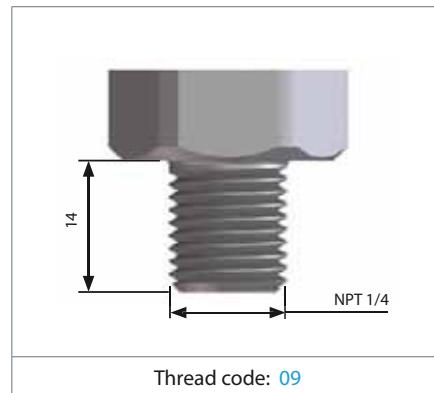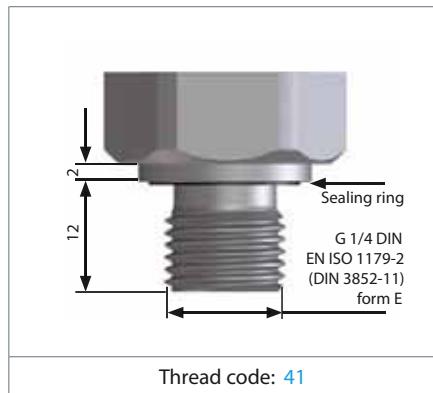

0500 / 0501

Order matrix for electronic pressure switches

E.1

hex 24
Performance
factory adjustable



	Type	Adjustment range	Pressure connection	Seal material	Electrical connection
Type					
Normally open (NO), PNP, set point - adjustment made by factory ¹⁾	0500				
Normally closed (NC), PNP, set point- adjustment made by factory ¹⁾	0501				
Max. overpressure ²⁾	Burst pressure	Pressure range ¹⁾			
4 bar (58 psi)	8 bar (115 psi)	0 - 2 bar (approx. 29 psi)	200		
10 bar (145 psi)	20 bar (290 psi)	0 - 4 bar (approx. 58 psi)	400		
20 bar (290 psi)	35 bar (500 psi)	0 - 10 bar (approx. 145 psi)	101		
40 bar (580 psi)	60 bar (870 psi)	0 - 16 bar (approx. 230 psi)	161		
100 bar (1,450 psi)	140 bar (2,000 psi)	0 - 40 bar (approx. 580 psi)	401		
150 bar (2,175 psi)	300 bar (4,350 psi)	0 - 100 bar (approx. 1,450 psi)	102		
375 bar (5,439 psi)	500 bar (7,252 psi)	0 - 250 bar (approx. 3,626 psi)	252		
Pressure connection					
1/4 BSPP – ISO 1179-2 (DIN 3852), form E, male thread	41				
NPT 1/4	09				
Seal material – Application areas					
NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1			
EPDM	Break fluid, ozone, acetylene, hydrogen, oxygen, etc.	2			
FKM (Viton®) ³⁾	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3			
TPE	Mineral oil, HFC, HFD, water, water-salt solutions, methanol	7			
Electrical connection					
DIN EN 175301-803-A (DIN 43650-A); socket device included	013				
M 12x1 - DIN EN 61076-2-101-A	002				
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)	004				
AMP Superseal 1.5°	007				
Deutsch DT04-3P	010				
Cable connection (length of cable 6.5 ft / 2 m standard)	011				
Order number:	05XX	XXX	XX	X	XXX

1) Please state switching point and hysteresis when ordering.

2) Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the electronic pressure switch.

3) FKM sealings are only suitable for pressure ranges up to 0-16 bar.



E.2

hex 24

Performance

adjustable by user

Electronic pressure switches, Performance series

hex 24, adjustable by user



- Very competitively priced electronic pressure switches
- High overpressure protection (up to 2 x)
- Small, compact electronic switches with ceramic sensor
- Easy adjustment of switching point from the outside using set screw
- Hysteresis adjustable within broad range (2 % – 98 %, set at factory)
- High level of adaptability to your requirements (custom solutions)
- Available as 'plasma cleaned for oxygen applications'¹⁾

Technical details

Type:	0510 NO 0511 NC												
Transistor output	PNP output (High-Side N-channel)												
Supply voltage:	9.6 – 32 VDC with reverse voltage protection												
Output current:	0.5 A with (≤ 0.2 A at ≥ 50 °C) short-circuit and overvoltage protection												
Idle power consumption:	< 30 mA												
Standard pressure range p_{nom} :	0 – 2 bar (29 psi)	0 – 4 bar (58 psi)	0 – 10 bar (145 psi)	0 – 16 bar (230 psi)	0 – 40 bar (580 psi)	0 – 100 bar (1,450 psi)	0 – 250 bar (3,625 psi)						
Overpressure protection $p^1)$:	4 bar (58 psi)	10 bar (145 psi)	20 bar (290 psi)	40 bar (580 psi)	100 bar (1,450 psi)	150 bar (2,175 psi)	375 bar (5,439 psi)						
Burst pressure: ¹⁾	8 bar (115 psi)	20 bar (290 psi)	35 bar (500 psi)	60 bar (870 psi)	140 bar (2,000 psi)	300 bar (4,350 psi)	500 bar (7,251 psi)						
Mechanical life expectancy:	5,000,000 pulsations at rise rates to 14.5 psi/ms (1 bar/ms) at p_{nom}												
Pressure rise:	14,503 psi (1,000 bar/s)												
Accuracy:	± 0.5 % of adjustment range p_{nom} (full scale (FS)) at room temperature												
Switching point adjustment range:	3 ... 100 % of adjustment range p_{nom} (FS), field adjustable												
Differential: ²⁾	2 ... 98 % FS, programmable at factory (max. tolerance ± 1.0 % of adjustment range p_{nom})												
Default-Hysteresis without order specification:	2 bar (29 psi)	4 bar (58 psi)	10 bar (145 psi)	16 bar (232 psi)	40 bar (580psi)	100 bar (1,450 psi)	250 bar (3,626 psi)						
	0.1 bar	0.2 bar	0.5 bar	0.8 bar	2 bar	5 bar	10 bar						
Resolution:	0.2% of adjustment range p_{nom} (FS)												
Long term stability:	± 0.1 % of adjustment range p_{nom} (FS) per year												
Repeatability: ²⁾	± 0.1 % of adjustment range p_{nom} (FS)												
Switching time:	< 4 ms												
Temperature error: ²⁾	± 0.04 % of adjustment range p_{nom} (FS) / °C												
Compensated temperature range:	+32 °F ... +158 °F (0 °C ... +70 °C), total error ≤ 2 %												
Temperature range ambient:	-22 °F ... +212 °F (-30 °C ... +100 °C)												
Temperature range media:	with NBR (BunaN) seal: -22 °F ... +212 °F (-30 °C ... +100 °C)												
	with EPDM seal: -22 °F ... +257 °F (-30 °C ... +125 °C)												
	with FKM (Viton®) seal: -4 °F ... +257 °F (-20 °C ... +125 °C)												
	with TPE seal: -22 °F ... +230 °F (-30 °C ... +110 °C)												
Wetted parts material	Housing:	Stainless steel (AISI 303 / 1.4305)											
	Measuring cell:	Ceramic											
	Seal material:	NBR (BunaN), EPDM, FKM ³⁾ (Viton®) or TPE											
Insulation resistance:	> 100 MΩ (500 VDC, Ri > 42 Ω)												
Vibration resistance:	20 g; at 4 ... 2000 Hz sine wave; DIN EN 60068-2-6												
Shock resistance:	500 m/s ² ; 11 ms half sine wave DIN EN 60068-2-27												
Protection class:	IP65: DIN EN 175301-803-A IP67: M12x1, AMP Superseal®, cable connector IP67 and IP6K9K: Bayonet ISO 15170-A1-4.1, Deutsch DT04-3P												
Electromagnetic compatibility:	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007												
Cable output thread size:	For DIN EN 175301: PG9 (outside diameter of cable 6 to 9 mm)												
Weight:	approx. 2.82 oz / 80 g (DIN EN 175301 approx. 3.88 oz / 110 g)												

1) Static pressure, dynamic pressure 30 to 50 % lower. Values refer to the hydraulic or pneumatic part of the electronic pressure switch.

2) Within the compensated temperature range.



3) FKM sealings are only suitable for pressure ranges up to 0-16 bar.

E.2

hex 24

Performance

adjustable by user

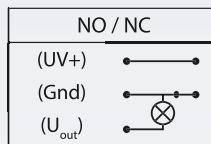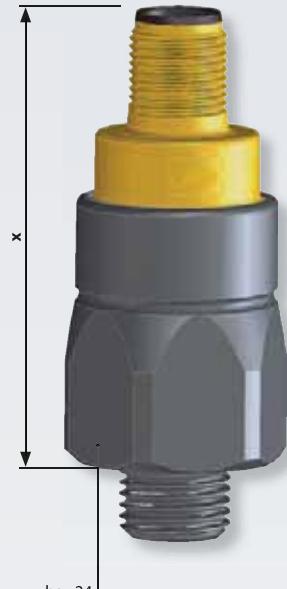

0510 / 0511

Electrical connectors and threads

DIN EN 175301-803-A

Pin	Assignment
1	U _{v+}
2	Gnd
3	U _{out}
PE	⏚
	IP65
x ~ 60 mm without socket device	
x ~ 77 mm with socket device	
	Connection code: 013

M12-DIN EN 61076-2-101 A

Pin	Assignment
1	U _{v+}
2	nc
3	Gnd
4	U _{out}
	IP67
x ~ 54 mm	
	Connection code: 002

ISO 15170-A1-4.1



Pin	Assignment
1	U _{v+}
2	Gnd
3	U _{out}
4	nc
	IP67, IP6K9K
x ~ 56 mm	
	Connection code: 004

AMP Superseal 1.5 °

Pin	Assignment
1	U _{out}
2	Gnd
3	U _{v+}
	IP67
x ~ 61 mm	
	Connection code: 007

Deutsch DT04 - 3P

Pin	Assignment
A	U _{v+}
B	Gnd
C	U _{out}
	IP67, IP6K9K
x ~ 61 mm	
	Connection code: 010

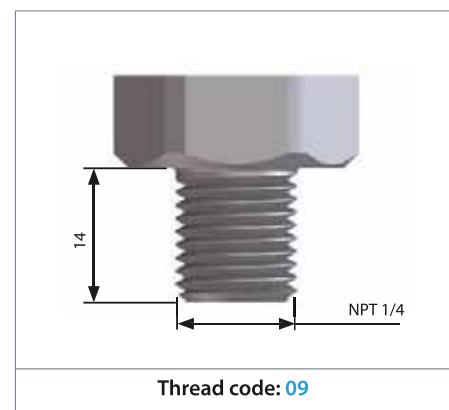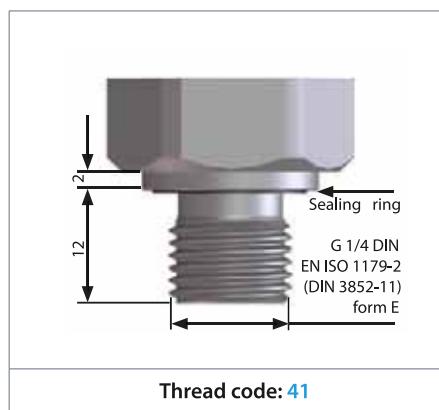

0510 / 0511

Order matrix for electronic pressure switches

E.2

hex 24
Performance
field adjustable



	Type	Adjustment range	Pressure connection	Seal material	Electrical connection
Type		↓	↓	↓	↓
Normally open (NO), PNP, set point -field adjustable ¹⁾	0510				
Normally closed (NC), PNP, set point -field adjustable ¹⁾	0511				
Max. overpressure ²⁾	Burst pressure	Pressure range			
4 bar (58 psi)	8 bar (115 psi)	0 – 2 bar (approx. 29 psi)	200		
10 bar (145 psi)	20 bar (290 psi)	0 – 4 bar (approx. 58 psi)	400		
20 bar (290 psi)	35 bar (500 psi)	0 – 10 bar (approx. 145 psi)	101		
40 bar (580 psi)	60 bar (870 psi)	0 – 16 bar (approx. 230 psi)	161		
100 bar (1,450 psi)	140 bar (2,000 psi)	0 – 40 bar (approx. 580 psi)	401		
150 bar (2,175 psi)	300 bar (4,350 psi)	0 – 100 bar (approx. 1,450 psi)	102		
375 bar (5,439 psi)	500 bar (7,251 psi)	0 – 250 bar (approx. 3,625 psi)	252		
Pressure connection		↓			
1/4 BSPP – ISO 1179-2 (DIN 3852), form E, male thread	41				
NPT 1/4	09				
Seal material – Application areas		↓			
NBR (BunaN)	Hydraulic/machine oil, air, nitrogen, etc.	1			
EPDM	Break fluid, ozone, acetylene, hydrogen, oxygen, etc.	2			
FKM (Viton®) ³⁾	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3			
TPE	Hydraulic / machine oil, air, nitrogen, water, acetylene, etc.	7			
Electrical connection		↓			
DIN EN 175301-803-A (DIN 43650-A) coupler socket included in delivery	013				
M 12x1 - DIN EN 61076-2-101-A	002				
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)	004				
AMP Superseal 1.5°	007				
Deutsch DT04-3P	010				
Order number:	051X	XXX	XX	X	XXX

- 1) Switching points and hysteresis can also be adjusted at factory.
 2) Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the electronic pressure switch.
 3) FKM sealings are only suitable for pressure ranges up to 0-16 bar.



E.3

hex 27 / 30 A/F
adjustable by user

Electronic pressure switches

hex 27 and 30 A/F, adjustable by user



- Ceramic sensor in thick film technology
- High overpressure protection to 500 bar
- Easy adjustment of switching point from the outside using set screw
- Hysteresis available within broad range (2 % – 95 %, set at factory)
- **Very high switching currents (to 1.4 A)**

Technical details

Type:	0520 NO or NC				
Transistor output:	PNP output (High-Side N-channel)				
Supply voltage:	15 – 36 VDC				
Output current:	1.4 A transistor output (PNP, DC12) with short-circuit and overvoltage protection				
Idle power consumption:	< 15 mA				
Adjustment range p_{nom} :	0 – 10 bar (145 psi)	0 – 100 bar (1,450 psi)	0 – 250 bar (3,625 psi)		
Max. overpressure ¹⁾ :	20 bar (290 psi)	150 bar (2,175 psi)	500 bar (7,250 psi)		
Burst pressure ²⁾ :	25 bar (360 psi)	175 bar (2,540 psi)	600 bar (8,700 psi)		
Mechanical life expectancy:	5,000,000 switching cycles in adjustment range at p_{nom}				
Pressure rise:	$\leq 14,500 \text{ psi/s}$ ($\leq 1,000 \text{ bar/s}$)				
Accuracy:	$\pm 0.5\%$ of adjustment range p_{nom} (full scale (FS)) at room temperature				
Switching point adjustment range:	2 ... 100 % of adjustment range p_{nom} (FS), set from outside using set screw				
Differential:	2 ... 95 % FS, programmable at factory (max. tolerance $\pm 1.0\%$ of adjustment range)				
Standard differential without order specification:	approx. 7.25 psi (0.5 bar)	approx. 72.5 psi (5 bar)	approx. 145 psi (10 bar)		
Resolution:	0.15 % of adjustment range p_{nom} (FS)				
Long term stability:	$\pm 0.1\%$ of adjustment range p_{nom} (FS) per year				
Repeatability ³⁾ :	$\pm 0.1\%$ of adjustment range p_{nom} (FS)				
Switching time:	< 4 ms				
Temperature error ⁴⁾ :	$\pm 0.04\%$ of adjustment range p_{nom} (FS) / °C				
Compensated temperature range:	+32 °F ... +158 °F (0 °C ... +70 °C), total error $\leq 2\%$				
Temperature range ambient:	-22 °F ... +176 °F (-30 °C ... +80 °C)				
Temperature range media:	with NBR (BunaN) seal: -22 °F ... +212 °F (-30 °C ... +100 °C)				
	with FKM (Viton®) seal: -4 °F ... +257 °F (-20 °C ... +125 °C)				
Wetted parts material	Housing:	zinc-plated steel			
	Measuring cell:	Ceramic			
	Seal material:	NBR (BunaN), EPDM or FKM (Viton®)			
Insulation resistance:	> 100 MΩ (500 VDC, $R_i > 42$) Ω				
Vibration resistance:	10 g at 4 ... 2000 Hz sine wave; DIN EN 60068-2-6				
Shock resistance:	294 m/s ² ; 11 ms half sine wave; DIN EN 60068-2-27				
Protection class:	IP65: (DIN EN 175301-803-A); IP67: (M12x1)				
Electromagnetic compatibility:	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007				
Weight:	approx. 8.5 oz (240 g)				

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Value refers to the hydraulic or pneumatic part of the electronic pressure switch.

²⁾ Within the compensated temperature range

E.3

hex 27 / 30 A/F
field adjustable



	no / nc
O 1	(UV+)
O 2	(Gnd)
O 3	(U _{out})

0520

Electrical connectors and threads

DIN EN 175301-803-A (DIN 43650-A)



Pin	Assignment
1	Uv+
2	Gnd
3	U _{out}
PE	PE

IP65
Cable output PG9
(outside diameter of cable 6 to 9 mm)

Order number: 001

M 12x1 - DIN EN 61076-2-101-A



Pin	Assignment
1	Uv+
2	nc
3	Gnd
4	U _{out}

IP67

Order number: 002



Thread code: 14



Thread code: 41



0520

Order matrix for electronic pressure switches

E.3

hex 27 / 30 A/F
field adjustable



E

	Type	Adjustment range	Pressure connection	Seal material	Electrical connection
--	------	------------------	---------------------	---------------	-----------------------

Type	↓	↓	↓	↓	↓
Electronic pressure switch		0520			

Adjustment range ¹⁾ for NO

0 – 145 psi (0 – 10 bar)	470
0 – 1,450 psi (0 – 100 bar)	472
0 – 3,625 psi (0 – 250 bar)	474

Adjustment range ¹⁾ for NC

0 – 145 psi (0 – 10 bar)	471
0 – 1,450 psi (0 – 100 bar)	473
0 – 3,625 psi (0 – 250 bar)	475

Pressure connection



1/4 BSPP – female thread	14
1/4 BSPP – ISO 1179-2 (DIN 3852), form E	41



Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
FKM (Viton®)	Hydraulicfluids (HFA, HFB, HFD), petrol/gasoline, etc.	3



Electrical connection

DIN EN 175301-803-A (DIN 43650-A) ; socket device included	001
M 12x1 - DIN EN 61076-2-101-A	002



Order number:	0520	47X	XX	X	XXX
---------------	------	-----	----	---	-----

Also available factory adjusted. If you require factory adjustment, please state switching point and hysteresis when ordering.

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Value refers to the hydraulic or pneumatic part of the electronic pressure switch.



Menu-controlled electronic pressure switches with display



- Menu-controlled, simple programming of switching functions
- 2 switching outputs and 1 analogue output
- Numerous programming functions, such as
 - switching time delay
 - zero point reset
 - peak value memory
 - switching point counter
- Current pressure value and switching states shown on 3-digit display
- Very high switching currents up to 1.4 A

Menu-controlled electronic pressure switches

Technical details

E.4

menu-controlled



E

0570 Electronic pressure switches	
Switching function:	NC/NO, programmable, 2 switching points, switching time delay, zero point reset, peak value memory (within adjustment range), switching point counter
Settings:	Programmable using keypad on front
Outputs:	2 transistor outputs (each 1.4 A DC12 / PNP) 1 analogue output (4 – 20 mA)
Supply voltage U _B :	12 - 30 VDC
Switching status display:	2 LEDs (yellow)
Pressure display:	Current pressure displayable in bar or PSI on 3-digit LED (red)
Life expectancy:	5,000,000 switching cycles at rise rates to 1,000 bar/s at p _{nom}
Pressure rise rate:	≤ 14,500 psi/s (≤ 1,000 bar/s)
Switching time:	< 4 ms
Switching time delay:	Adjustable between 0 and 3.0 s
Hysteresis:	1 – 99 % FS, programmable from keypad
Accuracy:	±0.5 % (FS at room temperature)
Display accuracy:	±0.5 % (FS at room temperature) ±2 digits
Temperature drift::	±0.2 % / 50 °F (±0.2 % / 10 °C)
Temperature range:	NBR, FKM -4 °F... +176 °F (-20 °C ... +80 °C)
Compensated temperature range:	0 °C ... +70 °C (32 °F ... 158 °F), total error ±2 %
Housing material:	die-casted zinc
Wetted parts material	Housing: anodised aluminium
	Measuring cell: Ceramic
	Seal material: NBR or FKM
Vibration resistance:	10 g at 5 ... 2000 Hz sine wave; DIN EN 60068-2-6
Shock resistance:	294 m/s ² ; 11 ms half sine wave; DIN EN 60068-2-27
Protection class:	IP65
Electromagnetic compatibility:	acc. to EN 50081-1, EN 50081-2, EN 50082-2
Weight:	approx. 340 g
Access PIN:	The switch can be protected with a pin between 1 and 999

E.4

menu-controlled



0570

Electronic pressure switches

- Anodised aluminium and die-casted zinc
- Ceramic measuring cell in thick-film technology
- Supply voltage 12 ... 30 VDC
- Overpressure protection to 290 / 2,175 / 7,200 psi (20 / 150 / 500 bar)¹⁾
- Programmable using keypad on front
- Switching time delay (setting from 0 to 3 s)
- Peak value memory (within the measurement range)
- Pin protection possible to prevent misuse
- Socket device included

p_{\max} in psi (bar)	Burst pressure in psi (bar)	Adjustment range in psi (bar)	Thread	Order number:
----------------------------	--------------------------------	----------------------------------	--------	---------------

0570 Electronic switches

290 psi ¹⁾ (20 bar ¹⁾)	360 psi (25 bar)	0 – 145 psi (0 – 10 bar)	1/4 BSPP female	0570 – 467 14 – X – 001
2,175 psi ¹⁾ (150 bar ¹⁾)	2,540 psi (175 bar)	0 – 1,450 psi (0 – 100 bar)		0570 – 468 14 – X – 001
7,250 psi ¹⁾ (500 bar ¹⁾)	9,427 psi (650 bar)	0 – 5,800 psi (0 – 400 bar)		0570 – 469 14 – X – 001


Seal material – Application areas

NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, etc.	1
FKM (Viton®)	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	3

Order number:

0570 – 46X 14 – X – 001

Wiring chart

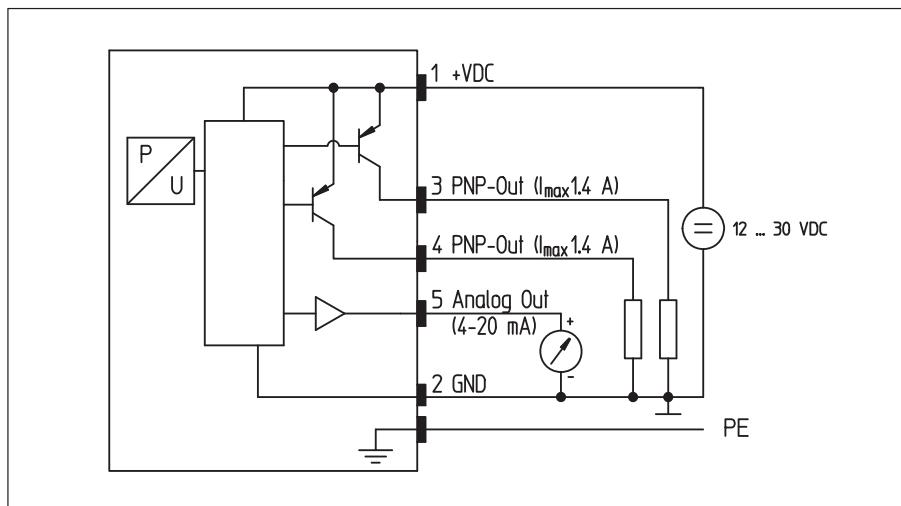

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the electronic pressure switch.

Electronic pressure switches, High-Performance series

hex 22 with one switching output



- Outstanding overpressure protection (up to 4 x)
- Ideal choice for mobile hydraulic applications
- Long service life even under high pressure change rates
- Wetted parts made of stainless steel and titanium ensuring excellent media compatibility
- All welded design, no elastomeric seal
- Silicon-on-sapphire technology (SoS) for highest reliability, accuracy and reliable process monitoring
- Very low temperature error and very good long-term stability
- Adjustment of switching point and hysteresis at factory

For versions with 2 switching outputs,
please refer to chapter E.6, page 126

Technical details

Silicon-on-Saphire
Sensor with One
Switching Function

Type	0530 NO 0531 NC	0532 NO 0533 NC			
Number of transistor outputs:	1 PNP output (High Side N-channel MOSFET)	1 NPN output (Low Side N-channel MOSFET)			
Supply voltage:	9.6 – 32 VDC				
Idle power consumption:	< 15 mA				
Standard adjustment range p_{nom}	0 – 10 bar (0 – 145 psi)	0 – 25 bar (0 – 360 psi)	0 – 100 bar (0 – 1,450 psi)	0 – 250 bar (0 – 3,625 psi)	0 – 600 bar (0 – 8,700 psi)
Overpressure protection p_u^1	40 bar (580 psi)	100 bar (1,450 psi)	400 bar (5,800 psi)	1,000 bar (14,500 psi)	1,650 bar (29,930 psi)
Burst pressure ²⁾ :	80 bar (1,160 psi)	200 bar (2,900 psi)	800 bar (11,600 psi)	2,000 bar (29,000 psi)	2,000 bar (29,000 psi)
Mechanical life expectancy:	10,000,000 pulsations at rise rates to 72.5 psi/ms (5 bar/ms) at p_{nom}				
Permitted pressure change rate:	$\leq 72.5 \text{ psi/ms} (\leq 5 \text{ bar / ms})$				
Switching point adjustment range:	2 ... 100 % of the nominal pressure range (Full Scale, FS), programmable at factory				
Differential:	0.2 ... 99.8 % of the nominal pressure range (FS), programmable at factory (set to 5% of the switching point as standard)				
Accuracy:	$\pm 0.5\%$ of the nominal pressure range (FS) at room temperature, $\pm 0.25\%$ BFSL				
Resolution:	0.1 % of the nominal pressure range (FS)				
Switching delay:	ON (0 ... 0.5 s) / OFF (0 ... 2 s) delay in increments of 1 ms, irrespective of switching point, programmable at factory (specify value when ordering, otherwise default value of 0 s is set)				
Output:	0.5 A transistor output with short-circuit and overvoltage protection				
Operating mode:	With differential or window mode, programmable at factory				
Long term stability:	$\pm 0.1\%$ FS p. a.				
Repeatability: ²⁾	$\pm 0.1\%$ FS				
Temperature error: ²⁾	$\pm 0.02\%$ / 1 K FS				
Compensated temperature range:	-4 °F ... +176°F (-20 °C ... +80°C)				
Temperature range media:	-40 °F ... +257°F (-40 °C ... +125°C)				
Temperature range ambient:	-40 °F ... +212°F (-40 °C ... +100°C)				
Wetted parts material:	Stainless steel AISI 303 (1.4305) and titanium				
Housing material:	Stainless steel AISI 303 (1.4305)				
Insulation resistance:	> 100 MΩ (500 VDC, Ri > 42 Ω)				
Switching time:	< 2 ms				
Vibration resistance:	20 g at 4 ... 2000 Hz sine wave; DIN EN 60068-2-6				
Shock resistance:	half sine wave 500 m/s ² ; 11 ms; DIN EN 60068-2-27				
Protection class:	Refer to the electrical connections				
EMC:	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007				
Protection against reverse polarity, short-circuit and over voltage surges:	built-in				
Weight:	approx. 2.8 oz / 80 g (DIN 175301 approx. 3.8 oz / 110 g, cable version approx. 4.8 oz / 135 g)				

1) Static pressure, dynamic value is 30 to 50 % lower. Values refer to the hydraulic/pneumatic part of the electronic pressure switch.


2) Within the compensated temperature range.

E.5

hex 22
High Performance
1 switching output




Connection diagrams

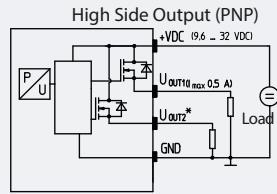

Pin assignment depending on electrical connections
* U_{out2} only for series 054x

Low-Side Output (NPN)

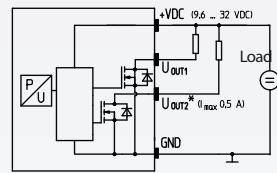

Pin assignment depending on electrical connections
* U_{out2} only for series 054x

Technical modifications and errors excepted.



0530 / 0531 / 0532 / 0533

Electrical connectors and threads

DIN EN 175301- 803 - A	
PE	2
1	3
1	1
	2
	3
Pin	Assignment
1	U_{v+}
2	Gnd
3	U_{out}
PE	
IP65	
x ~ 60 / 76 mm*	
d ~ Ø 30 mm	
Connection code: 013	

M12 – DIN EN 61076-2-101 A	
1	LED
2	
3	
4	
Pin	Assignment
1	U_{v+}
2	nc
3	Gnd
4	U_{out}
IP67	
x ~ 54 mm	
d ~ Ø 22 mm	
Connection code: 002	

ISO 15170 - A1 - 4.1	
1	
2	
3	
4	
Pin	Assignment
1	U_{v+}
2	Gnd
3	U_{out}
4	nc
IP67, IP6K9K	
x ~ 65 mm	
d ~ Ø 27 mm	
Connection code: 004	

AMP Superseal 1.5 °	
1	
2	
3	
Pin	Assignment
1	U_{out}
2	Gnd
3	U_{v+}
IP67	
x ~ 73 mm	
d ~ Ø 26 mm	
Connection code: 007	

Deutsch DT04 - 4P	
4	1
3	2
2	
1	
Pin	Assignment
1	Gnd
2	U_{v+}
3	nc
4	U_{out}
IP67, IP6K9K	
x ~ 74 mm	
d ~ Ø 23 mm	
Connection code: 008	

Deutsch DT04 - 3P	
4	1
3	A
2	C
1	B
Pin	Assignment
A	U_{v+}
B	Gnd
C	U_{out}
IP67, IP6K9K	
x ~ 74 mm	
d ~ Ø 23 mm	
Connection code: 010	


Cable connection	
red	U_{v+}
white	U_{out}
black	Gnd
IP67	
x ~ 44 mm (+ 20 mm bend relief) cable length ~ 2 m	
d ~ Ø 22 mm	
Connection code: 011	




Thread code: 41



Thread code: 03

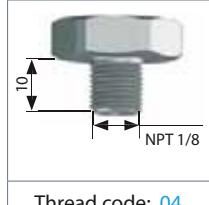


Thread code: 04

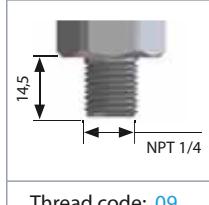

Thread code: 09



Thread code: 30

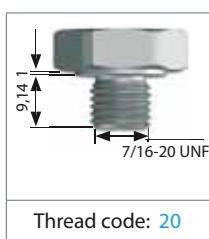

Thread code: 20



Thread code: 21



Thread code: 42

0530 / 0531 / 0532 / 0533

Order matrix for electronic pressure switches

E.5

hex 22



Silicon-on-Saphire
Sensor with One
Switching Function

	Type	Pressure range	Pressure connection	Pressure unit	Electrical connection
Type	↓	↓	↓	↓	↓
PNP output (High Side), NO	0530				
PNP output (High Side), NC	0531				
NPN output (Low Side), NO	0532				
NPN output (Low Side), NC	0533				
Max. overpressure ²⁾	Burst pressure	Adjustment range ¹⁾			
40 bar (580 psi)	80 bar (1,160 psi)	0 – 10 bar (0 – 145 psi)	101		
100 bar (1,450 psi)	200 bar (2,900 psi)	0 – 25 bar (0 – 362.5 psi)	251		
400 bar (5,800 psi)	800 bar (11,600 psi)	0 – 100 bar (0 – 1,450 psi)	102		
1,000 bar (14,500 psi)	2,000 bar (29,000 psi)	0 – 250 bar (0 – 3,625 psi)	252		
1,650 bar (23,930 psi)	2,000 bar (29,000 psi)	0 – 600 bar (0 – 8,700 psi)	602		
Pressure connection	↓				
1/4 BSPP – DIN EN ISO 1179-2 (DIN 3852-11) form E	41				
1/4 BSPP – DIN 3852-A	03				
NPT 1/8	04				
NPT 1/4	09				
M 10x1 cyl. DIN 3852-A	30				
7/16-20 UNF (max. 250 bar)	20				
9/16-18 UNF	21				
M 14x1.5 – DIN EN ISO 9974-2 (DIN 3852-11) form E	42				
Pressure unit	↓				
bar		B			
Electrical connection	↓				
DIN EN 175301-803-A (DIN 43650-A); socket device included	013				
M 12 – DIN EN 61076-2-101 A	002				
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)	004				
AMP Superseal 1.5°	007				
Deutsch DT04-4P	008				
Deutsch DT04-3P	010				
Cable connection (length of cable 6.5 ft / 2 m standard)	011				
Order number:	05XX	XXX	XX	B	XXX

¹⁾ Please state switching point and hysteresis when ordering.

²⁾ Static pressure, dynamic pressure 30 to 50% lower. Value refers to the hydraulic or pneumatic part of the electronic pressure switch.



E.6
hex 22
High Performance
2 switching outputs

Electronic pressure switches, High-Performance series

hex 22 with two switching outputs



- Outstanding overpressure protection (up to 4 x)
- Ideal choice for mobile hydraulic applications
- Long service life even under high pressure change rates
- Wetted parts made of stainless steel and titanium ensuring excellent media compatibility
- All welded design, no elastomeric seal
- Silicon-on-sapphire technology (SoS) for highest reliability, accuracy and reliable process monitoring
- Very low temperature error and very good long-term stability
- Adjustment of switching point and hysteresis at factory

For versions with 1 switching output,
please refer to chapter E.5, page 122

Technical details

Silicon-on-Saphire
Sensor with Two
Switching Functions


Type	0540 NO / NO 0541 NC / NC 0542 NO / NC	0544 NO / NO 0545 NC / NC 0546 NO / NC			
Number of transistor outputs:	2 PNP outputs (High Side N-channel MOSFET)	2 NPN outputs (Low Side N-channel MOSFET)			
Supply voltage:	9.6 – 32 VDC				
Idle power consumption:	< 15 mA				
Standard-Adjustment range p_{nom} :	0 – 10 bar (0 – 145psi)	0 – 25 bar (0 – 360psi)	0 – 100 bar (0 – 1,450psi)	0 – 250 bar (0 – 3,625psi)	0 – 600 bar (0 – 8,700psi)
Overpressure protection $p_u^{(1)}$	40 bar (580psi)	100 bar (1,450psi)	400 bar (5,800psi)	1,000 bar (14,500psi)	1,650 bar (23,930psi)
Burst pressure: ⁽¹⁾	80 bar (1,160psi)	200 bar (2,900psi)	800 bar (11,600psi)	2,000 bar (29,000psi)	2,000 bar (29,000psi)
Mechanical life expectancy:	10,000,000 pulsations at rise rates to 72.5 psi/ms (5 bar/ms) at p_{nom}				
Permitted pressure change rate:	$\leq 72,518$ psi/s ($\leq 5,000$ bar/s)				
Switching point adjustment range:	2 ... 100 % of the nominal pressure range (Full Scale, FS), programmable at factory				
Differential:	0.2 ... 99.8 % of the nominal pressure range (Full Scale, FS), programmable at factory (5 % of the switching point is set as standard)				
Accuracy:	± 0.5 % of the nominal pressure range (FS) at room temperature, ± 0.25 % BFSL				
Resolution:	0.1 % of the nominal pressure range (FS)				
Switching delay:	ON (0 ... 0.5 s) / OFF (0 ... 2 s) delay in increments of 1 ms, irrespective of switching point, programmable at factory (specify value when Ordering, otherwise default value of 0 s is set)				
Output:	0.5 A transistor output with short-circuit and overvoltage protection				
Operating mode:	with hysteresis or window function (see page 101), programmable at factory				
Long term stability:	± 0.1 % FS p. a.				
Repeatability: ⁽²⁾	± 0.1 % FS				
Temperature error: ⁽²⁾	± 0.02 % / 1 K FS				
Compensated temperature range:	-4 °F ... +176°F (-20 °C ... +80 °C)				
Temperature range media:	-40 °F ... +257°F (-40 °C ... +125 °C)				
Temperature range ambient:	-40 °F ... +212°F (-40 °C ... +100 °C)				
Wetted parts material:	Stainless steel AISI 303 (1.4305) and titanium				
Housing material:	Stainless steel AISI 303 (1.4305)				
Insulation resistance:	> 100 MΩ (500 VDC, Ri > 42 Ω)				
Switching time:	< 2 ms				
Vibration resistance:	20 g at 4 ... 2000 Hz sine wave; DIN EN 60068-2-6				
Shock resistance:	half sine wave 500 m/s ² ; 11 ms; DIN EN 60068-2-27				
Protection class:	Refer to the electrical connections				
EMC:	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007				
Short-circuit, overvoltage and reverse polarity protection	Built-in				
Weight:	approx. 2.8 oz / 80 g (DIN 175301 approx. 3.8 oz / 110 g, cable version approx. 4.7 oz / 135 g)				

⁽¹⁾ Within the compensated temperature range.⁽²⁾ Static pressure, dynamic value is 30 to 50 % lower. Values refer to the hydraulic/pneumatic part of the electronic pressure switch.


Electrical connectors and threads



Connection diagrams

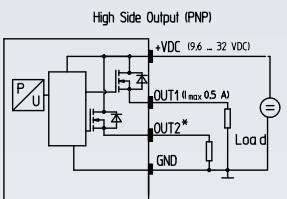

Pin assignment depending on electr. connection
*OUT2 only for 054x

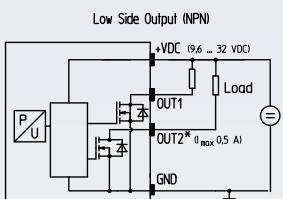

Pin assignment depending on electr. connection
*OUT2 only for 054x

Technical modifications and errors excepted.



M 12 – DIN EN 61076-2-101 A	
2	LED Out 2
1	LED Out 1
3	
4	
Pin	Assignment
1	Uv+
2	Uout 2
3	Gnd
4	Uout 1

IP67
x ~ 54 mm
d ~ Ø 22 mm
Order number: 002


ISO 15170-A1-4.1	
4	
1	
2	
3	
Pin	Assignment
1	Uv+
2	Gnd
3	Uout 1
4	Uout 2

IP67, IP6K9K
x ~ 65 mm
d ~ Ø 27 mm
Order number: 004

DEUTSCH DT04-4P	
4	
1	
3	
2	
Pin	Assignment
1	Gnd
2	Uv+
3	Uout 2
4	Uout 1

IP67, IP6K9K
x ~ 74 mm
d ~ Ø 23 mm
Order number: 008


Cable connection	
red	Uv+
white	Uout 2
black	Uout 1
blue	Gnd
Pin	Assignment
IP67	
x ~ 44 mm (+ 20 mm bend relief)	
Cable length ~ 6.5 ft (2 m)	
d ~ Ø 22 mm	
Order number: 011	

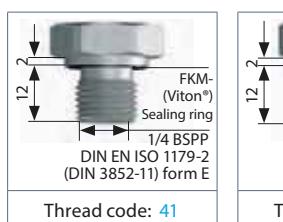

Thread code: 41




Thread code: 03

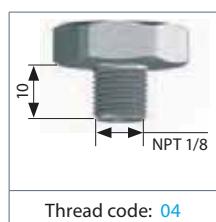


Thread code: 04




Thread code: 09

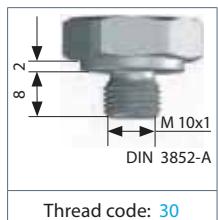

Thread code: 30

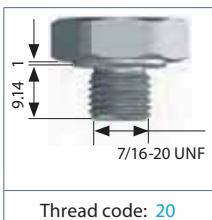

Thread code: 20

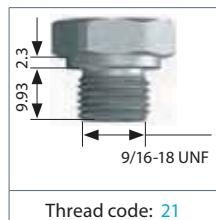

Thread code: 21



Thread code: 42

0540/0541/0542/0544/0545/0546

Order matrix for electronic pressure switches

E.6

hex 22



Silicon-on-Saphire
Sensor with Two
Switching Functions

	Type	Pressure range	Pressure connection	Pressure unit	Electrical connection
Type	↓	↓	↓	↓	↓
PNP output (High Side), NO / NO (NO/NO)	0540				
PNP output (High Side), NC / NC (NC/NC)	0541				
PNP output (High Side), NO / NC (NO/NC)	0542				
NPN output (Low Side), NO / NO (NO/NO)	0544				
NPN output (Low Side), NC / NC (NC/NC)	0545				
NPN output (Low Side), NO / NC (NO/NC)	0546				
Max. overpressure ²⁾	Burst pressure	Adjustment range ¹⁾			
40 bar (580 psi)	80 bar (1,160 psi)	0 – 10 bar (0 - 145 psi)	101		
100 bar (1,450 psi)	200 bar (2,900 psi)	0 – 25 bar (0 - 362.5 psi)	251		
400 bar (5,800 psi)	800 bar (11,600 psi)	0 – 100 bar (0 - 1,450 psi)	102		
1,000 bar (14,500 psi)	2,000 bar (29,000 psi)	0 – 250 bar (0 - 3,625 psi)	252		
1,650 bar (23,930 psi)	2,000 bar (29,000 psi)	0 – 600 bar (0 - 8,700 psi)	602		
Pressure connection			↓		
1/4 BSPP – DIN EN ISO 1179-2 (DIN 3852-11) form E		41			
1/4 BSPP – DIN 3852-A		03			
NPT 1/8		04			
NPT 1/4		09			
M 10x1 cyl. DIN 3852-A		30			
7/16-20 UNF		20			
9/16-18 UNF		21			
M 14x1,5 – DIN EN ISO 9974-2 (DIN 3852-11) form E		42			
Pressure unit			↓		
bar			B		
Electrical connection				↓	
M 12 – DIN EN 61076-2-101 A				002	
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)				004	
Deutsch DT04-4P				008	
Cable connection (length of cable 6.5 ft / 2 m standard)				011	
Order number:	05XX	XXX	XX	B	XXX

¹⁾ Please state switching point and differential when ordering.

²⁾ Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the electronic pressure switch.



Accessories

Mating plugs, thread adapters and programming devices



- High-quality accessories
- Developed for our products
- Aligned to our products
- Direct from the manufacturer

Mating plugs

For requirements at short notice and realising customized solutions

E.7

Accessories



Deutsch DT06-3S (for DT04-3P) 3 x 0.5 mm ² PUR cable (2 m), IP67	Suitable for connection code 010 Deutsch DT04-3P	Article number: 1-1-36-653-160
---	--	--



TE AMP Supershell 1.5°, 3-pin 3 x 0.5 mm ² Radox Kabel (2 m), IP65	Suitable for connection code 007 AMP Supershell 1.5°	Article number: 1-1-32-653-158
---	--	--



M 12x1 DIN EN 61076-2-LF, 4-pin 4 x 0.34 mm ² PUR cable (2 m), IP65	Suitable for connection code 002 M 12x1 DIN EN 61076-2-101 A	Article number: 1-1-00-653-162
--	--	--



For the pin assignment of the wires please refer to chapter M.10 Accessories (page 91)

Socket device M 12x1 DIN EN 61076-2-101 A straight, 4-pin Terminals for wire diameter 0.75 mm ² (AWG 18)	Suitable for connection code 002 M 12x1 DIN EN 61076-2-101-LF	Article number: 1-6-00-652-016
---	---	--



Socket device M 12x1 DIN EN 61076-2-101 A angled, 4-pin Terminals for wire diameter 0.75 mm ² (AWG 18)	Suitable for connection code 002 M 12x1 DIN EN 61076-2-101-LF	Article number: 1-6-00-652-017
---	---	--



E

Thread adapters

For requirements at short notice and realising customized solutions

- The materials and shapes of thread adapters are aligned perfectly to our electronic pressure switches and transmitters
- Thread adapters are provided together with seals to ensure safe and easy installation of our electronic pressure switches and transmitters





Stainless steel 1.4305 / AISI 303 thread adapters			
G 1/4 DIN EN ISO 1179-1 (DIN 3852-E) female thread			
M10 x 1 form A DIN 3852-1	M14 x 1,5 form E DIN 3852-E incl. sealing ring FKM	NPT 1/4-18	9/16 -18UNF incl. O-ring FKM
hex 22 h = 30,5 mm	hex 22 h = 35 mm	hex 22 h = 35,5 mm	hex 22 h = 33 mm
Article number:	Article number:	Article number:	Article number:
1-1-00-420-020	1-1-00-420-028	1-1-00-420-021	1-1-00-420-027

Programming device PPD05

for electronic pressure switches of the SUCO „Performance“ series

0500 / 0501

- simple connection to the PC / laptop via USB enables an easy and quick adjustment of technical parameters onsite
- individual programming of the switching points and the switch delay time (0 ... 2 s); readout of max. pressure change rate as well as switching and overpressure cycles

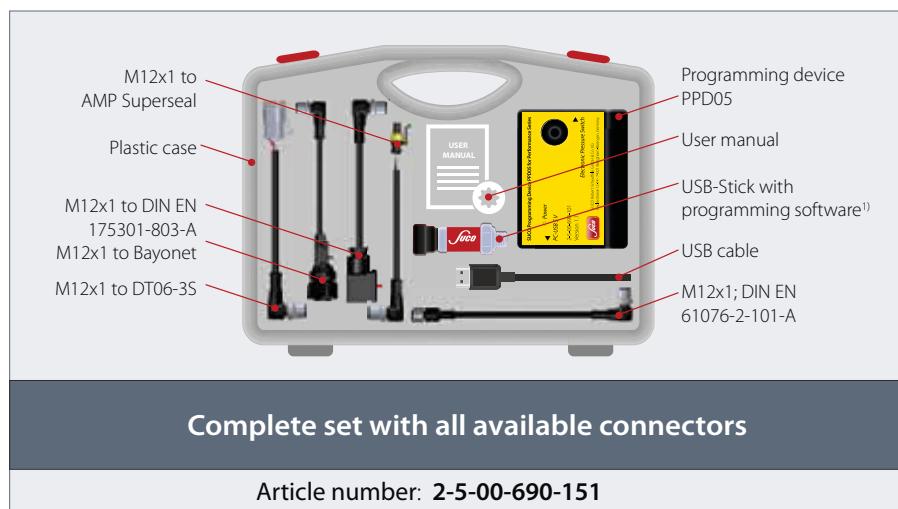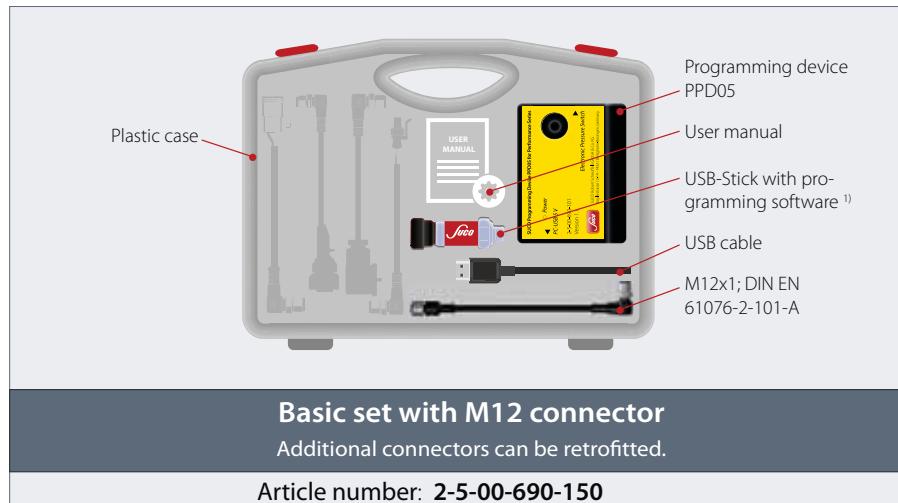

¹⁾ System requirements: min. Windows Vista OS.



M12x1 – DT06-3S (für DT04-3P) Adapter cable, 1 m	Article number: 1-0-00-653-214
--	--

M12x1 – DIN EN 175301-803-A Adapter cable, 1 m	Article number: 1-0-00-653-210
--	--

M12x1 – Bajonett (DIN 72585) Adapter cable, 1 m	Article number: 1-0-00-653-212
---	--

M12x1 – AMP Superseal 1.5® Adapter cable, 1 m	Article number: 1-0-00-653-213
---	--

For the pin assignment of the wires please refer to chapter M.10 Accessories (page 91)

E.7

Accessories



T. Pressure Transmitters



T. Overview of pressure transmitters



Technical explanations
for pressure transmitters

from page 138

Selection matrix
A guide to choosing the correct pressure transmitter

from page 143

Pressure Transmitters with ceramic measuring cell

T.1 Pressure transmitters, Performance series, hex 24

from page 144

Standard pressure ranges: 0 – 2 bar (0-14 psi), 0 – 4 bar (0-58 psi), 0 – 10 bar (0-145 psi), 0 – 16 bar (0-232 psi)
0 – 40 bar (0-580 psi), 0 – 100 bar (0-1,540 psi), 0 – 250 bar (0-3,625 psi)

Overpressure protection: 2x

Output signal (alternative): 0 – 10 V or 4 – 20 mA

Housing materials: Stainless steel 1.4305 (AISI 303)

Sealing materials: NBR, EPDM, FKM, TPE

Threads: BSPP 1/4 E, NPT 1/4

Types: 0601, 0602

Pressure Transmitters with oil-filled measuring cell

T.2 Robust pressure transmitter, hex 22, stainless steel „303“

from page 148

Standard pressure ranges: -1 – 0 bar (vacuum), -1 – 1 bar (compound)
0 – 1 bar (0-14 psi), 0 – 4 bar (0-58 psi), 0 – 6 bar (0-87 psi), 0 – 10 bar (0-145 psi)
0 – 16 bar (0-232 psi), 0 – 40 bar (0-580 psi), 0 – 100 bar (0-1,450 psi)

Overpressure protection: 2x

Output signal (alternative): 0.5 – 4.5 V ratiometric or 0 – 10 V or
4 – 20 mA

Housing materials: Stainless steel 1.4305 (AISI 303)

Sealing materials: NBR, EPDM, FKM

Thread: BSPP 1/4 E

Types: 0645, 0650, 0660

T.3 Robust pressure transmitter, hex 22, stainless steel „316L“

from page 152

Standard pressure ranges: -1 – 0 bar (vacuum), -1 – 1 bar (compound)
0 – 1 bar (0-14 psi), 0 – 4 bar (0-58 psi), 0 – 6 bar (0-87 psi), 0 – 10 bar (0-145 psi)
0 – 16 bar (0-232 psi), 0 – 40 bar (0-580 psi), 0 – 100 bar (0-1,450 psi)

Overpressure protection: 2x

Output signal (alternative): 0.5 – 4.5 V ratiometric or 0 – 10 V or
4 – 20 mA

Housing materials: Stainless steel 1.4404 (AISI 316L)

Sealing materials: NBR, EPDM, FKM

Thread: BSPP 1/4 E

Types: 0675, 0680, 0690

Pressure Transmitters with SoS technology



T.4 Pressure transmitters, High-Performance series, hex 22 from page 156

Standard pressure ranges: 0 - 1 bar (0-14 psi), 0 - 2.5 bar (0-36 psi), 0 - 4 bar (0-58 psi), 0 - 6 bar (0-87 psi)
 0 - 60 bar (0-870 psi), 0 - 100 bar (0-1,450 psi), 0 - 160 bar (0-2,320 psi)
 0 - 250 bar (0-3,625 psi), 0 - 400 bar (0-5,800 psi), 0 - 600 bar (0-8,700 psi)

Overpressure protection: Up to 4 x

Output signal (alternative): 0.5 – 4.5 V ratiometric or
 0 – 10 V or
 4 – 20 mA

Housing materials: Stainless steel 1.4305 (AISI 303)

Sealing materials: All welded, without elastomeric seal

Thread: different male threads

Types: 0705, 0710, 0720



Pressure Transmitters with CAN-Bus interface



T.5 Digital pressure transmitters, CANopen / J1939-Protocol, hex 22 from page 160

Standard pressure ranges: 0 - 1 bar (0-14 psi), 0 - 2.5 bar (0-36 psi), 0 - 4 bar (0-58 psi), 0 - 6 bar (0-87 psi)
 0 - 10 bar (0-145 psi), 0 - 16 bar (0-232 psi), 0 - 25 bar (0-362 psi), 0 - 40 bar (0-580 psi)
 0 - 60 bar (0-870 psi), 0 - 100 bar (0-1,450 psi), 0 - 160 bar (0-2,320 psi)
 0 - 250 bar (0-3,625 psi), 0 - 400 bar (0-5,800 psi), 0 - 600 bar (0-8,700 psi)

Overpressure protection: Up to 2 x

Output protocol: CANopen DIN EN 50325-4
 CAN J1939 SAE J1939

Housing materials: Stainless steel 1.4301 / AISI 304

Sealing materials: All welded, without elastomeric seal

Electrical connection: M12 DIN EN 61076-2-101 A,

CiA-DR303-1

Thread: BSPP 1/4 E, NPT 1/4

Types: 0630, 0631



T.6 Accessories from page 164


- Mating plugs
- Thread-Adapters
- Display



Technical explanations for pressure transmitters

What is a pressure transmitter?

A pressure transmitter (also called pressure transducer or pressure converter) is a component used to convert a pneumatic or hydraulic pressure to an electric (usually analogue and linear) output signal, such as a current or voltage.

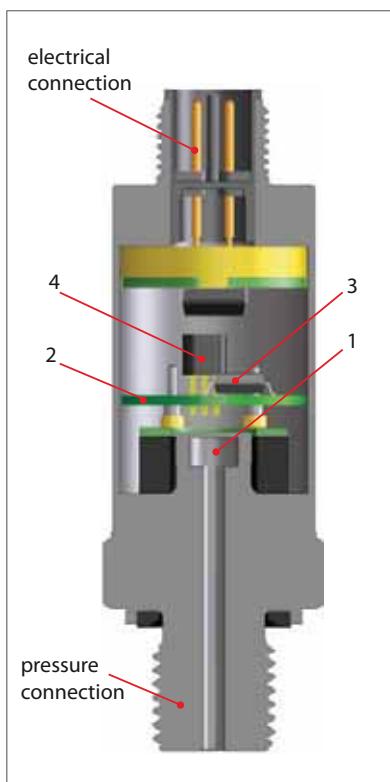

How does a pressure transmitter work?

The pressure measuring cell fitted has a membrane (1) that is exposed to the pressure to be measured. Affixed on this membrane is a bridge circuit consisting of four ohmic resistors in the form of a Wheatstone bridge. The values of these resistors change proportionally to the pressure load present at the measuring cell or membrane. The bridge voltage of the measuring cell is amplified in the evaluation electronics (2) and processed digitally by a microcontroller (3).

The downstream output stage (4) converts this signal to the output signal required (such as 4 - 20 mA or 0 - 10 V).

SoS technology

In the silicone-on-sapphire technology, the substrate of the thin film measuring cell is synthetic sapphire. This has excellent mechanical and temperature stable properties and prevents undesired parasitic effects, thereby having a positive effect on accuracy and stability. In conjunction with a titanium membrane, this results in virtually unique coaction between the temperature coefficients of sapphire and titanium.

This is because, unlike silicon and stainless steel, they are more closely matched and so only require a low level of compensation overhead. This also has a favourable effect on long-term stability.

„Oil-filled“ stainless steel measuring cell

In this measuring cell technology, the piezo-resistive measuring cell is packaged within a metallic housing filled with fluorine oil. This means the measuring cell is virtually free of external mechanical stress. Fluorine oil has excellent characteristics in regards to temperature and ageing behaviour, and is not flammable and so fits perfectly to oxygen applications. It is not recommended for food applications.


Ceramic measuring cell / thick film technology

Ceramic thick film pressure measuring cells are made up of a sintered ceramic body. The ceramic body sleeve already has the key geometries for the subsequent pressure range. The membrane thickness required and thus, the pressure range required is established with grinding and lapping. The resistors are imprinted with thick film technology and interconnect to form a measuring bridge.

Standard signals

Output signals 4 - 20 mA, 0 - 10 V and 0.5 - 4.5 V ratiometric in particular have established themselves in the industry. SUCO also offers transmitters with customer-specific output signals (such as 1 - 5 V).


Block diagram:

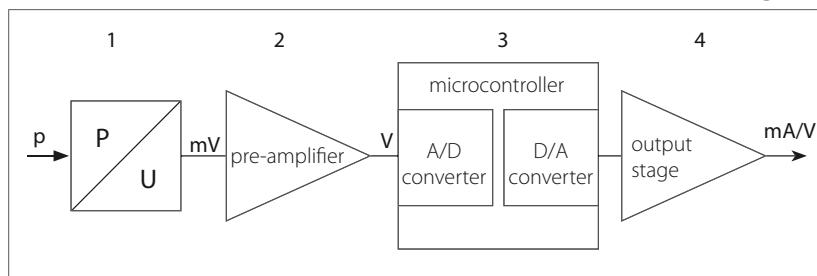

Voltage output 0 - 10 V

Transmitters with an output signal of 0 to 10 V are a commonly used variant due to their simple initial operation and straightforward scaling of the signal (0 V for 0 bar). The output load must be selected as highly resistive (with typical minimum value 4.7 kΩ). SUCO transmitters with voltage output have a 3-wire design.

The maximum connection length should not exceed 30 m to prevent significant voltage drops in the signal line.

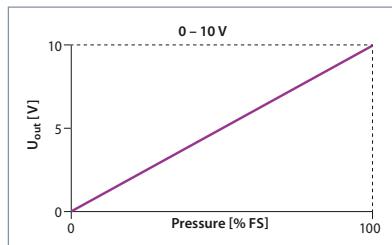

Conversion formula for pressure and voltage:


$$U_{\text{out}} = \frac{\text{pressure applied}}{\text{pressure range}} \times 10 \text{ V}$$

Voltage output

0.5 – 4.5 V ratiometric

SUCO transmitters with ratiometric output are operated with a 5 V supply voltage as 3-wire configuration. The output signal is directly proportional to / dependent on the supply voltage; this is known as a ratiometric dependency. 0.5 – 4.5 V is established as an output voltage because many A/D converters work with reference voltage U_{v+} of 5 V. The output voltage 0.5 V equals to 10% and 4.5 V corresponds to 90% of the supply voltage. The span is therefore 80% of the supply voltage.

This variant is used for example when a transmitter and a downstream A/D converter as an evaluation unit are to be powered with the same reference / operating voltage.

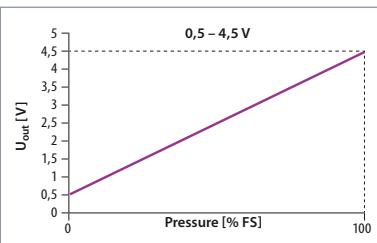

Conversion formula for pressure and voltage:


$$U_{\text{out}} = 0.1 \times U_{v+} + \frac{\text{pressure applied}}{\text{pressure range}} \times 0.8 \times U_{v+}$$

with U_{v+} = operating voltage

Current output 4 – 20 mA

The most common analogue output signal of sensors is 4 – 20 mA current output (as 2-wire configuration). The advantage of a 4 – 20 mA output signal is the 4 mA offset which allows the monitoring of potential wire break and short-circuit (life zero signal).

The signal can also be transmitted over long distances with no loss in accuracy. This variant is also the least sensitive to EMC factors. 2-wire technology also means wiring overhead is reduced.

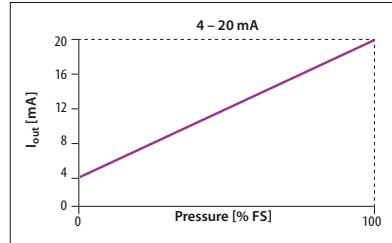


Conversion formula for pressure and voltage:

$$I_{\text{out}} = 4 \text{ mA} + \frac{\text{pressure applied}}{\text{pressure range}} \times 16 \text{ mA}$$

Output for vacuum transmitters

As depicted in the sketch on the upper right, the output is at maximum signal at zero pressure. Therefore at maximum vacuum the output signal is at its minimum.

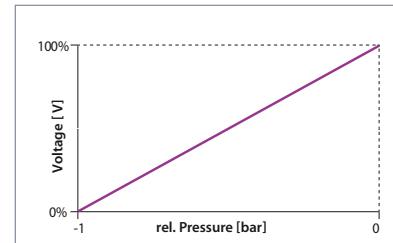

Load / apparent ohmic resistance for pressure transmitters


An appropriate ohmic load must be connected to guarantee perfect functioning of a pressure transmitter.

For transmitters with a voltage output (V), the load should be at least 4.7 kΩ.

For transmitters with a current output (4 - 20 mA), the maximum load is calculated using the following formula:

$$R_L = \frac{U_{v+} - U_{v+(min)}}{20 \text{ mA}}$$

U_{v+(min)} is the minimum supply voltage - to be taken from the data sheet. U_{v+(min)} = 10 V gives the following operating range for example:

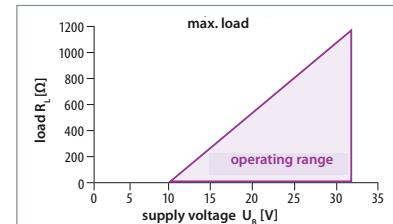

Supply / operating voltage UB

All pressure transmitters work with DC voltage and have no galvanic isolation. Within the thresholds specified in the relevant data sheet, the supply voltage may change without influencing the output signal. (the ratiometric variant is an exception).

To guarantee the functionality of a transmitter, the minimum supply voltage may not fall below. The maximum operating voltage may not be exceeded to avoid damage on the electronics.


Technical explanations for pressure transmitters

Accuracy (to DIN EN 61298)

The (measuring) accuracy of pressure transmitters is specified by SUCO as $\pm 0.5\%$ or $\pm 1\%$ of the span (also called full scale). Accuracy includes zero point offset, non-linearity, hysteresis and non-repeatability, and is defined at room temperature and new state. This method defines the maximum deviation from the ideal line (in contrast to the BFSL method in which the average deviation is given). Other factors influencing the total accuracy, such as temperature and ageing, are specified separately.

Non-linearity (to DIN EN 61298)


Non-linearity (also linearity) defines the deviation of the actual output curve from the theoretical ideal line. SUCO specifies the maximum error in relation to the overall span or full scale (FS) of the pressure range.

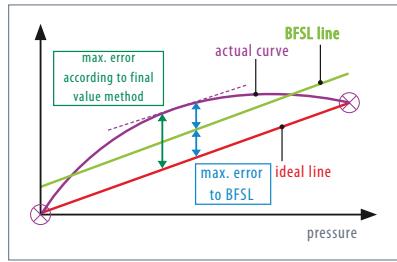

Non-linearity is also shown as BFSL (Best Fit Straight Line) as a reference value in the technical specifications. Non-linearity generally has the biggest influence on the overall error rate. Typically, non-linearity as per BFSL corresponds to half of non-linearity as per the full scale method ($1\% \text{ FS} \sim 0.5\% \text{ BFSL}$).


Hysteresis (to DIN EN 61298)

For a pressure transmitter, hysteresis specifies the difference of output signal between a rising and falling pressure, and is typically very low and negligible for SUCO pressure transmitters.

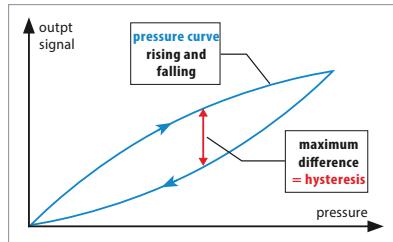


Non-repeatability (to DIN EN 61298)

Non-repeatability defines reproducibility of the output signal. The pressure is attained three times for example - the maximum variance between these three values gives the non-repeatability.

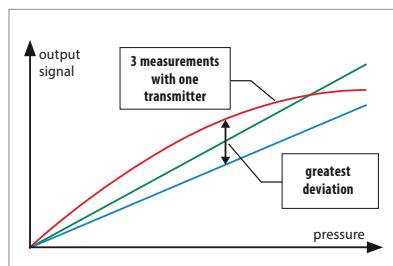

To prevent mechanical and electrical damage, pressure transmitters may not be deployed beyond the threshold temperature ranges specified in the data sheet.

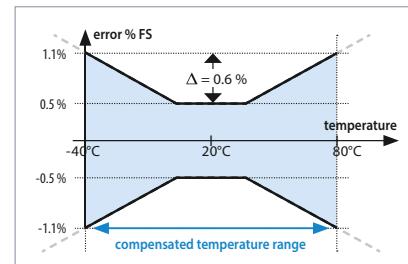


Service life and long-term stability

Service life information pertains to nominal conditions specified in the data sheet, and can vary considerably when a product is operated mechanically or electrically outside the specifications. Service life essentially depends on the used measuring cell technology.

Ageing is accelerated (or slowed) due to different factors - such as temperature, temperature change and reduction of mechanical forces. The occurrence of ageing does effect the total accuracy.


SUCO specifies long-term stability in accordance with DIN 16086 in relation to one year. Typically the influence of aging on the accuracy reduces with increasing operating duration. The information in the data sheet corresponds to the worst case scenario.

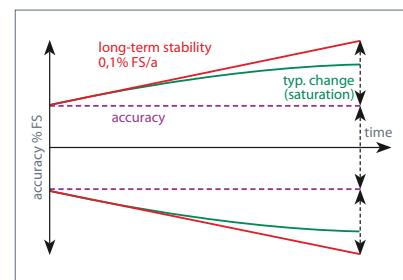

Resolution


The A/D resolution (analogue - digital) of a pressure transmitter defines the smallest change of the analogue – digital – analogue conversion which takes place by the signal processing of a pressure transmitter.

If for example 13-bit resolution is used for a pressure transmitter with a 100 bar setting range, the smallest signal change is 8192 steps (2^{13}). As state of the art a resolution of 12 bits and hence 4096 steps (2^{12}) is typical. Therefore pressure changes of 100 bar / 4096 = 0.024 bar can be recorded.

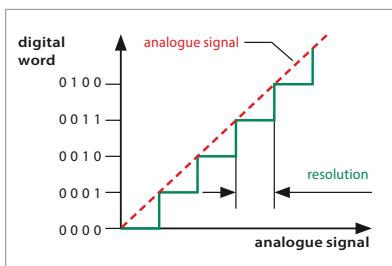


Sampling rate

The sampling rate (or sampling frequency) defines the number of samples per time unit (typically in seconds or milliseconds) taken from an analogue signal and converted to a digital signal. The sampling rate is an indicator of how fast the output signal of a pressure transmitter responds to the pressure change at the input.

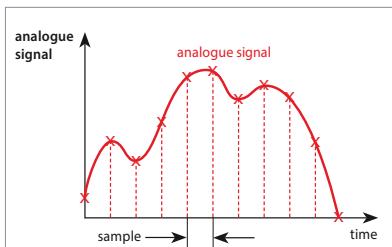

Response time

The response or circuit time is shorter than 2 to 4 milliseconds (depending on model). The sum of A/D and D/A conversions, and the analogue and digital filters in the signal chain from the measuring bridge to the output, make up the response time. Filtering is used to suppress unwanted pressure peaks and electrical interference signals, and for good EMC characteristics.

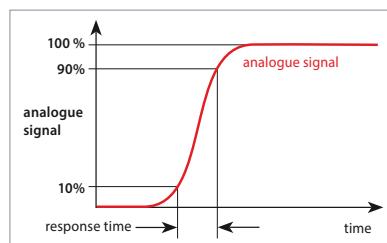

CE mark

Pressure transmitters from SUCO fall under the 2014/30/EU EMC Directive.

EC declarations of conformity have been issued for the pressure transmitters available on request or can be downloaded from our website. The relevant devices are denoted by a CE mark in our catalogue.

The Machinery Directive 2006/42 EC is not applicable, because our products are classed as components. Our products are designed for Group 2 fluids based upon good engineering practise in line with Pressure Equipment Directive 2014/68/EU, meaning neither a declaration of conformation may be issued nor a CE mark affixed.

Electromagnetic compatibility (EMC)

Pressure transmitters from SUCO do comply to all important industrial EMC standards. The basis for the standards are the stricter thresholds for transient emissions in residential environments (EN 61000-6-3) and immunity for industrial environments (EN 61000-6-2).

Generic standard	Test standard	Parameter(s)
Radio disturbance and immunity	EN 55016-2-1 EN 55016-2-3	60 dBuV
Radiated, high-frequency electromagnetic field immunity test	EN 61000-4-3	10 V/m; 80-1000 MHz, 3 V/m; 1400-2000 MHz, 1 V/m; 2000-2700 MHz
Immunity to conducted disturbances, induced by radio-frequency fields	EN 61000-4-6	10 V; 0,15-80 MHz
Electrical fast transient / burst immunity test	EN 61000-4-4	±2 kV
Surge immunity test	EN 61000-4-5	±0,5 kV (common) ±0,5 kV (differential)
Electrostatic discharge (ESD) immunity test	EN 61000-4-2	air: 8 kV with contact: 4 kV

Technical explanations for pressure transmitters

Conversion chart for pressure units

Abbreviation for unit	Name of unit	Pa = N/m ²	bar	Torr	lbf/in ² , PSI
1 Pa = N/m ²	Pascal	1	0.00001	0.0075	0.00014
1 bar	Bar	100 000	1	750.062	14.5
1 Torr = 1 mmHg	Millimeters of mercury	133.322	0.00133	1	0.01934
1 lbf/in ² = 1 PSI	Pound-force per square inch	6894	0.06894	51.71	1

Conversion chart for temperature units

	K	°C	F
K	1	K - 273.15	9/5 K - 459.67
°C	°C + 273.15	1	9/5 °C + 32
F	5/9 (F + 459.67)	5/9 (F - 32)	1

Insulation strength

According to the latest specifications for immunity to surges and lightning protection, the following must be taken into account when testing insulation strength: With insulation test devices having an inner resistance exceeding 42 Ω, the insulation strength of pressure transmitters can be tested up to 500 VDC.

All contacts must be tested short-circuited against the housing. For a specific threshold value of test voltage, the protective circuit for surge protection is activated without any defects arising within the circuit. In the process, the current may rise to a point at which an insulation strength fault is indicated. The recommendation therefore is to conduct the insulation test of the pressure transmitter when it is removed, or independently of the overall system.

Medium compatibility

The specifications on medium compatibility in this catalogue pertain to the specific seal and housing materials as well as the used measuring cell technology and so cannot be generalised.

Stainless steel (1.4301 / AISI 304)

Stainless steel with broad level of media compatibility, such as water, steam, humidity and weak organic and inorganic acids

Stainless steel (1.4305 / AISI 303)

Stainless steel with broad level of media compatibility. Also suitable for oxygen and hydrogen applications.

Stainless steel (1.4404 / AISI 316L)

Stainless steel with broad level of media compatibility. Also suitable for chemical industry and sea water applications.

Titanium

Its high levels of mechanical resistance and the wide media compatibility – in particular to corrosive media – do make titanium the ideal material for measuring cells and membranes. It is not recommended for oxygen or hydrogen applications.

Oxygen and hydrogen

It is recommended to use an EPDM seal for the media oxygen / hydrogen to be monitored.

The EPDM seal of the „Performance“ series (pp. 144-147) was successfully tested at the BAM (Federal Institute for Materials Testing) up to 250 bar by means of an oxygen pressure shock test at 60 °C.

EPDM must not come into contact with oil, as this results in swelling and softening of the material and thus the failure of the transmitter.

Country-specific safety requirements and application guidelines must be observed if the medium to be monitored is oxygen or hydrogen, such as DGUV accident prevention regulations (DGUV 500, Section 2.32 and BG 617).

Please specify when ordering „for oxygen, oil and grease-free“ or order plasma cleaned and individually packaged transmitters (see also „Plasma cleaning for oxygen applications / LABS-free (PWIS-free)“ on page 9).

Pressure peak dampening

If required, our pressure transmitters can also be fitted with a pressure snubber (pressure peak orifice) to protect the measuring cell against transient pressure loads such as pressure peaks due to the switching of valves, cavitation effects, etc. which can shorten life expectancy.

For liquid media, the hole of a pressure snubber cannot be chosen to be any small size. At low temperatures the viscosity of the media will increase. In a case of dropping pressure the media might remain in the cavity behind the snubber which might affect the functionality of the pressure transmitter. Thus a bore diameter of 0.8 mm has been established.

Product information

The technical information in this catalogue is based upon fundamental testing during product development, as well as upon empirical values. The information cannot be used for all application scenarios.

Testing of the suitability of our products for a specific application (e.g. also the checking of material compatibilities) falls under the responsibility of the user. It may be the case that suitability can only be guaranteed with appropriate field testing.

Subject to technical changes.

Selection matrix for pressure transmitters

Type / series	0601	0602	0645	0650	0660	0675	0680	0690	0705	0710	0720	0630	0631
Page	147	147	151	151	151	155	155	155	159	159	159	163	163
Measuring cell technology	stainless steel, oil-filled, piezo-resistive												
	stainless steel, piezo-resistive												
	ceramic / thick-film	■	■										
	SoS / titanium								■	■	■		
Function	overpressure	■	■	■	■	■	■	■	■	■	■	■	■
	vacuum			■	■	■	■	■	■				
Output	0.5 - 4.5 V ratiometric			■						■			
	0 - 10 V	■			■					■			
	4 - 20 mA		■			■			■		■		
	CAN										■	■	
Operating voltage	5 VDC ± 10 %			■						■			
	(9.6 ... 12) - 32 VDC	■	■		■	■		■		■	■	■	■
Pressure range	-1 - 0 bar (-14 ... 0 psi)			■	■	■	■	■					
	-1 - 1 bar (-14 ... 14 psi) (compound)			■	■	■	■	■					
	0 - 1 bar (0 ... 14 psi)			■	■	■	■	■				■	■
	0 - 2 bar (0 ... 29 psi)	■	■										
	0 - 2.5 bar (0 ... 36.26 psi)											■	■
	0 - 4 bar (0 ... 58 psi)	■	■	■	■	■	■	■				■	■
	0 - 6 bar (0 ... 87 psi)			■	■	■	■	■				■	■
	0 - 10 bar (0 ... 145 psi)	■	■	■	■	■	■	■				■	■
	0 - 16 bar (0 ... 232 psi)	■	■	■	■	■	■	■				■	■
	0 - 25 bar (0 ... 362 psi)											■	■
	0 - 40 bar (0 ... 580 psi)	■	■	■	■	■	■	■				■	■
	0 - 60 bar (0 ... 870 psi)											■	■
	0 - 100 bar (0 ... 1,450 psi)	■	■	■	■	■	■	■				■	■
	0 - 160 bar (0 ... 2,320 psi)											■	■
	0 - 250 bar (0 ... 3,626 psi)	■	■									■	■
	0 - 400 bar (0 ... 5,800 psi)											■	■
	0 - 600 bar (0 ... 8,702 psi)											■	■
Overpressure protection	up to 2x	■	■	■									
	up to 3x			■	■	■	■	■					
	up to 4x								■	■	■		
Compensated temperature range	0 ... +158 °F (0 ... +70 °C)	■	■										
	14 ... +158 °F (-10 ... +70 °C)			■	■	■	■	■					
	-4 ... +185 °F (-20 ... +85 °C)											■	■
	-40 ... +176 °F (-40 ... +80 °C)								■	■	■		
Size	hex 22			■	■	■	■	■	■	■	■	■	■
	hex 24	■	■										
Housing material	stainless steel 1.4201 / AISI 304												
	stainless steel 1.4305 / AISI 303	■	■	■	■	■			■	■	■		
	stainless steel 1.4404 / AISI 316L						■	■	■				
Option	suitable for oxygen (on request)	■	■	■	■	■	■	■					

Pressure transmitters, Performance series

hex 24



- Very attractively priced electronic pressure transmitters
- High overpressure protection (up to 2 x)
- Small, compact transmitters
- High level of adaptability to your requirements (custom solutions)
- Ceramic sensor in thick film technology
- Housing made of stainless steel (1.4305), others on request
- Available as 'plasma cleaned for oxygen applications'¹⁾

¹⁾ For oxygen applications, the EPDM diaphragm can only be used up to 250 bar and a media temperature of max. +60°C.

Pressure transmitters, Performance series

Technical details

Type:	0601	0602
Output signal:	0 – 10 V (3-wire)	4 – 20 mA (2-wire)
Supply voltage U_{V+} :	11 – 32 VDC with reverse voltage protection	9.6 – 32 VDC with reverse voltage protection
Permissible load apparent ohmic resistance:	$\geq 4.7 \text{ k}\Omega$	$\leq (U_{V+} - 10 \text{ V}) / 20 \text{ mA}$
Idle power consumption:	approx. 5 mA	< 4 mA

Type:	0601 / 0602							
Standard pressure ranges p_{nom} :	0 - 2 bar (0 – 29 psi)	0 - 4 bar (0 – 58 psi)	0 - 10 bar (0 – 145 psi)	0 - 16 bar (0 – 230 psi)	0 - 40 bar (0 – 580 psi)	0 - 100 bar (0 – 1,450 psi)	0 - 250 bar (0 – 3,625 psi)	
Overpressure protection $p_u^{1)}$:	4 bar (58 psi)	10 bar (145 psi)	20 bar (290 psi)	40 bar (580 psi)	100 bar (1,450 psi)	150 bar (2,175 psi)	375 bar (5,439 psi)	
Burst pressure: ¹⁾	8 bar (115 psi)	20 bar (290 psi)	35 bar (500 psi)	60 bar (870 psi)	140 bar (2,000 psi)	300 bar (4,350 psi)	500 bar (7,250 psi)	
Mechanical life expectancy:	5,000,000 pulsations at rise rates to 14,500 psi/s (1,000 bar/s) at p_{nom}							
Permitted pressure change rate:	$\leq 14,500 \text{ psi/s}$ ($\leq 1,000 \text{ bar/s}$)							
Accuracy:	$\leq \pm 1\%$ full scale (FS) at room temperature, $\pm 0.5\%$ BFSL							
Long term stability:	$\pm 0.3\%$ of full scale (FS) per year							
Repeatability: ²⁾	$\pm 0.1\%$ FS							
Temperature error ²⁾ :	$\leq \pm 0.04\%$ of full scale (FS) / °C							
Compensated temperature range:	32 °F ... +158 °F (0 °C ... +70 °C)							
Temperature range ambient:	-22 °F ... +212 °F (-30 °C ... +100 °C)							
Temperature range media:	with NBR (BunaN) seal: -22 °F ... +212 °F (-30 °C ... +100 °C)							
	with EPDM seal: -22 °F ... +257 °F (-30 °C ... +125 °C)							
	with FKM (Viton®) seal: -4 °F ... +257 °F (-20 °C ... +125 °C)							
	with TPE seal: -22 °F ... +230 °F (-30 °C ... +110 °C)							
Wetted parts material	Housing:	Stainless steel AISI 303 (1.4305)						
	Measuring cell:	Ceramic						
	Seal material:	NBR (BunaN), EPDM, FKM (Viton®) ³⁾ or TPE						
Insulation resistance:	> 100 MΩ (35 VDC)							
Response time 10 – 90 %:	$\leq 2 \text{ ms}$							
Vibration resistance:	20 g; at 4 ... 2000 Hz sine wave; DIN EN 60068-2-6							
Shock resistance:	half sine wave 500 m/s ² ; 11 ms; DIN EN 60068-2-27							
Protection class	IP65: DIN EN 175301-803-A, IP67: M12x1, AMP Superseal 1.5®, cable connector IP67 and IP6K9K: Bayonet ISO 15170-A1-4.1, Deutsch DT04-3P							
	Electromagnetic compatibility:							
	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007							
Max. length of connection cable:	30 m							
Protection against reverse polarity, short-circuit and overvoltage:	Built-in							
Cable output thread size:	For DIN EN 175301: PG9 (outside diameter of cable 6 to 9 mm)							
Weight:	approx. 2.82 oz / 80 g (DIN EN 175301 approx. 3.88 oz / 110 g)							

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the pressure transducer

²⁾ Within the compensated temperature range

³⁾ FKM sealings are only suitable for pressure ranges up to 0-16 bar.



0601 / 0602

Electrical connectors and threads



DIN EN 17530-803-A		
	0601	0602
1	U_{V+}	U_{V+}
2	Gnd	I_{out}
3	U_{out}	nc
PE		
	IP65	
x	~ 60 mm without socket device	
	x ~ 77 mm with socket device	
	Connection code: 013	

M12-DINEN61076-2-101 A		
	0601	0602
1	U_{V+}	U_{V+}
2	U_{out}	nc
3	Gnd	I_{out}
4	nc	nc
	IP67	
x	~ 54 mm	
	Connection code: 002	

ISO 15170 - A1 - 4.1		
	0601	0602
1	U_{V+}	U_{V+}
2	Gnd	I_{out}
3	U_{out}	nc
4	nc	nc
	IP67, IP6K9K	
x	~ 56 mm	
	Connection code: 015	

AMP Superseal 1.5 °		
	0601	0602
1	U_{out}	nc
2	Gnd	I_{out}
3	U_{V+}	U_{V+}
	IP67	
x	~ 61 mm	
	Connection code: 007	

Deutsch DT04 - 3P		
	0601	0602
B	U_{V+}	U_{V+}
A	Gnd	I_{out}
C	U_{out}	nc
	IP67, IP6K9K	
x	~ 61 mm	
	Connection code: 014	

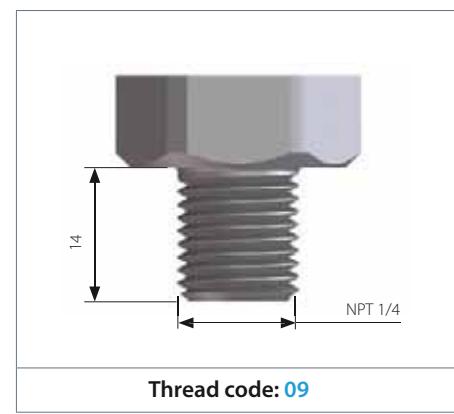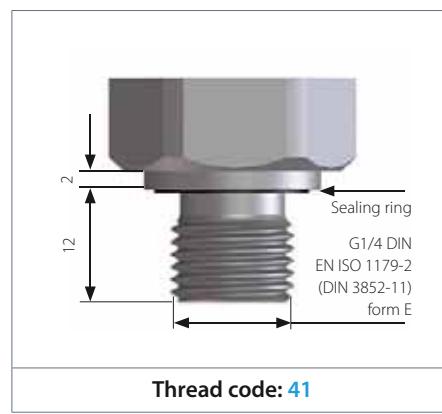

0601 / 0602

Order matrix for pressure transducers

T.1

hex 24 Performance



	Type	Pressure range	Pressure connection	Seal material	Electrical connection
0 – 10 V, 3-wire	0601				
4 – 20 mA, 2-wire	0602				

Max. overpressure ¹⁾	Burst pressure	Pressure range	
4 bar (58 psi)	8 bar (115 psi)	0 – 2 bar (approx. 29 psi)	200
10 bar (145 psi)	20 bar (290 psi)	0 – 4 bar (approx. 58 psi)	400
20 bar (290 psi)	35 bar (500 psi)	0 – 10 bar (approx. 145 psi)	101
40 bar (580 psi)	60 bar (870 psi)	0 – 16 bar (approx. 230 psi)	161
100 bar (1,450 psi)	140 bar (2,000 psi)	0 – 40 bar (approx. 580 psi)	401
150 bar (2,175 psi)	300 bar (4,350 psi)	0 – 100 bar (approx. 1,450 psi)	102
375 bar (5,439 psi)	500 bar (7,250 psi)	0 – 250 bar (approx. 3,625 psi)	252

Pressure connection	↓
1/4 BSPP – (DIN 3852), form E, male thread	41
NPT 1/4	09

Seal material – Application areas	↓
NBR (BunaN)	Hydraulic/machine oil, heating oil, air, nitrogen, water, etc
EPDM	Brake fluid, water, acetylene, hydrogen, oxygen etc.
FKM (Viton®) ²⁾	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.
TPE	Hydraulic/machine oil, water, air, nitrogen, acetylene, etc.

Electrical connection	↓
DIN EN 175301-803-A (DIN 43650-A) ; socket device included	013
M 12x1 - DIN EN 61076-2-101-A	002
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)	015
AMP Superseal 1.5°	007
Deutsch DT04-3P	014

Order number:	06XX	XXX	XX	X	XXX
---------------	------	-----	----	---	-----

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the pressure transducer.

²⁾ FKM sealings are only suitable for pressure ranges up to 0-16 bar.



T.2

hex 22

stainless steel

1.4305 / AISI 303

Robust pressure transmitters

Stainless steel housing (1.4305 / AISI 303, hex 22)



- Pressure transmitters especially for low pressures, including vacuum applications
- High overpressure protection (up to 3 x)
- Long life time even under high pressure change rates
- Housing and wetted parts are made of stainless steel providing excellent media compatibility
- Suitable for hydrogen and oxygen applications¹⁾
- The highly-sensitive piezo-resistive sensor in the measuring cell filled with oil guarantees high level of accuracy, repeatability and long-term stability
- The availability of different sealing materials enables deployment in a broad temperature range with a diverse array of media

¹⁾ For oxygen applications, the EPDM diaphragm can only be used up to 10 bar and a media temperature of max. +60°C.

Technical details

Piezo-Resistive Sensor
in Oil-Filled Housing
Stainless Steel 303



Type:	0645	0650	0660
Output signal:	0.5 – 4.5 V ratiometric	0 – 10 V (3-wire)	4 – 20 mA (2-wire)
Supply voltage U_B :	5 VDC ±10 % max. 6.5 VDC	12 – 32 VDC	10 – 32 VDC
Permissible load/apparent ohmic resistance:	≥ 4,7 kΩ	≥ 4,7 kΩ	≤ $(U - 10 \text{ V}) / 20 \text{ mA}$ v_+
Idle power consumption:	approx. 5 mA		< 4 mA

Type:	0645 / 0650 / 0660																
Standard pressure ranges p_{nom} :	-1 -0 bar (vacuum) (-14.5 - 0 psi)	-1-1 bar (compound) (0 - 14 psi)	0-1 bar (0 - 14 psi)	0 - 4 bar (0 - 58 psi)	0 - 6 bar (0 - 87 psi)	0 - 10 bar (0 - 145 psi)	0 - 16 bar (0 - 232 psi)	0 - 40 bar (0 - 580 psi)	0 - 100 bar (0 - 1,450 psi)								
Overpressure protection p_u^1 :	3 bar (43 psi)	3 bar (43 psi)	3 bar (43 psi)	8 bar (116 psi)	12 bar (174 psi)	20 bar (290 psi)	32 bar (464 psi)	80 bar (1,160 psi)	200 bar (2,900 psi)								
Burst pressure ¹⁾ :	10 bar (145 psi)	10 bar (145 psi)	10 bar (145 psi)	20 bar (290 psi)	30 bar (435 psi)	35 bar (500 psi)	40 bar (580 psi)	100 bar (1,450 psi)	250 bar (3,625 psi)								
Mechanical life expectancy:	10,000,000 pulsations at rise rates to 14,500 psi/s (1,000 bar/s) at p_{nom}																
Permitted pressure change rate:	$\leq 14,500 \text{ psi/ms}$ ($\leq 1,000 \text{ bar/ms}$)																
Accuracy:	$\pm 0.5 \%$ full scale (FS) at room temperature, $\pm 0.25 \%$ BFSL																
Long term stability:	$< \pm 0.2 \%$ of full scale (FS) per year																
Repeatability ²⁾ :	$\pm 0.1 \%$ FS																
Temperature error ²⁾ :	$\pm 0.02 \%$ of full scale (FS) / °C; -1 ... 1 bar $\pm 0.03 \%$ of full scale (FS) / °C																
Compensated temperature range:	-10°C ... +70°C (+14°F ... +158°F)																
Temperature range ambient:	-40°C ... +100°C (-40°F ... +212°F)																
Temperature range media:	with NBR (BunaN) seal: (-22°F ... +212°F) -30°C ... +100°C																
	with EPDM seal: (-22°F ... +257°F) -30°C ... +125°C																
	with FKM (Viton®) seal: (-4°F ... +257°F) -20°C ... +125°C																
Wetted parts material	Housing:	Stainless steel AISI 303 / 1.4305															
	Measuring cell:	Stainless steel AISI 316L / 1.4404															
	Seal material:	NBR (BunaN), EPDM or FKM (Viton®)															
Standard sensor oil:	Fluorine oil (not suitable for food applications)																
Insulation resistance:	> 100 MΩ (35 VDC)																
Response time 10 – 90%:	< 2 ms																
Vibration resistance:	20 g at 4 – 2000 Hz sine wave; DIN EN 60068-2-6																
Shock resistance:	half sine wave 500 m/s ² ; 11ms; DIN EN 60068-2-27																
Protection class	Refer to the electrical connections																
Electromagnetic compatibility:	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007																
Max. length of connection cable:	30 m																
Protection against reverse polarity, short-circuit and overvoltage:	Built-in																
Weight:	approx. 2.82 oz / 80 g (DIN EN 175301 approx. 3.88 oz / 110 g, cable output approx. 4.76 oz / 135 g)																

¹⁾ Static pressure. Dynamic value is 30 to 50% lower. Values refer to the hydraulic/pneumatic part of the pressure transducer.

²⁾ Within the compensated temperature range.

T.2

hex 22

stainless steel

1.4305 / AISI 303



0645 / 0650 / 0660


Electrical connectors and threads

DIN EN 175301-803-A		
Pin	0645 / 0650	0660
1	U_{V+}	U_{V+}
2	Gnd	I_{out}
3	U_{out}	nc
PE		
IP65		
$x \sim 60$ mm without socket device $x \sim 76$ mm with socket device		
$d \sim \varnothing 30$ mm		
Connection code: 013		

M12 – DIN EN 61076-2-101 A		
Pin	0645 / 0650	0660
1	U_{V+}	U_{V+}
2	U_{out}	nc
3	Gnd	I_{out}
4	nc	nc
IP67		
$x \sim 54$ mm		
$d \sim \varnothing 22$ mm		
Connection code: 002		

ISO 15170-A1-4.1		
Pin	0645 / 0650	0660
1	U_{V+}	U_{V+}
2	Gnd	nc
3	U_{out}	I_{out}
4	nc	nc
IP67		
$x \sim 65$ mm		
$d \sim \varnothing 27$ mm		
Connection code: 004		

Cable connection		
Pin	0645 / 0650	0660
1	U_{V+}	U_{V+}
2	U_{out}	nc
3	Gnd	I_{out}
IP67		
$x \sim 44$ mm (+ 20 mm bend relief) Cable length ~ 2 m		
$d \sim \varnothing 22$ mm		
Connection code: 011		

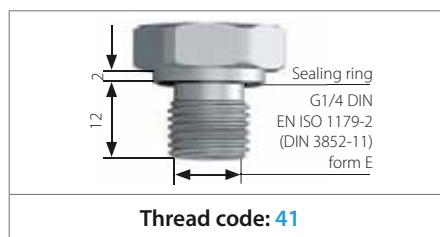

0645 / 0650 / 0660

Article matrix for pressure transmitters

T.2

hex 22

stainless steel

1.4305 / AISI 303



	Type	Pressure range	Pressure connection	Seal material	Electrical connection
0.5 - 4.5 V ratiometric	0645				
0 - 10 V, 3-wire	0650				
4 - 20 mA, 2-wire	0660				

Pressure range	Max. Overpressure ¹⁾	
-1 – 0 bar(Vacuum, approx. -29.6 inHg)	3 bar (14.5 psi)	000
-1- 1 bar (Compound pressure range)	3 bar (14.5 psi)	V01
0 - 1 bar (approx. 14.5 PSI)	3 bar (14.5 psi)	100
0 - 4 bar (approx. 58 PSI)	8 bar (116 psi)	400
0 - 6 bar (approx. 87 PSI)	12 bar (174 psi)	600
0 - 10 bar (approx. 145 PSI)	20 bar (290 psi)	101
0 - 16 bar (approx. 232 PSI)	32 bar (464 psi)	161
0 - 40 bar (approx. 580 PSI)	80 bar (1,160 psi)	401
0 - 100 bar (approx. 1,450 PSI)	200 bar (2,900 psi)	102

Pressure connection		41
BSPP 1/4 – DIN EN ISO 1179-2 (DIN 3852-11), form E		41

Seal material – Application areas			
NBR	Hydraulic/machine oil, heating oil, air, nitrogen, water, etc.	-22 °F ... +212 °F (-30 °C ... +100 °C)	1
EPDM ²⁾	Brake fluid, water, acetylene, hydrogen, etc.	-22 °F ... +257 °F (-30 °C ... +125 °C)	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	-4 °F ... +257 °F (-20 °C ... +125 °C)	3

Electrical connection		
DIN EN 175301-803-A (DIN 43650-A); socket device included		013
M12x1 - DIN EN 61076-2-101-A		002
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)		004
Cable connection (length of cable 2 m standard)		011

Article number:	06XX	XXX	41	X	XXX

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the pressure transmitter.

²⁾ For oxygen applications, the EPDM diaphragm can only be used up to 10 bar and a media temperature of max. +60°C.



Robust pressure transmitters

Stainless steel housing 1.4404 / AISI 316L, hex 22



- Pressure transmitters especially for low pressures, including vacuum applications
- Long life time even under high pressure change rates
- Housing and wetted parts are made of stainless steel 1.4404 providing excellent media compatibility when used in seawater, chemical and process technology applications
- The highly-sensitive piezo-resistive sensor in the measuring cell filled with oil guarantees high level of accuracy, repeatability and long-term stability
- The availability of different sealing materials enables deployment in a broad temperature range and with a diverse array of media

Robust pressure transmitters

Technical details



	0675	0680	0690
Output signal:	0.5 - 4.5 V ratiometric	0 - 10 V (3-wire)	4 - 20 mA (2-wire)
Supply voltage U_{V+} :	5 VDC ±10 % max. 6,5 VDC	12 - 32 VDC	10 - 32 VDC
Permissible load / apparent ohmic resistance:	≥ 4.7 kΩ	≥ 4.7 kΩ	≤ $(U_{V+} - 10 \text{ V}) / 20 \text{ mA}$
Idle power consumption:	approx. 5 mA		< 4 mA

	0675 / 0680 / 0690																
Standard pressure ranges p_{nom} :	-1 – 0 bar (vacuum) (-14.5-0 psi)	-1 -1 bar (compound) (-14.5 to 14.5)	0 – 1 bar (0-14.5 psi)	0 – 4 bar (0-58 psi)	0 – 6 bar (0-87 psi)	0 – 10 bar (0-145 psi)	0 – 16 bar (0-232 psi)	0 – 40 bar (0-580 psi)	0 – 100 bar (0-1,450 psi)								
Overpressure protection $p_u^{(1)}$:	3 bar (43 psi)	3 bar (43 psi)	3 bar (43 psi)	8 bar (116 psi)	12 bar (174 psi)	20 bar (290 psi)	32 bar (464 psi)	80 bar (1,160 psi)	200 bar (2,900 psi)								
Burst pressure ⁽¹⁾ :	10 bar (145 psi)	10 bar (145 psi)	10 bar (145 psi)	20 bar (290 psi)	30 bar (435 psi)	35 bar (500 psi)	40 bar (580 psi)	100 bar (1,450 psi)	250 bar (3,650 psi)								
Mechanical life expectancy:	10,000,000 pulsations at rise rates to 14,500 psi/s (1,000 bar/s) at p_{nom}																
Permitted pressure change rate:	$\leq 14,500 \text{ psi/s} (\leq 1,000 \text{ bar/s})$																
Accuracy:	±0.5 % full scale (FS) at room temperature, ±0.25 % BFSL																
Long term stability:	$< \pm 0.2 \%$ of full scale (FS) per year																
Repeatability ⁽²⁾ :	±0.1 % FS																
Temperature error ⁽²⁾ :	±0.02 % of full scale (FS) / °C; -1 ... 1 bar ±0.03 % of full scale (FS) / °C																
Compensated temperature range:	14 °F ... 158 °F (-10 °C ... +70 °C)																
Temperature range ambient:	-40 °F ... 212 °F (-40 °C ... +100 °C)																
Temperature range media:	with NBR seal: -22 °F ... +212 °F (-30 °C ... +100 °C)																
	with EPDM seal: -22 °F ... +257 °F (-30 °C ... +125 °C)																
	with FKM seal: -4 °F ... +257 °F (-20 °C ... +125 °C)																
Wetted parts material	Housing:	Stainless steel 1.4404 (AISI 316L)															
	Measuring cell:	Stainless steel 1.4404 (AISI 316L)															
	Seal material:	NBR, EPDM or FKM															
Standard sensor oil:	Fluorine oil ⁽³⁾																
Insulation resistance:	> 100 MΩ (35 VDC)																
Response time 10 - 90 %:	$\leq 2 \text{ ms}$																
Vibration resistance:	20 g at 4 – 2000 Hz sine wave; DIN EN 60068-2-6																
Shock resistance:	half sine wave 500 m/s ² ; 11ms; DIN EN 60068-2-27																
Protection class	Refer to the electrical connections																
Electromagnetic compatibility:	EMC 2014/30/EU, EN 61000-6-2:2005, EN 61000-6-3:2007																
Max. length of connection cable:	30 m																
Protection against reverse polarity, short-circuit and overvoltage:	Built-in																
Weight:	approx. 80 g (DIN EN 175301 approx. 110 g, cable output approx. 135 g)																

⁽¹⁾ Static pressure. Dynamic value is 30 to 50% lower. Values refer to the hydraulic/pneumatic part of the pressure transmitter.

⁽²⁾ Within the compensated temperature range.

⁽³⁾ not suitable for food applications

T.3

hex 22

stainless steel

1.4404 / AISI 316L



0675 / 0680 / 0690


Electrical connectors and threads

DIN EN 175301 - 803 - A		
Pin	0675 / 0680	0690
1	U_{V+}	U_{V+}
2	Gnd	I_{out}
3	U_{out}	nc
PE		
IP65		
$x \sim 60$ mm without socket device		
$x \sim 76$ mm with socket device		
$d \sim \varnothing 30$ mm		
Connection code: 013		

M12 – DIN EN 61076 - 2 -101 A		
Pin	0675 / 0680	0690
1	U_{V+}	U_{V+}
2	U_{out}	nc
3	Gnd	I_{out}
4	nc	nc
IP67		
$x \sim 54$ mm		
$d \sim \varnothing 22$ mm		
Connection code: 002		

ISO 15170-A1-4.1		
Pin	0675 / 0680	0690
1	U_{V+}	U_{V+}
2	Gnd	nc
3	U_{out}	I_{out}
4	nc	nc
IP67		
$x \sim 65$ mm		
$d \sim \varnothing 27$ mm		
Connection code: 004		

Cable connection		
Pin	0675 / 0680	0690
1	U_{V+}	U_{V+}
2	U_{out}	nc
3	Gnd	I_{out}
IP67		
$x \sim 44$ mm (+ 20 mm bend relief)		
Cable length ~ 2 m		
$d \sim \varnothing 22$ mm		
Connection code: 011		

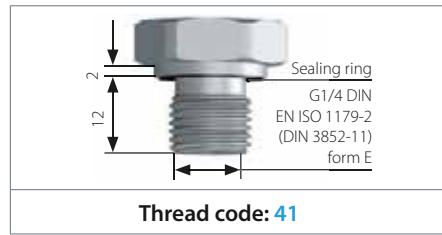

Thread code: 41



0675 / 0680 / 0690

Article matrix for pressure transmitters

T.3

hex 22

stainless steel

1.4404 / AISI 316L



	Type	Pressure range	Pressure connection	Seal material	Electrical connection
0.5 - 4.5 V ratiometric	0675				
0 - 10 V, 3-wire	0680				
4 - 20 mA, 2-wire	0690				

Pressure range	Max. Overpressure ¹⁾		
-1 – 0 bar (Vacuum, approx. -29.6 inHg)	3 bar	000	
²⁾ -1 – 1 bar (Compound pressure range)	3 bar	V01	
0 - 1 bar (approx. 14.5 PSI)	3 bar	100	
0 - 4 bar (approx. 58 PSI)	8 bar	400	
0 - 6 bar (approx. 87 PSI)	12 bar	600	
0 - 10 bar (approx. 145 PSI)	20 bar	101	
0 - 16 bar (approx. 232 PSI)	32 bar	161	
0 - 40 bar (approx. 580 PSI)	80 bar	401	
0 - 100 bar (approx. 1,450 PSI)	200 bar	102	

Pressure connection		
1/4 BSPP – DIN EN ISO 1179-2 (DIN 3852-11), form E	41	

Seal material – Application areas			
NBR	Hydraulic/machine oil, air, nitrogen, water, etc.	-22 °F ... +212 °F -30 °C ... +100 °C	1
EPDM ³⁾	Brake fluid, water, acetylene, hydrogen, etc.	-22 °F ... +257 °F -30 °C ... +125 °C	2
FKM	Hydraulic fluids (HFA, HFB, HFD), petrol/gasoline, etc.	-4 °F ... +257 °F -20 °C ... +125 °C	3

Electrical connection			
DIN EN 175301-803-A (DIN 43650-A); socket device included		013	
M12x1 – DIN EN 61076-2-101 A		002	
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)		004	
Cable connection (length of cable 2 m standard)		011	

Article number	06XX	XXX	41	X	XXX

¹⁾ Static pressure, dynamic pressure 30 to 50% lower. Values refer to the hydraulic or pneumatic part of the pressure transmitter.

²⁾ Other compound pressure ranges on request.

³⁾ For oxygen applications, the EPDM diaphragm can only be used up to 10 bar and a media temperature of max. +60°C.



Pressure transmitters High-Performance series

Silicon-on-sapphire sensor technology (SoS), hex 22



- Outstanding overpressure protection (up to 4 x)
- Ideal choice for mobile hydraulic applications
- Long service life even under high pressure change rates
- Wetted parts made of stainless steel and titanium ensuring excellent media compatibility
- All welded design, no elastomeric seal
- Silicon-on-sapphire technology (SoS) for highest reliability, accuracy and reliable process monitoring
- Very low temperature error and very good long-term stability
- Customer specific solutions available on request

Pressure transmitters

High-Performance series

Technical details

	0705	0710	0720
Output signal:	0.5 - 4.5 V ratiometric	0 - 10 V (3-wire)	4 - 20 mA (2-wire)
Supply voltage U_{V+} :	5 VDC ±10 % max. 6.5 VDC	12 - 32 VDC	10 - 32 VDC
Permissible load / apparent ohmic resistance:	≥ 4.7 kΩ	≥ 4,7 kΩ	≤ ($U_{V+} - 10$ V) / 20 mA
Idle power consumption:	approx. 5 mA		< 4 mA

	0705 / 0710 / 0720									
Pressure range in bar										
Standard pressure ranges p_{nom} :	0 - 10	0 - 16	0 - 25	0 - 40	0 - 60	0 - 100	0 - 160	0 - 250	0 - 400	0 - 600
Overpressure protection p_U : ¹⁾	40	64	100	160	240	400	640	1,000	1,600	1,650
Burst pressure ¹⁾ :	80	128	200	320	480	800	1,280	2,000	2,000	2,000
Pressure range in PSI										
Standard pressure ranges p_{nom} :	0 - 150	0 - 200	0 - 300	0 - 600	0 - 1,000	0 - 1,500	0 - 2,500	0 - 3,000	0 - 6,000	0 - 8,700
Overpressure protection p_U : ¹⁾	300	580	580	1,450	2,900	2,900	5,800	5,800	10,870	12,180
Burst pressure ¹⁾ :	450	870	870	2,175	4,350	4,350	8,700	8,700	14,500	15,230
Technical parameters										
Mechanical life expectancy:	10,000,000 pulsations at rise rates to 5,000 bar/s at p_{nom}									
Permitted pressure change rate:	≤ 72,518 psi/s (≤ 5,000 bar/s)									
Accuracy:	±0.5 % full scale (FS) at room temperature, ±0.25 % BFSL									
Long term stability:	±0.1 % FS p. a.									
Repeatability : ²⁾	±0.1 % FS									
Temperature error : ²⁾	±0.01 % FS / °C									
Compensated temperature range:	-40 °F ... 176 °F (-40 °C ... +80 °C)									
Temperature range ambient:	-40 °F ... 212 °F (-40 °C ... +100 °C)									
Temperature range media:	-40 °F ... +257 °F (-40 °C ... +125 °C)									
Wetted parts material:	stainless steel 1.4305 / SAE Grade 303, titanium									
Insulation resistance:	> 100 MΩ (35 VDC)									
Response time 10 – 90 %:	≤ 2 ms									
Vibration resistance:	20 g at 4 – 2000 Hz sine wave; DIN EN 60068-2-6									
Shock resistance:	half sine wave 500 m/s ² ; 11ms; DIN EN 60068-2-27									
Protection class:	IP67 for M12x1, DIN 72585 (bayonet) and cable connector IP65 for DIN EN 175301-803									
Electromagnetic compatibility:	EMC 2014/30/EU, EN 61000-6-2, EN 61000-6-3									
Max. length of connection cable:	30 m									
Protection against reverse polarity, short-circuit and overvoltage:	Built-in									
Weight:	approx. 80 g (DIN 175301 approx. 110 g, cable outlet approx. 135 g)									

¹⁾ Static value, dynamic value is 30 to 50% lower. Values refer to the hydraulic/pneumatic part of the pressure transmitter / transducer.
²⁾ Within the compensated temperature range.



0705 / 0710 / 0720

Electrical connectors and threads



Pin	0705 / 0710	0720
1	U _{out}	nc
2	Gnd	I _{out}
3	U _{V+}	U _{V+}
PE	((
	IP65	
	x ~ 60 / 76 mm*	
	d ~ Ø 30 mm	
	Connection code: 001	




Pin	0705 / 0710	0720
1	U _{V+}	U _{V+}
2	Gnd	nc
3	U _{out}	I _{out}
4	nc	nc
	IP67	
	x ~ 54 mm	
	d ~ Ø 22 mm	
	Connection code: 002	




Pin	0705 / 0710	0720
1	U _{V+}	U _{V+}
2	Gnd	nc
3	U _{out}	I _{out}
4	nc	nc
	IP67, IP6K9K	
	x ~ 65 mm	
	d ~ Ø 27 mm	
	Connection code: 004	




Pin	0705 / 0710	0720
1	U _{out}	nc
2	Gnd	I _{out}
3	U _{V+}	U _{V+}
	IP67	
	x ~ 73 mm	
	d ~ Ø 26 mm	
	Connection code: 007	

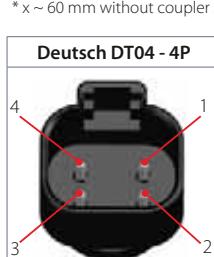

Pin	0705 / 0710	0720
1	Gnd	I _{out}
2	U _{V+}	U _{V+}
3	nc	nc
4	U _{out}	nc
	IP67, IP6K9K	
	x ~ 74 mm	
	d ~ Ø 23 mm	
	Connection code: 008	

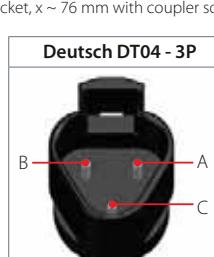

Pin	0705 / 0710	0720
A	U _{V+}	U _{V+}
B	Gnd	nc
C	U _{out}	I _{out}
	IP67, IP6K9K	
	x ~ 74 mm	
	d ~ Ø 23 mm	
	Connection code: 010	

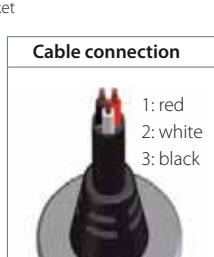


Pin	0705 / 0710	0720
1	U _{V+}	U _{V+}
2	U _{out}	nc
3	Gnd	I _{out}
	IP67	
	x ~ 44 mm (+ 20 mm bend relief) Cable length ~ 2m	
	d ~ Ø 22 mm	
	Connection code: 011	




Thread code:	30
	M10x1 DIN 3852-A



Thread code:	20
	7/16-20 UNF

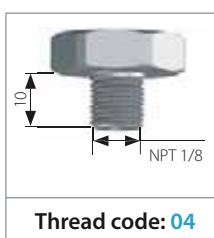

Thread code:	21
	9/16-18 UNF

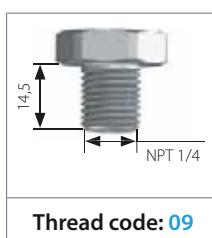

Thread code:	42
	M14x1,5 DIN EN ISO 9974-2 (DIN 3852-11) form E



0705 / 0710 / 0720

Article matrix for pressure transmitters

T.4

hex 22

High Performance



	Type	Pressure range bar	/	PSI	Pressure connection	Pressure unit	Electrical connection
0.5 - 4.5 V ratiometric	0705						
0 - 10 V, 3-wire	0710						
4 - 20 mA, 2-wire	0720						

Pressure range in bar ¹⁾

0 - 10 bar	101
0 - 16 bar	161
0 - 25 bar	251
0 - 40 bar	401
0 - 60 bar	601
0 - 100 bar	102
0 - 160 bar	162
0 - 250 bar	252
0 - 400 bar	402
0 - 600 bar	602

Pressure range in PSI ¹⁾

0 - 150 PSI	152
0 - 200 PSI	202
0 - 300 PSI	302
0 - 600 PSI	602
0 - 1,000 PSI	103
0 - 1,500 PSI	153
0 - 2,500 PSI	253
0 - 3,000 PSI	303
0 - 6,000 PSI	603
0 - 8,700 PSI	873

B

P

Pressure connection

1/4 BSPP – DIN EN ISO 1179-2 (DIN 3852-11), form E	41
1/4 BSPP – DIN 3852-A	03
NPT 1/8 (max. to 250 bar)	04
NPT 1/4	09
M 10 x 1 cyl. DIN 3852-A (max. to 250 bar)	30
7/16 – 20 UNF (max. to 250 bar)	20
9/16 – 18 UNF	21
M 14 x 1,5 – DIN EN ISO 9974-2 (DIN 3852-11), form E	42

Pressure unit ²⁾

bar	B
PSI	P

T

Electrical connection

DIN EN 175301-803-A (DIN 43 650-A); socket device included	001
M 12 – DIN EN 61076-2-101 A	002
Bayonet ISO 15170-A1-4.1 (DIN 72585-A1-4.1)	004
AMP Superseal 1.5°	007
Deutsch DT04-4P	008
Deutsch DT04-3P	010
Cable connection (length of cable 2 m standard)	011

Article number 07XX XXX / XXX XX X XXX

¹⁾The respective overpressure and burst pressure values of the individual pressure ranges (in bar and PSI) can be found in the „Technical data“ on page 157.

²⁾The pressure unit (bar or PSI) must correspond to the selected pressure range (in bar or PSI).



T.5
hex 22
stainless steel
CAN bus technology

Digital Pressure Transmitter with CANopen / CAN J1939 Interface

Hex 22

CAN J1939

CANopen



- Type 0630: CANopen protocol according to CiA DS-301,
Device profile according to CiA DS-404
- Type 0631: CAN J1939 protocol according to SAE J1939
- Robust stainless steel construction with high reliability,
even in very rough environments
- Completely welded measuring cell made of stainless steel 1.4542 /
AISI 630 ensures excellent media compatibility ¹⁾
- Measuring ranges from 0 - 1 bar to 0 - 600 bar

¹⁾ excludes pressure range from 0 - 1 bar consisting of completely welded oil-filled measuring cell made of stainless steel 1.4404 / AISI 316L.

Digital Pressure Transmitter with CANopen / CAN J1939 Interface

Technical details



	0630	0631
Output protocol:	CANopen DIN EN 50325-4 ^{1) 2)}	SAE J1939 ¹⁾
Supply voltage U_B :	10 V - 32 VDC	10 V - 32 VDC
Idle power consumption:	< 30 mA	< 30 mA
CAN Interface:	acc. to DIN ISO 11898-2 CAN 2.0 A	acc. to DIN ISO 11898-2 CAN 2.0 B

	0630 / 0631																						
Pressure ranges in bar																							
Standard pressure ranges p_{nom} :	0 - 1	0 - 2.5	0 - 4	0 - 6	0 - 10	0 - 16	0 - 25	0 - 40	0 - 60	0 - 100	0 - 160	0 - 250	0 - 400	0 - 600									
Overpressure protection $p_u^{3)}$:	2	6	10	20	20	40	100	100	200	200	400	750	750	840									
Burst pressure ³⁾ :	5	9	15	30	30	60	150	150	300	300	600	1,000	1,000	1,050									
Pressure ranges in PSI																							
Standard pressure ranges p_{nom} :	0-15	0-150	0-200	0-300	0-600	0-1,000	0-1,500	0-2,500	0-3,000	0-6,000	0-8,700												
Overpressure protection $p_u^{3)}$:	30	300	580	580	1,450	2,900	2,900	5,800	5,800	10,870	12,180												
Burst pressure ³⁾ :	75	450	870	870	2,175	4,350	4,350	8,700	8,700	14,500	15,230												
Technical parameters																							
Mechanical life expectancy:	10,000,000 pulsations at rise rates to 1,000 bar/s at p_{nom}																						
Permitted pressure change rate:	$\leq 1,000$ bar/s																						
Accuracy:	± 0.5 % of full scale (FS) at room temperature ⁴⁾ , ± 0.25 % BFSL																						
Long-term stability:	$< \pm 0.1$ % of full scale (FS) per year																						
Repeatability ⁵⁾ :	± 0.1 % of full scale (FS)																						
Temperature error ⁵⁾ :	1.0 % of full scale (FS)																						
Compensated temperature range:	-20 °C ... +85 °C																						
Temperature range ambient:	-40 °C ... +105 °C																						
Temperature range media:	-40 °C ... +125 °C																						
Wetted parts material	Housing:	Stainless steel 1.4301 / AISI 304 (0 - 1 bar to 0 - 400 bar) Stainless steel 1.4542 / AISI 630 (0 - 600 bar)																					
	Measuring cell:	Stainless steel 1.4404 / AISI 316L (0 - 1 bar) Stainless steel 1.4542 / AISI 630 (0 - 2.5 bar to 0 - 600 bar)																					
Insulation resistance:	100 MΩ (50 VDC)																						
Response time 10 - 90 %:	< 1 ms																						
Vibration resistance:	20 g acc. to IEC 68-2-6 and IEC 68-2-36																						
Shock resistance:	1000 g acc. to IEC 68-2-32																						
Protection class:	IP67 (IP00 without mating plug)																						
Electromagnetic compatibility:	EN 61326-2-3																						
Weight	90 g																						

¹⁾ Further information and the standard setting can be found in the Technical Documentation CANopen (1-6-30-628-058) and CAN J1939 (1-6-30-628-059) on our homepage at: <https://www.suco.de/en/downloads>.

²⁾ The EDS (Electronic Data Sheet) of our CANopen device can be downloaded from our homepage at: <https://www.suco.de/en/downloads>.

³⁾ Static pressure. Dynamic value is 30% to 50% lower. Values refer to the hydraulic/pneumatic part of the pressure transmitter.

⁴⁾ Including non-linearity, hysteresis, repeatability, zero error and full scale (FS) according to IEC 61298-2.

⁵⁾ Within the compensated temperature range. For pressure ranges < 3 bar: 1.5 % of fullscale (FS)

T.5

hex 22

stainless steel


CAN bus technology




0630 / 0631

Electrical connectors and threads

M12 DIN EN 61076 - 2-101 A CiA-DR303-1	
Pin	0630 / 0631
1	nc
2	U_{V+}
3	Gnd
4	CAN-High
5	CAN-Low
IP67	
$x \sim 60$ mm	
$d \sim \varnothing 22$ mm	
Connection code: 032	

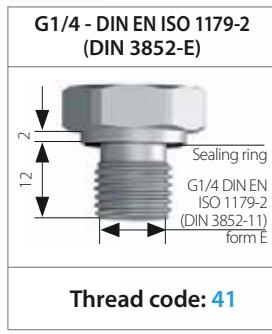

Thread code: 41

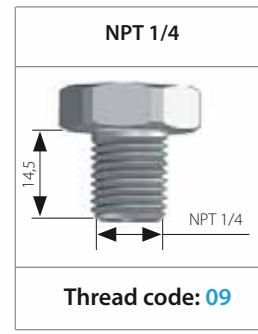

Thread code: 09

CAN J1939

CANopen



0630 / 0631

Article matrix for digital pressure transmitters

T.5

hex 22

stainless steel

CAN bus technology



	Type	Pressure range bar	/	PSI	Pressure connection	Pressure unit	Electrical connection
CANopen, CAN 2.0 A	0630						
CAN J1939, CAN 2.0 B	0631						

Pressure range in bar¹⁾²⁾

0 - 1.0 bar	100
0 - 2.5 bar	250
0 - 4.0 bar	400
0 - 6.0 bar	600
0 - 10 bar	101
0 - 16 bar	161
0 - 25 bar	251
0 - 40 bar	401
0 - 60 bar	601
0 - 100 bar	102
0 - 160 bar	162
0 - 250 bar	252
0 - 400 bar	402
0 - 600 bar	602

B

Pressure range in PSI¹⁾²⁾

0 - 15 PSI	151
0 - 150 PSI	152
0 - 200 PSI	202
0 - 300 PSI	302
0 - 600 PSI	602
0 - 1,000 PSI	103
0 - 1,500 PSI	153
0 - 2,500 PSI	253
0 - 3,000 PSI	303
0 - 6,000 PSI	603
0 - 8,700 PSI	873

P

Pressure connection

G 1/4 - DIN 3852, form E, male thread	41
NPT 1/4	09

↓

↓

Pressure unit

bar	B
PSI	P

↓

Electrical connection

M12x1 - DIN EN 61076-2-101 A, CiA-DR303-1	032
---	------------

↓

↓

↓

↓

Article no. **063X XXX / XXX XX X 032**

CAN J1939

CANopen

SUCO
RoHSIII
2020-209
compliant

CE

¹⁾ The proprietary PGN and SPN of the respective pressure range can be found in the Technical Documentation CAN J1939 (1-6-30-628-059) on our homepage at: <https://www.suco.de/en/downloads>.

²⁾ The respective overpressure and burst pressure values of the individual pressure ranges (in bar and PSI) can be found in the „Technical data“ on page 161.

³⁾ The pressure unit (bar or PSI) must correspond to the selected pressure range (in bar or PSI).



Accessories

Mating plugs, thread adapters and transmitter display



- High-quality accessories
- Developed for our products
- Aligned to our products
- Direct from the manufacturer

Mating plugs

For requirements at short notice and for realising custom solutions


T.6
Accessories



Deutsch DT06-3S (for DT04-3P) 3 x 0,5 mm ² PUR cable (2 m), IP67	Suitable for connection code 010 Deutsch DT04-3P	Article number: 1-1-36-653-160
---	--	--



TE AMP Supershell 1.5°, 3-pin 3 x 0,5 mm ² Radox cable (2 m), IP65	Suitable for connection code 007 AMP Supershell 1.5°	Article number: 1-1-32-653-158
---	--	--

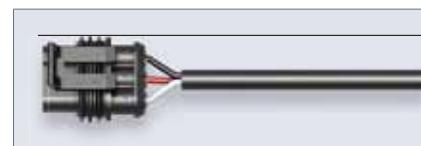

M 12x1 DIN EN 61076-2-LF, 4-pin 4 x 0,34 mm ² PUR cable (2 m), IP65	Suitable for connection code 002 M 12x1 DIN EN 61076-2-101 A	Article number: 1-1-00-653-162
--	--	--



For the pin assignment of the wires please refer to chapter M.10 Accessories (page 91)

Socket device M 12x1 DIN EN 61076-2-101 A straight, 4-pin Terminals for wire diameter 0.75 mm ² (AWG 18)	Suitable for connection code 002 M 12x1 DIN EN 61076-2-101-LF	Article number: 1-6-00-652-016
---	---	--



Socket device M 12x1 DIN EN 61076-2-101 A angled, 4-pin Terminals for wire diameter 0.75 mm ² (AWG 18)	Suitable for connection code 002 M 12x1 DIN EN 61076-2-101-LF	Article number: 1-6-00-652-017
---	---	--



T

Thread adapters

For requirements at short notice and for realising custom solutions

- The materials and shapes of thread adapters are aligned perfectly to our electronic pressure switches and transmitters
- Thread adapters are provided together with seals to ensure safe and easy installation of our electronic pressure switches and transmitters



For G1/4 DIN EN ISO 1179-1 (DIN 3852-E)

SUCO thread code 41, transmitters and electronic pressure switches

Stainless steel (1.4305 / AISI 303) thread adapters

G 1/4
DIN EN ISO 1179-1 (DIN 3852-E)
female thread



M10 x 1 form A
DIN 3852-1

hex 22
h = 30,5 mm

Article number:

1-1-00-420-020



M14 x 1.5 form E
DIN 3852-E
incl. FKM sealing ring

hex 22
h = 35 mm

Article number:

1-1-00-420-028



NPT 1/4-18

hex 22
h = 35,5 mm

Article number:

1-1-00-420-021



9/16 -18UNF
incl. O-ring FKM

hex 22
h = 33 mm

Article number:

1-1-00-420-027

SUCO Transmitter Display STD

- For pressure transmitters with 4 – 20 mA current output
- Suitable for pressure, temperature, level, force or flow indication
- Connection to DIN EN 175301-803-A (DIN 43650)
- Switching output option available (NO)

Technical details

Display:	LED, red, 4-digits, rotatable (4x90°)
Display range:	-999 ... 9999
Input signal:	4 ... 20 mA, 2-wire
Standard display:	4.00 ... 20.00 (pre-set at factory)
Accuracy:	0.2 % FS ±1 digit
Supply voltage:	17 ... 32 VDC
Max. loop current:	60 mA
Sampling rate:	300 ms – 25.5 s (configurable with filter)
Switching output (for STD1 and STD3):	PNP transistor output 90 mA (P-MOSFET) Embedded overcurrent protection
Hysteresis (for STD1 and STD3):	constant value 3 digits of pre-setting (e. g.: switching point = 20.0 psi, hysteresis = 0.3 psi)
Programming:	2 programming buttons are located underneath the removable front panel
Programming options:	
Zero point setting:	-999 ... 9999
Range:	0 ... 9999
Decimal points:	3 positions or disable
Average filter:	0.3 ... 25.5 s
Overrun:	On / off
Switching point (for STD1 and STD3):	-999 ... 9999
Switch function (for STD1 and STD3):	NO
Save settings:	In EEPROM
Error messages:	If the overrun function is selected, „HI“ is shown on the display when 20 mA is exceeded. „LO“ is displayed when the current drops below 4 mA. When the overrun function is disabled, „ErC6“ is displayed as soon as the value is no longer in range -999 ... 9999.
Temperature range:	-10°C ... +60°C
Housing material:	ABS / acrylic (display window)
Protection class:	IP65 when fitted
Electrical connection:	DIN EN 175301-803-A (DIN 43650)
Attachment screw:	Included in the delivery

Article number:

1-6-20-656-007	STD0 Display (for 0720)
1-6-20-656-008	STD1 Display with switching output (for 0720)
1-6-20-656-013	STD2 Display (for 0602 / 0660 / 0690)
1-6-20-656-014	STD3 Display with switching output (for 0602 / 0660 / 0690)

T.6 Accessories



Contact assignment:

PIN	Display (STD0)
1	nc
2	I _{out}
3	U _{V+}
PE	

PIN	Display with switching output (STD1):
1	PNP
2	I _{out}
3	U _{V+}
PE	

PIN	Display (STD2)
1	U _{V+}
2	I _{out}
3	nc
PE	

PIN	Display with switching output (STD3):
1	U _{V+}
2	I _{out}
3	PNP
PE	


S. ESI Sensor Technology





ESI Technology Ltd

The worldwide specialist for customised high precision electronic Pressure sensors

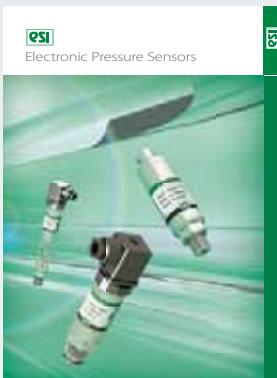

For decades, ESI Technology with headquarters in Wrexham (UK) has served its customers with consistent product development, special engineered solutions and outstanding technical service and sales support.

In 2009 ESI Technology Ltd was acquired by SUCO. Since then ESI stands for Electronics, Sensors and Instruments. By forming part of a bigger organisation, yet keeping its own independence, ESI has gained the strength to expand its sales efforts and services worldwide.

ESI Technology has become one of the leading suppliers for specialised Pressure sensors by offering bespoke solutions for specific applications.

With a dedicated manufacturing and engineering facility in Wrexham, ESI serves an extensive range of major industries such as Oil and Gas, Subsea, Aerospace, Process, Test and Calibration.

Being one of the key suppliers to these industries requires high performance not only of its products. From design and sourcing through to shipment and customer service, ESI's Management System is approved to ISO 9001:2008.

ATEX, IECEx and DNV-GL approvals are also available for a wide range of products.

Throughout the product range, ESI uses a variety of state of the art sensor technologies to make each product a perfect fit to the desired application.

Though, the jewel of ESI's sensor technologies is Silicon-on-Sapphire which has redefined the performance capability of Pressure monitoring products.

Additional services, such as tailoring of the existing product range to suit application requirements, product conditioning such as ESS (Environmental Stress Screening) and product documentation packaging, make ESI the perfect partner for customers who need a bespoke service.

With a wide sales network, ESI Technology is able to deliver its' special services globally.

If you can't find the suitable solution on the following pages, please do not hesitate to contact the ESI Technology sales team or one of its partners which is worldwide at your site.

We are looking forward to supporting you!

Pressure Sensors Overview

For full information, please ask for our brochure
ESI - Electronic Pressure Sensors

S.01 High-Pressure Transmitter

Pressure Ranges:	0 – 600 bar; 0 – 1,000 bar; 0 – 1,500 bar; 0 – 2,000 bar; 0 – 3,000 bar; 0 – 4,000 bar; 0 – 5,000 bar (other ranges possible)
Sensor Technology:	Silicon-on-Sapphire (SoS)
Accuracy:	$\leq \pm 0.25\%$ FS typ. max., BFSL
Output Signal:	10 mV/V or 0 – 5 V or 0 – 10 V or 4 – 20 mA
Wetted Parts:	All titanium, machined from a single piece
Process Connection:	Autoclave F250-C female; M16 x 1.5 female
Option:	ATEX / IECEEx (available only for 4 – 20mA), includes mining areas (Group I M1), DNV-GL certified option
Types:	HP1000; HP1001; HP1002; HP1003; HP1011; HP1012; HP1100; HP1101; HP1102; HP1103; HP1111; HP1112



S.02 Low-Pressure Transmitter

Pressure Ranges:	0 – 50 mbar; 0 – 100 mbar; 0 – 250 mbar; 0 – 500 mbar 0 – 1,000 mbar (other ranges possible)
Sensor Technology:	Piezoresistive Silicon Sensor
Accuracy:	$\leq \pm 0.5\%$ FS typ. max., BFSL
Output Signal:	10 mV/V (typ.) or 0 – 5 V or 0 – 10 V or 4 – 20 mA
Wetted Parts:	Stainless steel (SAE 316L) with O-ring
Process Connection:	1/4" BSP (G 1/4); 1/2" BSP; 1/4" NPT; 1/2" NPT; (all male) (others on request)
Types:	LP1000; LP1001; LP1002; LP1003; LP1011; LP1012



S.03 High-Precision Pressure Transducer

Pressure Ranges:	0 – 500 mbar to 0 – 1,500 bar
Sensor Technology:	Silicon-on-Sapphire (SoS)
Accuracy:	$\leq \pm 0.1\%$ FS typ. max., BFSL
Temperature Effects:	$\pm 1.0\%$ FS max. thermal error band over $-20^\circ\text{C} \dots +70^\circ\text{C}$
Output Signal:	10 mV/V (typ.) or 0 – 5 V or 0 – 10 V or
Wetted Parts:	All Titanium
Process Connection:	1/4" BSP (G 1/4); 1/4" NPT; (all male)
Electrical Connection:	MIL-C-26482 6 pin Bayonet or 1 m PTFE cable
Option:	ATEX / IECEEx (available only for mV output), includes mining areas (Group I M1)
Types:	HI2000; HI2001; HI2002; HI2010; HI2011; HI2012



Pressure Sensors Overview



S.0 High-Temperature Pressure Transmitter

Temperature Ranges:

Media temperature up to 250 °C

Pressure Ranges:

0 – 1 bar up to 0 – 1,500 bar

Output Signal:

10 mV or 4 – 20 mA

Process Connection:

1/4" BSP (G 1/4); 1/4" NPT; (all male)

or 1/2" BSP flush diaphragm

Electrical Connection:

MIL-C26482 6 pin Bayonet;

1 m PTFE cable; DIN EN 175301

Option: ATEX / IECEx, includes mining areas (Group I M1)

Types: HI2200; HI2210; HI2300; HI2310; HI6000; HI6001; HI6002;

HI6003; HI6301; HI6302; HI6010; HI6011; HI6012; HI6013;

HI6311; HI6312; PR3860; PR3861; PR3862

S.05 USB-Transducer

Pressure Ranges:

-1 – 2.5 bar; 0 – 16 bar; 0 – 100 bar; 0 – 400 bar;

0 – 1,500 bar; 0 – 2,000 bar; 0 – 4,000 bar; 0 – 5,000 bar

Sensor Technology: Silicon-on-Sapphire (SoS)

Accuracy: $\leq \pm 0.15\%$ of span BFSL

Output Signal: USB-Interface, power supply and data transfer via USB Mini B

Wetted Parts: All titanium

Process Connection: 1/4" BSP (G 1/4); 1/4" NPT; (all male) or

Autoclave F-250-C female;

Sample Rate: up to 1,000 Hz

Types: GS4200-USB; GD4200-USB

S.06 Submersible Depth / Level Pressure Transmitter

Pressure Ranges:

0 – 1 mWG up to 0 – 500 mWG

(other Pressure ranges available)

Accuracy: $\leq \pm 0.3\%$ of span BFSL

Output Signal: 4 – 20 mA (other options on request)

Electrical Connection: Vented Cable

Option: ATEX/IECEx, includes mining areas (Group I M1),

DNV-GL certified option

Types: PR3420; PR3441; PR3442

S.07 Flush Diaphragm Pressure Transmitter

Pressure Ranges:

0 – 200 mbar up to 0 – 400 bar

Sensor Technology: Thick Film Ceramic Sensor

$\leq \pm 0.3\%$ of span BFSL

Output Signal: 4 – 20 mA (other options on request)

Wetted Parts: Stainless steel 316

Process Connection: 1/2" BSP; Pipe-clamp; DIN 11851; (other options on request)

Option: ATEX / IECEx, includes mining areas (Group I M1)

Types: PR3800; PR3801; PR3802; PR3820; PR3821; PR3822;

PR3850; PR3851; PR3852; PR3860; PR3861; PR3862

S.08 Intrinsically Safe Pressure Transmitter

Certification:	ATEX / IECEx approved for explosion protection for flammable gases (zone 0), dusts (zone 20) and mining areas (group I M1)
Pressure Ranges:	0 – 100 mbar up to 0 – 1,500 bar
Output Signal:	4 – 20 mA
Prozess Connection:	1/4" NPT (female standard) or 1/2" BSP male (G 1/2")
Options:	DNV-GL certified option
Types:	PR3900; PR3110EX



S.09 Special and Customised Solutions

Application Specific Design Solutions
 Customised Housing Design
 Choice of Output Signals and Pressure Ranges
 Specialised Process Connections
 Various Electrical Connectors
 Special Housing Materials



S.10 Oil, Gas and Subsea Solutions

Dual Redundancy (Pressure Sensors and Electronics)
 Hyperbaric Testing to 3,300 m Depth
 Environmental Stress Screening (ESS)
 Bespoke Process Connections
 Extended Service life
 Special Housing Materials
 Comprehensive Documentation Package and Certification



S.11 Differential Pressure Transmitter

Pressure Ranges:	0 – 5 mbar up to 0 – 200 bar
Accuracy:	±0.3 % of span BFSL
Output Signal:	4 – 20 mA (other options on request)
Wetted Parts:	Suitable for liquids or gases
Option:	ATEX / ECEx, includes mining areas (Group I M1)
Types:	PR3200; PR3210; PR3220; PR3230; PR3240; PR3202; PR3203; PR3204



S.12 Accessories

Panel Meter
 High Temperature Pressure Adapter
 Adapters for Process Connectors



Selection Matrix



			Output signal	No. of wires	Silicon-on-Sapphire (SoS)	Bonded Foil Strain Gauge	Ceramic Thick Film	Isolated Piezoresistive	Piezoresistive Silicon
Hispec High Specification	HI2000	High-precision Pressure Transmitter (ATEX/IECEx option), cable outlet	10 mV/V	4	■				
	HI2001	High-precision Pressure Transmitter (0 - 1,500 bar), cable outlet	0-5 V	4	■				
	HI2004	High-precision Pressure Transmitter (0 - 1,500 bar), cable outlet	0-5 V	3	■				
	HI2002	High-precision Pressure Transmitter (0 - 1,500 bar), cable outlet	0-10 V	4	■				
	HI2005	High-precision Pressure Transmitter (0 - 1,500 bar), cable outlet	0-10 V	3	■				
	HI2010	High-precision Pressure Transmitter (ATEX/IECEx option), MIL-C-26482	10 mV/V	4	■				
	HI2011	High-precision Pressure Transmitter (0 - 1,500 bar), MIL-C-26482	0-5 V	4	■				
	HI2014	High-precision Pressure Transmitter (0 - 1,500 bar), MIL-C-26482	0-5 V	3	■				
	HI2012	High-precision Pressure Transmitter (0 - 1,500 bar), MIL-C-26482	0-10 V	4	■				
	HI2015	High-precision Pressure Transmitter (0 - 1,500 bar), MIL-C-26482	0-10 V	3	■				
Hispec High Temperature	HI2200	High temperature Pressure Transmitter up to 200 °C, cable outlet ¹⁾	10-20 mV/V	4	■				
	HI2210	High temperature Pressure Transmitter up to 200 °C, MIL-C-26482 ¹⁾	10-20 mV/V	4	■				
	HI2300	High temperature Pressure Transmitter up to 200 °C, cable outlet ²⁾	10 mV/V	4	■				
	HI2310	High temperature Pressure Transmitter up to 200 °C, MIL-C-26482 ²⁾	10 mV/V	4	■				
	HI6000	High temperature Pressure Transmitter up to 150 °C, cable outlet	0.5-4.5 V ratio	4	■				
	HI6001	High temperature Pressure Transmitter up to 150 °C, cable outlet	0-5 V	4	■				
	HI6002	High temperature Pressure Transmitter up to 150 °C, cable outlet	0-10 V	4	■				
	HI6003	High temperature Pressure Transmitter up to 150 °C, cable outlet	4-20 mA	2	■				
	HI6301	High temperature Pressure Transmitter up to 150 °C, cable outlet	0-5 V	3	■				
	HI6302	High temperature Pressure Transmitter up to 150 °C, cable outlet	0-10 V	3	■				
	HI6010	High temperature Pressure Transmitter up to 150 °C, D38999 (6-pin)	0.5-4.5 V ratio	4	■				
	HI6011	High temperature Pressure Transmitter up to 150 °C, D38999 (6-pin)	0-5 V	4	■				
Genspec General Purpose	GS4200	Multi-purpose Pressure Transmitter, socket device EN 175301-803-A	4-20 mA	2	■				
	GS4201	Multi-purpose Pressure Transmitter, socket device EN 175301-803-A	10 mV/V	4	■				
	GS4202	Multi-purpose Pressure Transmitter, socket device EN 175301-803-A	0-5 V	4	■				
	GS4212	Multi-purpose Pressure Transmitter, socket device EN 175301-803-A	0-5 V	3	■				
	GS4203	Multi-purpose Pressure Transmitter, socket device EN 175301-803-A	0-10 V	4	■				
	GS4213	Multi-purpose Pressure Transmitter, socket device EN 175301-803-A	0-10 V	3	■				
Genspec USB	GS4200-USB	USB Pressure Transmitter GenSpec „Standard“ (5 Hz, 0 - 4,000 bar)	USB 2.0	n/a	■				
	GD4200-USB	USB Pressure Transmitter GenSpec „Dynamic“ (1,000 Hz, 0 - 5,000 bar)	USB 2.0	n/a	■				
Genspec Standard Industrial	GS4000	Compact Pressure Transmitter, socket device EN 175301-803-C	2 mV/V	4		■			
	GS4001	Compact Pressure Transmitter, socket device EN 175301-803-C	0-5 V	4		■			
	GS4011	Compact Pressure Transmitter, socket device EN 175301-803-C	0-5 V	3		■			
	GS4002	Compact Pressure Transmitter, socket device EN 175301-803-C	0-10 V	4		■			
	GS4012	Compact Pressure Transmitter, socket device EN 175301-803-C	0-10 V	3		■			
	GS4003	Compact Pressure Transmitter, socket device EN 175301-803-C	4-20 mA	2		■			
	GS4100	Compact Pressure Transmitter, socket device EN 175301-803-C	2 mV/V	4			■		
	GS4101	Compact Pressure Transmitter, socket device EN 175301-803-C	0-5 V	4		■			
	GS4111	Compact Pressure Transmitter, socket device EN 175301-803-C	0-5 V	3		■			
	GS4102	Compact Pressure Transmitter, socket device EN 175301-803-C	0-10 V	4		■			
	GS4112	Compact Pressure Transmitter, socket device EN 175301-803-C	0-10 V	3		■			
	GS4103	Compact Pressure Transmitter, socket device EN 175301-803-C	4-20 mA	2			■		
	PR3100	Standard industrial Pressure Transmitter (0 - 1,000 bar)	4-20 mA	2		■	■		
Protran Process	PR3101	Standard industrial Pressure Transmitter (0 - 1,000 bar)	2 mV/V	4		■	■		
	PR3102	Standard industrial Pressure Transmitter (0 - 1,000 bar)	0-5 V	4		■	■		
	PR3103	Standard industrial Pressure Transmitter (0 - 1,000 bar)	0-10 V	4		■	■		
	PR3110EX	ATEX/IECEx low Pressure Transmitter, socket device EN 175301-803-A	4-20 mA	2				■	

¹⁾ uncompensated and uncalibrated output²⁾ compensated and rationalized output

Differential																		
Hazardous Area option	■																	
High Accuracy		■																
High Pressure (> 1,500 bar)			■															
Flush Diaphragm				■														
High Specification					■													
High Temperature (> 125°C)						■												
Low Pressure (< 500 mbar)							■											
Wireless								■										
Aerospace									■									
Automotive										■								
Clean Room										■								
Defence										■								
Depth & Level											■							
General Purpose											■							
Hydraulic											■							
Hygienic												■						
Oil & Gas												■						
Process													■					
Subsea													■					
Test & Calibration														■				
Marine															■			

Selection Matrix



			Output signal	No. of wires	Silicon-on-Sapphire (SoS)	Bonded Foil Strain Gauge	Ceramic Thick Film	Isolated Piezoresistive	Piezoresistive Silicon
Protran Differential	PR3200	High Pressure Transmitter up to 200 bar for liquid media, DIN EN 175301-803-A	4-20 mA	2	■				
	PR3210	High Pressure Transmitter up to 200 bar for liquid media, DIN EN 175301-803-A	0-5 V	4	■				
	PR3230	High Pressure Transmitter up to 200 bar for liquid media, DIN EN 175301-803-A	0-5 V	3	■				
	PR3220	High Pressure Transmitter up to 200 bar for liquid media, DIN EN 175301-803-A	0-10 V	4	■				
	PR3240	High Pressure Transmitter up to 200 bar for liquid media, DIN EN 175301-803-A	0-10 V	3	■				
	PR3202	Low Pressure Transmitter for air/non-corrosive gas with screw terminals	4-20 mA	2				■	
	PR3203	Low Pressure Transmitter for air/non-corrosive gas with screw terminals	0-5 V	3			■		
	PR3204	Low Pressure Transmitter for air/non-corrosive gas with screw terminals	0-10 V	3				■	
Protran Flush Diaphragm	PR3800	Flush diaphragm Pressure Transmitter (pipe clamp), DIN EN 175301-803-A	4-20 mA	2		■	■		
	PR3801	Flush diaphragm Pressure Transmitter (pipe clamp), DIN EN 175301-803-A	0-5 V	4		■	■		
	PR3802	Flush diaphragm Pressure Transmitter (pipe clamp), DIN EN 175301-803-A	0-10 V	4		■	■		
	PR3820	Flush diaphragm Pressure Transmitter (DIN11851 / SMS / RJT), DIN EN 175301-803-A	4-20 mA	2		■	■		
	PR3821	Flush diaphragm Pressure Transmitter (DIN11851 / SMS / RJT), DIN EN 175301-803-A	0-5 V	4		■	■		
	PR3822	Flush diaphragm Pressure Transmitter (DIN11851 / SMS / RJT), DIN EN 175301-803-A	0-10 V	4		■	■		
	PR3850	Flush diaphragm Pressure Transmitter (1/2" BSP), DIN EN 175301-803-A	4-20 mA	2		■			
	PR3851	Flush diaphragm Pressure Transmitter (1/2" BSP), DIN EN 175301-803-A	0-5 V	4		■			
	PR3852	Flush diaphragm Pressure Transmitter (1/2" BSP), DIN EN 175301-803-A	0-10 V	4		■			
	PR3860	Flush diaphragm Pressure Transmitter up to 250 °C, DIN EN 175301-803-A	4-20 mA	2		■			
	PR3861	Flush diaphragm Pressure Transmitter up to 250 °C, DIN EN 175301-803-A	0-5 V	4		■			
	PR3862	Flush diaphragm Pressure Transmitter up to 250 °C, DIN EN 175301-803-A	0-10 V	4		■			
Protran Submersible Depth / Level	PR3420	Submersible depth/level Pressure Transmitter, sludge platform, cable outlet	4-20 mA	2				■	
	PR3441	Submersible depth/level Pressure Transmitter, Ø 25 mm, cable outlet	4-20 mA	2				■	
	PR3442	Submersible depth/level Pressure Transmitter, Ø 16 mm, cable outlet	4-20 mA	2				■	
Protran Oil & Gas	HI5000	Downhole Pressure Transmitter up to 2,000 bar, NACE-certified	4-20 mA	2	■				
	PR3900	Hazardous area Pressure Transmitter, ATEX / IECEx, cable outlet	4-20 mA	2	■				
	PR3913	Control valve Pressure Transmitter down to 3,000 m depth, cable outlet	4-20 mA	2	■				
	PR3914	Subsea Pressure Transmitter down to 6,000 m depth, cable outlet	4-20 mA	2	■				
	PR3915	Dual redundant subsea Pressure Transmitter down to 3,000 m depth, cable outlet	4-20 mA	2	■				
	PR3920	DP control valve subsea Pressure Transmitter down to 3,000 m depth, cable outlet	4-20 mA	2	■				
Protran Heavy Duty	PR9000	Process Pressure Transmitter up to 1,500 bar, screw terminal / P68 cable gland	4-20 mA	2	■			■	
	PR9500	Wireless Pressure Transmitter up to 1,500 bar, screw terminal / P68 cable gland	4-20 mA	2	■			■	
Hires High Pressure	HP1000	High Pressure Transmitter up to 2,000 bar, DIN EN 175301-803-A	10 mV/V	4	■				
	HP1001	High Pressure Transmitter up to 2,000 bar, DIN EN 175301-803-A	0-5 V	4	■				
	HP1011	High Pressure Transmitter up to 2,000 bar, DIN EN 175301-803-A	0-5 V	3	■				
	HP1002	High Pressure Transmitter up to 2,000 bar, DIN EN 175301-803-A	0-10 V	4	■				
	HP1012	High Pressure Transmitter up to 2,000 bar, DIN EN 175301-803-A	0-10 V	3	■				
	HP1003	High Pressure Transmitter up to 2,000 bar, DIN EN 175301-803-A	4-20 mA	2	■				
	HP1100	High Pressure Transmitter from 2,500 to 5,000 bar, DIN EN 175301-803-A	10 mV/V	4	■				
	HP1101	High Pressure Transmitter from 2,500 to 5,000 bar, DIN EN 175301-803-A	0-5 V	4	■				
	HP1111	High Pressure Transmitter from 2,500 to 5,000 bar, DIN EN 175301-803-A	0-5 V	3	■				
	HP1102	High Pressure Transmitter from 2,500 to 5,000 bar, DIN EN 175301-803-A	0-10 V	4	■				
	HP1112	High Pressure Transmitter from 2,500 to 5,000 bar, DIN EN 175301-803-A	0-10 V	3	■				
	HP1103	High Pressure Transmitter from 2,500 to 5,000 bar, DIN EN 175301-803-A	4-20 mA	2	■				
Lopres Low Pressure	LP1000	Low Pressure Transmitter for air and liquid, DIN EN 175301-803-A	10 mV/V	4		■	■		
	LP1001	Low Pressure Transmitter for air and liquid, DIN EN 175301-803-A	0-5 V	4		■	■		
	LP1011	Low Pressure Transmitter for air and liquid, DIN EN 175301-803-A	0-5 V	3		■	■		
	LP1002	Low Pressure Transmitter for air and liquid, DIN EN 175301-803-A	0-10 V	4		■	■		
	LP1012	Low Pressure Transmitter for air and liquid, DIN EN 175301-803-A	0-10 V	3		■	■		
	LP1003	Low Pressure Transmitter for air and liquid, DIN EN 175301-803-A	4-20 mA	2		■	■		

	Differential		Hazardous Area option																	
			High Accuracy																	
				High Pressure (> 1,500 bar)																
		Flush Diaphragm																		
			High Specification																	
				High Temperature (> 125°C)																
					Low Pressure (< 500 mbar)															
						Wireless														
							Aerospace													
								Automotive												
									Clean Room											
										Defence										
											Depth & Level									
												General Purpose								
													Hydraulic							
														Hygienic						
															Oil & Gas					
																Process				
																	Subsea			
																		Test & Calibration		
																			Marine	

SUCO Group

Worldwide at your side



ARGENTINA

Meditecna S.R.L.
Phone: +54-11 4585 7005
Fax: +54-11 4585 7005
www.mediatecna.com.ar
meditecna@mediatecna.com.ar

AUSTRALIA

ANZ Controls Pty. Ltd.
Phone: +61-7-55358700
Fax: +61-7-55358744
www.anzcontrols.com.au
sales@anzcontrols.com.au

AUSTRIA

BIBUS Austria GmbH
Phone: +43-2242-33388
Fax: +43-2242-3338810
www.bibus.at
info@bus.at

BELARUS

ESTONIA
LATVIA
LITHUANIA

UAB Lintera
Phone: +375-17-3870240
Fax: +375-17-3870250
www.lintera.info
minsk@lintera.info

BELGIUM

LUXEMBOURG
Bintz Technics NV
Phone: +32-2-7204916
Fax: +32-2-7203750
www.bintz.be
info@bintz.be

BOSNIA AND HERZEGOVINA

SERBIA

BIBUS doo
Phone: +38-755-423-444
Fax: +38-755-423-444
www.bibus.ba
info@bus.ba

BRAZIL

Pressure Comercial Ltda.
Phone: +55-11-46882113
Fax: +55-11-42084028
www.pws.com.br
pressure@pws.com.br

BULGARIA

BIBUS Bulgaria OOD
Phone: +359-2 971 98 08
Fax: +359-2 927 32 64
www.bibus.bg
info@bus.bg

CHILE

MX CHILE
Phone +56-995-460-974
Fax: +56-412-911-400
www.mxchile.com
contacto@mxchile.com

CHINA

Mintai Hydraulics Shanghai
Phone: +86-21-68393909
Fax: +86-21-68393955
www.mintaigroup.com
sales@mintai.com

COLOMBIA

Instrumatic S.A.S.
Phone +57-1616 4169
Fax: +57-1257 2005
www.instrumatic.com.co
ventas@instrumatic.com.co

CROATIA

BIBUS Zagreb d.o.o.
Phone: +385-1-3818004
Fax: +385-1-3818005
www.bibus.hr
bibus@bus.hr

CZECH REPUBLIC

BIBUS s.r.o.
Phone: +420-547 125 300
Fax: +420-547 125 310
www.tlakovespinace.cz
bibus@bus.cz

DENMARK

OEM Automatic Klitsø A/S
Phone: +45-70106400
Fax: +45-70106410
www.oemklitsø.dk
info@oemklitsø.dk

EGYPT

JORDAN
LEBANON
SAUDI ARABIA

EHE EGYPTIAN HYDRAULIC ENGINEERING

Phone: +202-24501890
Fax: +202-24501892
www.ehehydraulic.com
s.zeyada@ehehydraulic.com

FINLAND

OEM Finland Oy
Phone: +358-207-499499
Fax: +358-207-499456
www.oem.fi
info@oem.fi

FRANCE

SUCO VSE France
Phone: +33 2 43 14 14 21
Fax: +33 2 43 14 14 25
info@sucovse.fr
www.sucovse.fr

GERMANY

Ifaug GmbH
Phone: +49-2151-300478
www.ifaug.de
ifaug@web.de

Kania & Edinger GmbH
Phone: +49-5235-501580
www.kania-antriebstechnik.de
info@kania-antriebstechnik.de

GERMANY

Helmut Rossmanith GmbH
Phone: +49-7161-30900

www.rossmanith.de

info@rossmanith.de

SUKU Druck- und Temperaturmesstechnik GmbH
Phone: +49-37208-2717
www.suku.de
contact@suku.de

GERMANY

SUCO Robert Scheuffele
Phone: +49-7142-597-0
Fax: +49-7142-597-19
www.suco.de
info@suco.de

GREECE

NRG System
Phone: +30-25310-83366
Fax: +30-25310-83367
www.nrgsystem.gr
info@nrgsystem.gr

HUNGARY

Megawatt Villamosipari Kft
Phone: +36-33-454000
Fax: +36-33-454494
www.megawatt.hu
megawatt@megawatt.hu

INDIA

NORTH INDIA
(Maharashtra, Chhattisgarh, Orissa)

BEDA Flow Systems Pvt. Ltd.
Phone: +91-120-432 99 90
Fax: +91-120-4 08 00 22
www.bedaflow.com
info@bedaflow.com

SOUTH INDIA

Adroit Technologies
Phone: +91-9663395186
Fax: +91-1147619422
adroitechology@gmail.com

INDONESIA

PT Surya Sarana Dinamika
Phone: +62-21-65835077 / 78
Fax: +62-21-65835079 / 80
www.suryasarana.com
sales@suryasarana.com

ISRAEL

Ilan & Gavish
Automation Service Ltd.
Phone: +972-3-9221824
Fax: +972-3-9240761
www.ilan-gavish.co.il
asaf@ilan-gavish.com



Suco

ITALY

Ma.In.A. Srl
Phone: +39-02-55300732 / 762
Fax: +39-02-55300762
www.mainasl.it
mainami@iol.it

JAPAN

Japan Flow Controls Co., Ltd.
Phone: +81-3-5209 3393
Fax: +81-3-5256 8838
www.flow-jfc.com
yamanaka@flow-jfc.com

KOREA

CONTINENTAL GLOBAL LTD.
Phone: +82-2-4221615
Fax: +82-2-4146977
www.suco.co.kr
info@suco.co.kr

MALAYSIA

Active Control Asiatech (M) Sdn Bhd
Phone: +603-777 31 633
Fax: +603-777 31 669
www.activecontrol.com.my
gary.aca@gmail.com

NETHERLANDS

Solar Nederland BV
Phone: +31-88-7652700
Fax: +31-72-5192790
www.solar Nederland.nl
industrie@solar Nederland.nl

NEW ZEALAND

ANZ Controls Pty. Ltd.
Phone: +64-3-3435904
Fax: +64-3-3435906
www.anzcontrols.com.au
sales@anzcontrols.com.au

NORWAY

OEM Automatic AS
Phone: +47-32-210500
Fax: +47-32-210501
www.oem.no
post@oem.no

PERU

EGLOMIN
Phone: +51-1 2856248
www.eglomin.com
ventas@eglomin.com

PHILIPPINES

**ACTIVE CONTROL
ENGINEERING AND SUPPLIES**
Phone: +632 871-0273
Fax: +632 781-3964
www.activecontrolengineering.com
sales@activecontrol.com.ph

POLAND

BIBUS Menos Sp. z o.o.
Phone: +48-58-6609570
Fax: +48-58-6617132
www.bibusmenos.pl
info@bibusmenos.pl

PORTUGAL

BIBUS Portugal, Lda
Phone: +351-22-906-50-50
Fax: +351-22-906-50-53
www.bibus.pt
info@bibus.pt

ROMANIA

BIBUS SES srl
Phone: +40-356-446500
Fax: +40-356-446660
www.bibus.ro
office@bibus.ro

RUSSIA

BIBUS o.o.o.
Phone: +7-812-3094151
+7-499-7030442
Fax: +7-812-3094151
+7-499-7030442
www.bibus.ru
info@bibus.ru

SINGAPORE

Elshin International Pte Ltd
Phone: +65-6286 7707
Fax: +65-6747 2477
www.elshin.com
elshin@singnet.com.sg

SLOVAKIA

BIBUS SK, s.r.o.
Phone: +421-37-7777-957
Fax: +421-37-7777-969
www.bibus.sk
sale@bibus.sk

SLOVENIA

INOTEH d.o.o.
Phone: +386-2-6730134
Fax: +386-2-6652081
www.inoteh.si
info@inoteh.si

SOUTH AFRICA

Remag (Pty) Ltd.
Phone: +27-11-3155672
Fax: +27-11-3155570/1
www.remag.co.za
sales@remag.co.za

SPAIN

BIBUS Spain, S.L.
Phone: +34-986 24 72 86
Fax: +34-986 20 92 47
www.bibus.es
info@bibus.es

SWEDEN

OEM Automatic AB
Phone: +46-75-2424100
Fax: +46-75-2424210
www.oemautomatic.se
info@aut.oem.se

SWITZERLAND

LIECHTENSTEIN

BIBUS AG
Phone: +41-44 877 50 11
Fax: +41-44 877 58 51
www.bibus.ch
info@bibus.ch

TAIWAN

Daybreak Int'l (Taiwan) Corp.
Phone: +886-2-88661234
Fax: +886-2-88661239
www.daybreak.com.tw
day111@ms23.hinet.net

THAILAND

CNS Engineering Service Co., Limited
Phone: +662-157 2407-8
Fax: +662-583 5449
www.cns-universal.co.th
wichai@cns-universal.co.th

TURKEY

**Mert Teknik Fabrika
Malzemeleri Tic. ve San. A.Ş.**
Phone: +90-216 526 43 40
Fax: +90-216 526 43 45
www.mert.com
info@mert.com

UK

IRELAND
OEM Automatic Ltd
Phone: +44-800-7313187
+44-116-2849900
Fax: +44-116-2841721
www.oem.co.uk
information@uk.oem.se

UKRAINE

BIBUS Ukraine TOV
Phone: +380-44-5454404
Fax: +380-44-5455483
www.bibus.ua
info@bibus.ua

BAHRAIN

UNITED ARAB EMIRATES

KUWAIT

OMAN

QATAR

YEMEN

Synergies Tech
Phone: +971-4-4275069
Fax: +971-4-4324256
www.synergies-group.com
info@synergies-group.com

USA

CANADA

SUCO Technologies Inc.
Phone: +1-561-989-8499
Fax: +1-561-989-8816
www.suco-tech.com
info@suco-tech.com

VIETNAM

BIBUS VIETNAM E&C Co. Ltd.
Tel: +84 (0) 8 378 534 31
Fax: +84 (0) 4 356 834 29
www.bibus.vn
info@bibus.vn

QUYNH ENGINEERING CORP.

Phone: +84-8-3771 5330
Fax: +84-8-3771 5320
www.quynh.vn
info@quynh.vn

Order correctly - it's quite simple

Explanation of SUCO article numbers

p_{max} in bar	Adjustment range in bar	Tolerance at room temperature in bar	Male thread	Article number
---------------------	----------------------------	---	-------------	----------------

0170 Diaphragm pressure switches with spade terminals

100 ¹⁾	0.3 – 1.5	± 0.2	G 1/4	0170 – 457 03 – X – 003 – YZ
			M 10x1 con.	0170 – 457 01 – X – 001 – YZ
			M 12x1.5 cyl.	0170 – 457 02 – X – 002 – YZ
			NPT 1/8	0170 – 457 04 – X – 318 – YZ
			NPT 1/4	0170 – 457 09 – X – 314 – YZ
			7/16-20 UNF	0170 – 457 20 – X – 301 – YZ
			9/16-18 UNF	0170 – 457 21 – X – 302 – YZ

Article number:

0170 – 457 04 – X – 318 – YZ

The first four digits indicate the type number:

Our example: **Diaphragm pressure switch with spade terminals, type 0170**

By these three digits, the type of construction and the setting range are determined.

Our example: **Overpressure safe up to 100 bar, adjustment range 0.3 – 1.5 bar.**

These two digits provide information about the desired thread.

Our example: **NPT 1/8.**

Important - Code for the seal material:

- 1 = NBR (Buna-N): hydraulic fluid, machine oil, etc.
- 2 = EPDM: water, brake fluid, ozone, acetylene, etc.
- 3 = FKM: hydraulic fluid, petrol/gasoline, etc.
- 4 = ECO (epichlorhydrin): air, oils, fats, fuels (used only in SUCO vacuum switches).
- 5 = EPDM-TW: drinking water (only in diaphragm, $p_{max} \leq 35$ bar).
- 6 = FFKM: acids, diluted alkalis, ketones, esters, alcohols, fuels and hot water.
- 7 = TPE: hydraulic fluid, water, machine oil, heating oil, etc.
- 8 = Silicone: water, food products, air, etc. (only in diaphragm, $p_{max} 35$ bar).
- 9 = HNBR: hydraulic / machine oil, ester-based bio-oils.

The last three digits are reserved for further differentiation of the switch.

Our example: **318**


New - Code for the cleaning process (optional):

- C = Plasma cleaning (e.g. oxygen applications)
- L = LABS-free (PWIS-free)
- X = no cleaning process

New - Diameter of the pressure snubber (optional):

- 5 = Pressure snubber Ø 0.5 mm
- 8 = Pressure snubber Ø 0.8 mm
- S = Sinter filter
- X = no pressure snubber

Abbreviated coding explanation is embossed on the hex surface areas of the pressure switches.

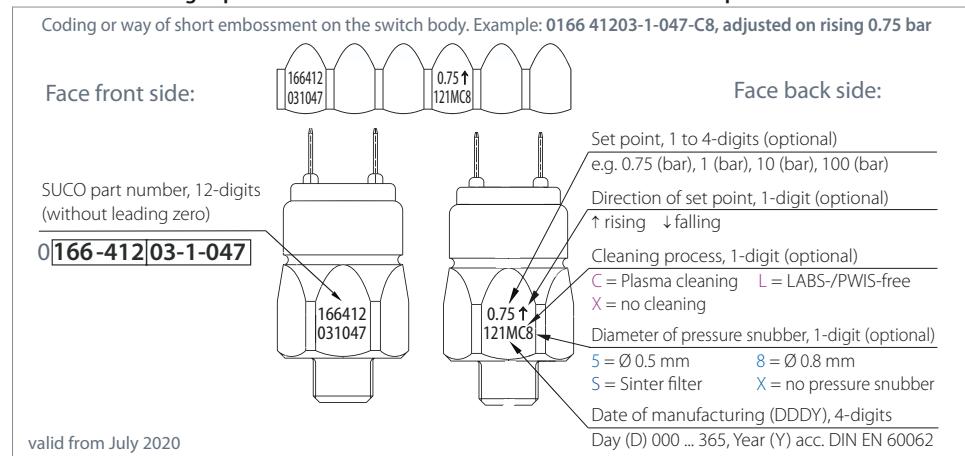

Questionnaire for Mechanical Pressure Switches

This questionnaire should be helpful to show, which information are important to give you a fast and detailed answer to your inquiry. Please fulfil as much points as you can; not all variations are implementable!

Contact data

Company / customer:					
Address:			ZIP Code / City:		
Contact person:				Division:	
Email:			Telephone:	Telefax:	
Business field:	<input type="checkbox"/> manufacture of components	<input type="checkbox"/> service	<input type="checkbox"/> OEM	<input type="checkbox"/> dealer	<input type="checkbox"/> customer:
Project:	<input type="checkbox"/> new	<input type="checkbox"/> redesign	<input type="checkbox"/> replaces competitor:		
Quantity:	<input type="checkbox"/> annual	<input type="checkbox"/> one-time	<input type="checkbox"/>	<input type="checkbox"/> sample till:	
Target price:					

Operating conditions

Function / application:					
Media:					
Media temperature:				Environment temp.:	
Set point:	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI	<input type="checkbox"/> rising	<input type="checkbox"/> falling
Reset point:	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI	<input type="checkbox"/> rising	<input type="checkbox"/> falling
Set points:	<input type="checkbox"/> adjusted at works	<input type="checkbox"/> adjustable from	<input type="text"/>		to: <input type="text"/>
Pressure range	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI		
Pressure frequency:	<input type="checkbox"/> Hz	Life time:		cycles	
Switching frequency:	<input type="checkbox"/> continuous	<input type="checkbox"/> irregularly	<input type="checkbox"/>	cycles per day	<input type="checkbox"/> one-time
Max. working pressure:	Min. working pressure:				
Profile of pressure:	<input type="checkbox"/> static	<input type="checkbox"/> dynamic	Pressure ramp rate: <input type="text"/> bar/ms		
Shock load:	<input type="checkbox"/> g	Vibrations: <input type="text"/> m/s ²			

Electrical data

Working voltage U _b :			Working current I _b :		
Load:	<input type="checkbox"/> resistive		<input type="checkbox"/> inductive	<input type="checkbox"/> capacitive	<input type="checkbox"/> inrush
Utilization category:	<input type="checkbox"/> AC12	<input type="checkbox"/> AC14	<input type="checkbox"/> DC12	<input type="checkbox"/> DC13	
Switching function:	<input type="checkbox"/> SPDT (NO)	<input type="checkbox"/> SPDT (NC)	<input type="checkbox"/> SPDT (changeover)		
Output signal:	<input type="checkbox"/> 0-10 V	<input type="checkbox"/> 4-20 mA	<input type="checkbox"/> 0.5 - 4.5 V ratiometric	<input type="checkbox"/> other: <input type="text"/>	

General data

Media connection			IP protection class:		
Electrical connection:	<input type="checkbox"/> screw terminal	<input type="checkbox"/> spade terminal	<input type="checkbox"/> integrated plug	<input type="checkbox"/> other: <input type="text"/>	
	<input type="checkbox"/> cable + lenght	<input type="checkbox"/> mm	<input type="checkbox"/> incl. socket device (EN 175301-803-A)		
Connector- / cable:			Housing:	<input type="checkbox"/> steel	<input type="checkbox"/> stainless steel <input type="checkbox"/> brass
Remarks:					

Questionnaire for Electronic Pressure Switches

This questionnaire should be helpful to show, which information are important to give you a fast and detailed answer to your inquiry.
Please fulfil as much points as you can; not all variations are implementable!

Contact data

Company / customer:					
Address:		ZIP Code / City:			
Contact person:			Division:		
Email:		Telephone:		Telefax:	
Business field:	<input type="checkbox"/> manufacture of components	<input type="checkbox"/> service	<input type="checkbox"/> OEM	<input type="checkbox"/> dealer	<input type="checkbox"/> customer:
Project:	<input type="checkbox"/> new	<input type="checkbox"/> redesign	<input type="checkbox"/> replaces competitor:		
Quantity:	<input type="checkbox"/> annual	<input type="checkbox"/> one-time	<input type="checkbox"/>	<input type="checkbox"/> sample till:	
Target price:					

Operating conditions

Function / application:					
Media:					
Media temperature:			Environment temp.:		
Pressure range:	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI		
Pressure frequency:	Hz	Life time:		cycles	
Switching frequency:	<input type="checkbox"/> continuous	<input type="checkbox"/> irregularly	<input type="checkbox"/>	cycles per day	<input type="checkbox"/> one-time
Max. working pressure:	Min. working pressure:				
Profile of pressure:	<input type="checkbox"/> static	<input type="checkbox"/> dynamic	Pressure ramp rate: bar/ms		
Shock load:	g	Vibrations:			m/s ²
Hysteresis	bar / % FS	Switching Function:			<input type="checkbox"/> NO <input type="checkbox"/> NC

Electrical data

Working voltage U _b :			Working current I _b :		
Output(s):	<input type="checkbox"/> 4-20 mA	<input type="checkbox"/> 1 switching output	<input type="checkbox"/> 2 switching outputs	<input type="checkbox"/> other:	
Switch. output current:	A	Output Function:		<input type="checkbox"/> PNP	<input type="checkbox"/> NPN

General data

IP protection class:	<input type="checkbox"/> IP65	<input type="checkbox"/> IP67	<input type="checkbox"/> IP6K9K	<input type="checkbox"/> other:	
Media connection (thread):	<input type="checkbox"/> G 1/4 -E male	<input type="checkbox"/> NPT 1/4	<input type="checkbox"/> M 10x1 cyl.	<input type="checkbox"/> 7/16-20 UNF	<input type="checkbox"/> other:
	<input type="checkbox"/> G 1/4 -E female	<input type="checkbox"/> NPT 1/8	<input type="checkbox"/> M 14x1.5 -E	<input type="checkbox"/> 9/16-18 UNF	
	<input type="checkbox"/> G 1/4 -A				
Electrical connection:	<input type="checkbox"/> M 12x1 EN 61076-2-101-A		<input type="checkbox"/> DEUTSCH DT04-3P		<input type="checkbox"/> AMP Superseal 1.5
	<input type="checkbox"/> EN 175301-803-A socket device		<input type="checkbox"/> DEUTSCH DT04-4P		<input type="checkbox"/> DIN 72585 (Bayonet)
	<input type="checkbox"/> Cable socket with PG 7 cable gland		<input type="checkbox"/> Electronic display		<input type="checkbox"/> other:
	<input type="checkbox"/> Cable connection 2 m				
Seal material:	<input type="checkbox"/> NBR	<input type="checkbox"/> EPDM	<input type="checkbox"/> FKM	<input type="checkbox"/> TPE	
Remarks:					

Questionnaire for Pressure Transmitters

This questionnaire should be helpful to show, which information are important to give you a fast and detailed answer to your inquiry. Please fulfil as much points as you can; not all variations are implementable!

Contact data

Company / customer:					
Address:		ZIP Code / City:			
Contact person:			Division:		
Email:		Telephone:		Telefax:	
Business field:	<input type="checkbox"/> manufacture of components	<input type="checkbox"/> service	<input type="checkbox"/> OEM	<input type="checkbox"/> dealer	<input type="checkbox"/> customer:
Project:		<input type="checkbox"/> new	<input type="checkbox"/> redesign	<input type="checkbox"/> replaces competitor:	
Quantity:		<input type="checkbox"/> annual	<input type="checkbox"/> one-time	<input type="checkbox"/>	sample till:
Target price:					

Operating conditions

Function / application:					
Media:					
Media temperature:		Environment temp.:			
Set point:	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI	<input type="checkbox"/> rising	<input type="checkbox"/> falling
Reset point:	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI	<input type="checkbox"/> rising	<input type="checkbox"/> falling
Set points:	<input type="checkbox"/> adjusted at works	<input type="checkbox"/> adjustable from			to:
Pressure range	<input type="checkbox"/> mbar	<input type="checkbox"/> bar	<input type="checkbox"/> PSI		
Pressure frequency:	Hz	Life time:	cycles		
Switching frequency:	<input type="checkbox"/> continuous	<input type="checkbox"/> irregularly	<input type="checkbox"/>	cycles per day	<input type="checkbox"/> one-time
Max. working pressure:	Min. working pressure:				
Profile of pressure:	<input type="checkbox"/> static	<input type="checkbox"/> dynamic	Pressure ramp rate:: bar/ms		
Shock load:	g	Vibrations:	m/s ²		


Electrical data

Working voltage U _b :			Working current I _b :		
Output signal:	<input type="checkbox"/> 4 - 20 mA (U _b 10-32 VDC)	<input type="checkbox"/> 0 - 10 V (U _b 12-32 VDC)	<input type="checkbox"/> 0.5 - 4.5 V ratiometric (U _b 5 VDC +/- 10%, max. 6.5 V)	<input type="checkbox"/> other:	

General data

IP protection class:	<input type="checkbox"/> IP65	<input type="checkbox"/> IP67	<input type="checkbox"/> IP6K9K	<input type="checkbox"/> other:	
Media connection (thread):	<input type="checkbox"/> G 1/4 –E	<input type="checkbox"/> G 1/4 –A	<input type="checkbox"/> NPT 1/8	<input type="checkbox"/> NPT 1/4	
	<input type="checkbox"/> M 10x1 cyl.	<input type="checkbox"/> 7/16-20 UNF	<input type="checkbox"/> 9/16-18 UNF	<input type="checkbox"/> M 14x1.5 – E	
Electrical connection:	<input type="checkbox"/> M12x1	<input type="checkbox"/> DIN 175301-803 -A	<input type="checkbox"/> DIN 72585 (Bayonet)	<input type="checkbox"/> AMP Superseal 1.5	
	<input type="checkbox"/> DEUTSCH DT0-4P	<input type="checkbox"/> DEUTSCH DT04-3P	<input type="checkbox"/> Cable Connection 2m	<input type="checkbox"/> other:	
Accessories:	<input type="checkbox"/> Display STD, model		<input type="checkbox"/> M12x1 connector / cable, model:		
Remarks:					

Pressure Monitoring Systems and Transmission Technology

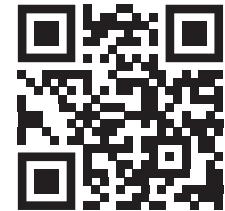

Our complete product range and sales network
can be found online or in our catalogs.

Contact us or go online now.



SUCO ESI North America

6560 W. Rogers Circle #22
Boca Raton, FL 33487,
USA

Phone: 561-989-8499
Fax: 561-989-8816
E-Mail: sales@sucoesi.com

www.sucoesi.com