

# esi

## HISPEC® HI2000

High Precision Pressure Transmitter

- Silicon-on-Sapphire sensor technology for outstanding performance
- Pressure ranges to 1500 bar
- High accuracy performance
- Titanium wetted parts for excellent chemical compatibility
- High thermal stability over wide operating temperature
- ATEX/IECEx option available (includes M1 for mining applications)



The advanced sensor design consists of a piezoresistive silicon strain gauge circuit, which is epitaxially grown onto the surface of a sapphire diaphragm to form a single crystalline structure. The sapphire sensor element is then molecularly bonded to a titanium alloy sub-diaphragm.

This enables the sensor to endure higher over-pressures and provides superb corrosion resistance. The sensor exhibits virtually no hysteresis and excellent long-term stability

## Specifications


The HISPEC HI2000 series of high precision pressure transmitters with state-of-the-art SOS sensor technology offers an operating range up to 1500 bar at an accuracy rate of  $< \pm 0.1\%$  of span - a level that was previously unobtainable or prohibitively expensive. ATEX and IECEx approval and protection by intrinsic safety is optional and intended for installation and operation in zone 0, gas group IIC, temperature class T4 and zone 20 dust and M1 mining.

**Typical applications include:**

- Laboratory and Test
- Aerospace
- Oil and Gas monitoring (downhole)



## Dimensions (in mm)

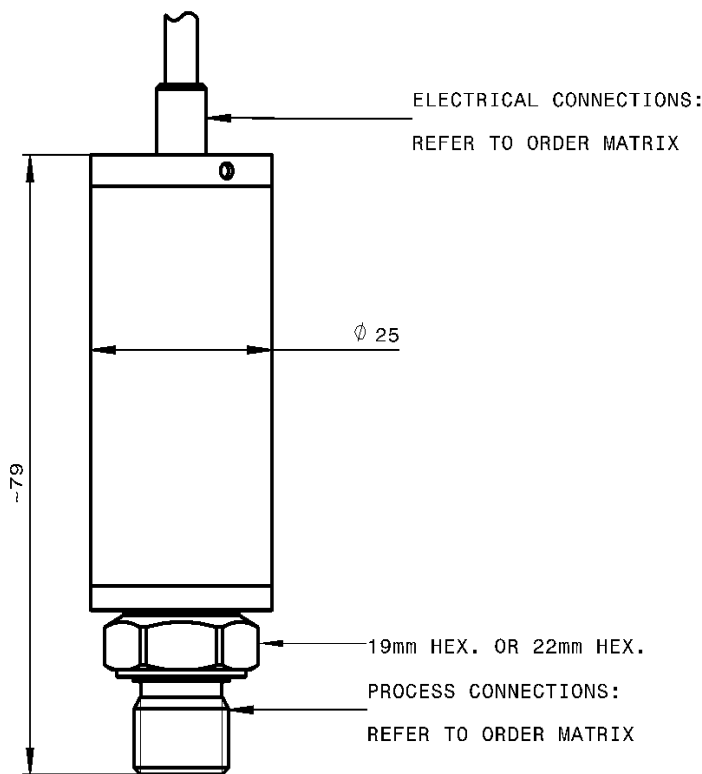

Hex Size	Range/Thread
19mm	10 bar and above
22mm	Below 10 bar

## Electrical Connections

Cable Outlet	
Wire Colour	Designation
Red	+supply
Green	+output
Yellow	-output
Blue	-supply

MIL-C-26482 Outlet	
Pin	Designation
A	+supply
B	+output
C	-output
D	-supply
E	N/C
F	N/C

Technical Data

Type	HI2000/HI2010	HI2xx1/HI2xx4	HI2xx2/HI2xx5
Sensor Technology:	Silicon-on-Sapphire (SOS)		
Output Signal:	10 mV/V Typical (4 wire)	0-5 V (4 or 3 wire)	0-10 V (4 or 3 wire)
Supply Voltage:	10 VDC (5-15V)	13-30 VDC	13-30 VDC
Pressure Reference:	Gauge		
Protection of Supply Voltage:	n/a	Protected against supply voltage reversal up to 50 V (amplified versions)	
Standard Pressure Ranges (bar):	0-1 bar; 0-1 bar Vac ( <b>Except for HI2000 &amp; HI2010</b> ); 0-2.5 bar; 0-10 bar; 0-25 bar; 0-100 bar; 0-250 bar; 0-400 bar; 0-600 bar; 0-1000 bar; 0-1500 bar (other ranges available)		
Standard Pressure Ranges (psi):	0-30 in Hg ( <b>Except for HI2000 &amp; HI2010</b> ); 0-15 psi; 0-150 psi; 0-300 psi; 0-1500 psi; 0-3000 psi; 0-6000 psi; 0-10000 psi; 0-15000 psi; 0-20000psi (other ranges available)		
Overpressure Safety:	4x 0.5 bar range; 2x for ranges 1 bar to 600 bar; 1.5 for 1000 bar; 1.1x for 1500 bar range		
Load Driving Capacity:	<b>10 mV/V:</b> n/a; <b>0-5 V:</b> max. load RL > 5 KΩ; <b>0-10 V:</b> max. load RL > 10 KΩ		
Accuracy NLHR:	±0.1 % of span BFSL		
Zero Offset and Span Tolerance:	±0.5 %FS at room temperature (HI2000/HI2010: ±1 mV)		
Operating Temperatures:	<b>Ambient:</b> -40 °C to +85 °C (-40 °F to +185 °F) <b>Media:</b> -50 °C to +125 °C (-58 °F to +257 °F)		
Storage Temperature:	+5 °C to +40 °C (+41 °F to +104°F) Recommended Best Practice		
Temperature Effects:	±1.0 %FS total error band for -20 °C to +70 °C. Typical thermal zero and span coefficients ±0.005 %FS/ °C		
ATEX/IECEX Approval Option (10 mV/V version only):	Ex II 1 G Ex ia IIC T4 Ga (zone 0) Ex II 1 D Ex ia IIIC T135 °C Da (zone 20) Ex I M 1 Ex ia I Ma (group 1 M1)	n/a	n/a
ATEX/IECEX Safety Values:	Ui = 28 V Ii = 119 mA Pi = 0.65 W Li = 0.1 μH Ci = 0 Temperature Range = -20 °C to +70 °C Max. cable length = 50 m	n/a	n/a
Electromagnetic Compatibility:	Emissions: EN61000-6-4; Immunity: EN61000-6-2; Certification: UKCA and CE Marked		
Insulation Resistance:	> 100 MΩ @ 50 VDC		
Response Time 10-90%:	1 mS		
Wetted Parts:	Titanium alloy		
Pressure Media:	All fluids compatible with Titanium alloy		
Pressure Connection:	1/4" BSP male (G1/4) or 1/4" NPT male (others options available)		
Electrical Connection:	HI200x: PTFE insulated flying lead, conductor size 7/0.1 mm. HI201x: MIL-C-26482 6 pin bayonet connector (Accessory not included: mating connector type MS3116F10-6S)		
Net Weight:	0.2 Kg		

## Order Matrix

Output	Electrical Connection	Wires	Type	Options	Pressure Range	Process Connection	Other Options				
10 mV/V	Cable outlet 1m PTFE	4	HI2000								
	MIL-C-26482 6 pin bayonet	4	HI2010								
0-5 V	Cable outlet 1m PTFE	4	HI2001								
		3	HI2004								
	MIL-C-26482 6 pin bayonet	4	HI2011								
		3	HI2014								
0-10 V	Cable outlet 1m PTFE	4	HI2002								
		3	HI2005								
	MIL-C-26482 6 pin bayonet	4	HI2012								
		3	HI2015								
<b>Options</b>											
No special options required								-			
ATEX/IECEX certified (HI2000 & HI2010 only)								EX			
<b>Pressure Range</b>											
0-1 bar (Amplified output only)									0001		
0-1 bar Vac (Amplified output only)					V001						
0-2.5 bar					02.5						
0-10 bar					0010						
0-25 bar					0025						
0-100 bar					0100						
0-250 bar					0250						
0-400 bar					0400						
0-600 bar					0600						
0-1000 bar					1000						
0-1500 bar					1500						
<b>Process Connection</b>											
1/4" BSP male (G1/4)						AB					
1/4" NPT male						AM					
<b>Other Options</b>											
ATEX/IECEX Certification with M12 connector							-M12				

### Order Number Example

HI2000EX0020AB

For options not listed please contact the sales team

**DISCLAIMER :** ESI Technology Ltd operates a policy of continuous product development. We reserve the right to change specification without prior notice. All products manufactured by ESI Technology Ltd are calibrated using precision calibration equipment, traceable to national measurement standards.